

LIFTING CAPACITIES

DOC No: 21061202 **EQUIPMENT: 60'2 PC DEMO**

ISS: 1 - 17/07/15

WARNING: DO NOT OPERATE MACHINE OVER SIDE. OPERATE OVER FRONT ONLY WITH DRIVES TO THE REAR OF THE MACHINE.

MACHINE: KO BELCO SK350-9

LIFT CAPACITIES CALCULATED AT ATTACHMENT PIVOT POINT ON STICK (lbs) NO ATTACHMENT ON STICK, ATTACHMENT WEIGHT MUST BE SUBTRACTED.

| REACH | | | | | | | | |
|--------|--------|--------|--------|------|------|------|------|--------|
| MAX | 35ft | 30ft | 25ft | 20ft | 15ft | 10ft | | |
| | | 7871* | | | | | MAX | |
| 7255* | | | | | | | 55ft |] |
| 8288* | 10178* | | | | | | 50ft | |
| 9786* | 10604* | | | | | | 45ft | |
| 9653* | 10578* | | | | | | 40ft | |
| 9806* | 10712* | | | | | | 35ft |] ⊨ |
| 10292* | 10987* | | | | | | 30ft | HEIGHT |
| 11301* | | 12861* | | | | | 25ft |] 풀 |
| 13483* | | | 15973* | | | | 20ft | |
| 25096* | | | | | | | 15ft | |
| 8486* | | | | | | | 10ft | |
| 5273* | | | | | | | 5ft | |
| 4885* | | | | | | | Oft | |

THE FOLLOWING NOTES PERTAIN TO THIS MACHINE EQUIPPED WITH 7.920# ADDITIONAL COUNTERWEIGHT.

- 1. DO NOT ATTEMPT TO LIFT OR HOLD ANY LOAD THAT EXCEEDS THESE RATED VALUES.
- 2. WHEN WORKING, THE BOOM MUST BE IN THE FULLY UPRIGHT POSITION. MAXIMUM FORWARD TILT OF THE BOOM IS 11°.
- 3. MACHINE MUST NEVER BE OPERATED OVER THE SIDE.
- 4. THE OPERATOR SHOULD BE FULLY ACQUAINTED WITH MACHINE OPERATION BEFORE OPERATING THE MACHINE.
- 5. LIFTING CAPACITIES ASSUME MACHINE STANDING ON LEVEL. FIRM AND UNIFORM SUPPORTING SURFACE. OPERATOR MUST MAKE ALLOWANCE FOR JOB CONDITIONS SUCH AS SOFT UNEVEN GROUND, OUT OF LEVEL CONDITIONS, SIDE LOADS, SUDDEN STOPPING OF LOADS, HAZARDOUS CONDITIONS, INEXPERIENCED PERSONNEL, AND ECT.
- 6. THE ABOVE THEORETICAL RATINGS ARE BASED ON CALCULATIONS DERIVED FROM STANDARD O.E.M LIFT CHARTS BASED ON SAE STANDARD No J1097. THEY DO NOT EXCEED 87% HYDRAULIC LIFTING CAPACITY OR 75% OF TIPPING
- CAPACITY. RATED LOADS MARKED WITH A (*) ARE LIMITED HYDRAULICALLY.
- 7. WHEN TRAVELING THE MACHINE IN EITHER FORWARD OR REVERSE DIRECTIONS TO THE JOB SITE (MORE THEN 20ft), WITH THE BOOM STRAIGHT OVER THE FRONT OR REAR OF THE MACHINE, THE BOOM SHOULD BE POSITIONED SUCH THAT THE TIP OF THE TOOL IS APPROX 5ft ABOVE THE GROUND, WITH OUTER ARM AND TOOL

PERPENDICULAR TO THE GROUND. TRAVEL CONTROL SHOULD BE SET TO LOW SPEED AND ENGINE RPM AT MID RANGE, AT THE JOB SITE, WITH THE BOOM IN WORKING POSITION (DRIVE SPROCKETS TO THE REAR, BOOM OVER THE FRONT) THE MACHINE MAY BE MOVED UP TO 20ft FORWARD OR REVERSE, TRAVEL AT LOW SPEED SETTING, ENGINE RPM IN MID RANGE, IN ORDER TO MOVE INTO THE WORKING POSITION, PROVIDED THE GROUND IS FIRM

- 8. WHEN SWINGING THE MACHINE 360°, THE BOOM SHOULD BE IN THE FULLY UPRIGHT POSITION, WITH THE OUTER ARM AND TOOL PERPENDICULAR TO THE GROUND.
- 9 WHEN SHUTTING DOWN THE MACHINE FOR A PEROID OF TIME, THE BOOM SHOULD BE LOWERED TO REST THE OUTER ARM ON THE GROUND, WITH THE OUTER ARM AND TOOL POSITIONED PARALLEL TO THE GROUND. 10. DO NOT BOOM DOWN WITH TOOL ON THE GROUND AND FRONT FULLY RETRACTED, DOING SO MAY CAUSE DAMAGE TO THE MACHINE.

LIFTING CAPACITIES - SUB 7FRO

EQUIPMENT: 60' 2 PC DEMO DOC No. 21061202

ISS: 2 - 21/10/15

WARNING · DO NOT OPERATE MACHINE OVER SIDE. OPERATE OVER FRONT ONLY WITH DRIVES TO THE REAR OF THE MACHINE

MACHINE: KOBELCO SK350-9

LIFT CAPACITIES CALCULATED AT ATTACHMENT PIVOT POINT ON STICK (lbs) NO ATTACHMENT ON STICK, ATTACHMENT WEIGHT MUST BE SUBTRACTED.

| MAX | 50ft | 40ft | 30ft | 20ft | 10ft | | |
|-------|-------|--------|--------|--------|--------|-------|-------|
| 6521* | 8589* | 11318* | 15748* | 24577* | | 0ft | |
| 6022* | 7937* | 10807* | 15007* | 21992* | 18119* | -10ft | 뭂 |
| 5205* | 6217* | 9174* | 12636* | 17166* | 3622* | -20ft | HEIGI |
| 5783* | 5783* | 8335* | 10159* | | | -30ft | |

THE FOLLOWING NOTES PERTAIN TO THIS MACHINE EQUIPPED WITH 7.920# ADDITIONAL COUNTERWEIGHT.

- 1. DO NOT ATTEMPT TO LIFT OR HOLD ANY LOAD THAT EXCEEDS THESE RATED VALUES.
- 2. WHEN WORKING. THE BOOM MUST BE IN THE FULLY UPRIGHT POSITION. MAXIMUM FORWARD TILT OF THE BOOM IS 11°.
- 3. MACHINE MUST NEVER BE OPERATED OVER THE SIDE.
- 4. THE OPERATOR SHOULD BE FULLY ACQUAINTED WITH MACHINE OPERATION BEFORE OPERATING THE MACHINE.
- 5. LIFTING CAPACITIES ASSUME MACHINE STANDING ON LEVEL. FIRM AND UNIFORM SUPPORTING SURFACE. OPERATOR MUST MAKE ALLOWANCE FOR JOB CONDITIONS SUCH AS SOFT UNEVEN GROUND, OUT OF LEVEL

CONDITIONS, SIDE LOADS, SUDDEN STOPPING OF LOADS, HAZARDOUS CONDITIONS, INEXPERIENCED PERSONNEL, AND ECT.

- 6. THE ABOVE THEORETICAL RATINGS ARE BASED ON CALCULATIONS DERIVED FROM STANDARD O.E.M LIFT CHARTS
- BASED ON SAE STANDARD NO J1097, THEY DO NOT EXCEED 87% HYDRAULIC LIFTING CAPACITY OR 75% OF TIPPING CAPACITY. RATED LOADS MARKED WITH A (*) ARE LIMITED HYDRAULICALLY. 7. WHEN TRAVELING THE MACHINE IN EITHER FORWARD OR REVERSE DIRECTIONS TO THE JOB SITE (MORE THEN
- 20ft), WITH THE BOOM STRAIGHT OVER THE FRONT OR REAR OF THE MACHINE, THE BOOM SHOULD BE POSITIONED SUCH THAT THE TIP OF THE TOOL IS APPROX 5ft ABOVE THE GROUND, WITH OUTER ARM AND TOOL PERPENDICULAR TO THE GROUND. TRAVEL CONTROL SHOULD BE SET TO LOW SPEED AND ENGINE RPM AT MID RANGE, AT THE JOB SITE, WITH THE BOOM IN WORKING POSITION (DRIVE SPROCKETS TO THE REAR, BOOM OVER THE FRONT) THE MACHINE MAY BE MOVED UP TO 20ft FORWARD OR REVERSE, TRAVEL AT LOW SPEED SETTING, ENGINE RPM IN MID RANGE, IN ORDER TO MOVE INTO THE WORKING POSITION, PROVIDED THE GROUND IS FIRM
- 8. WHEN SWINGING THE MACHINE 360°, THE BOOM SHOULD BE IN THE FULLY UPRIGHT POSITION, WITH THE OUTER ARM AND TOOL PERPENDICULAR TO THE GROUND.
- 9 WHEN SHUTTING DOWN THE MACHINE FOR A PEROID OF TIME, THE BOOM SHOULD BE LOWERED TO REST THE OUTER ARM ON THE GROUND, WITH THE OUTER ARM AND TOOL POSITIONED PARALLEL TO THE GROUND.
- 10. DO NOT BOOM DOWN WITH TOOL ON THE GROUND AND FRONT FULLY RETRACTED. DOING SO MAY CAUSE DAMAGE TO THE MACHINE.