

LABOUNTY®

www.stanleyinfrastructure.com/brands/labounty



MRX

MULTI-JAW DEMOLITION TOOL

PARTS MANUAL

519016 Parts Manual 9/2020 Ver. 7

PREFACE

This manual contains information for the safe operation and maintenance of the LaBounty MRX Processor. Read the entire manual before the initial start-up of the attachment. It is important to know the correct operating procedures of the attachment and all safety precautions to prevent the possibility of property damage and personal injury.

The LaBounty attachment has been designed and manufactured with high quality materials and care in workmanship. The instructions in this manual have been prepared to ensure that, when followed properly, the attachment will provide efficient and reliable service. Continuing product development and improvement may have caused changes in the attachment that are not reflected in this manual. If a question arises regarding the operation or maintenance of the attachment, contact a LaBounty dealer for the most current information available.

IMPORTANT

This operator's manual must accompany the attachment at all times and be readily available to the operator.

MANUAL REPLACEMENT

Should this manual become damaged, lost or additional copies are required, immediately contact any authorized LaBounty dealer. You may also download a PDF copy at www.stanleyinfrastructure.com.

REGISTRATION FORM

The Warranty Registration Form must be filled out by the dealer or customer and returned to LaBounty indicating the date the machine went into service.

POSSIBLE VARIATIONS

LaBounty cannot anticipate every possible circumstance that might involve a potential hazard, as the owner's requirements and equipment may vary. Therefore, the warnings in this publication and on the product may not be all-inclusive and you must ensure that the procedure, application, work method and operating technique is safe for you, and others, before operation.

PUBLIC NOTICE

LaBounty reserves the right to make changes and improvements to it's products and technical literature at any time, without public notice or obligation. LaBounty also reserves the right to discontinue manufacturing any product at it's discretion, at any time.

WARRANTY

All work or repairs to be considered for warranty reimbursement must be authorized by the LaBounty Service Department before work is started. Any alterations, modifications or repairs performed before authorization by the LaBounty Service Department will render all warranty reimbursement consideration null and void without exception. Improper operation or improperly performed maintenance may render any warranty null and void.


CONTENTS

SAFETY	6
MRX70	8
Body	8
Rotation	10
Cracker Jaw	12
Pulverizer Jaw	14
Shear Jaw	16
MRX100	18
Body	18
Rotation	20
Cracker Jaw	22
Pulverizer Jaw	24
Shear Jaw	26
MRX130	28
Body	28
Rotation	30
Cracker Jaw	32
Pulverizer Jaw	34
Shear Jaw	36
MRX150	38
Body	38
Rotation	40
Cracker Jaw	42
Pulverizer Jaw	44
Shear Jaw	46
MRX200.....	48
Body	48
Rotation	50
Cracker Jaw	52
Pulverizer Jaw	54
Shear Jaw	56
MRX250.....	57
Body	57
Rotation	59
Cracker Jaw	61
Pulverizer Jaw	63
Shear Jaw	65
MRX350.....	66
Body	66
Rotation	68
Cracker Jaw	70
Pulverizer Jaw	72
Shear Jaw	74

CONTENTS

MRX500	75
Body.....	75
Rotation	77
Cracker Jaw	79
Pulverizer Jaw	81
Shear Jaw	83
HYDRAULIC SCHEMATIC.....	84
WEAR PART KITS.....	85

TERMS

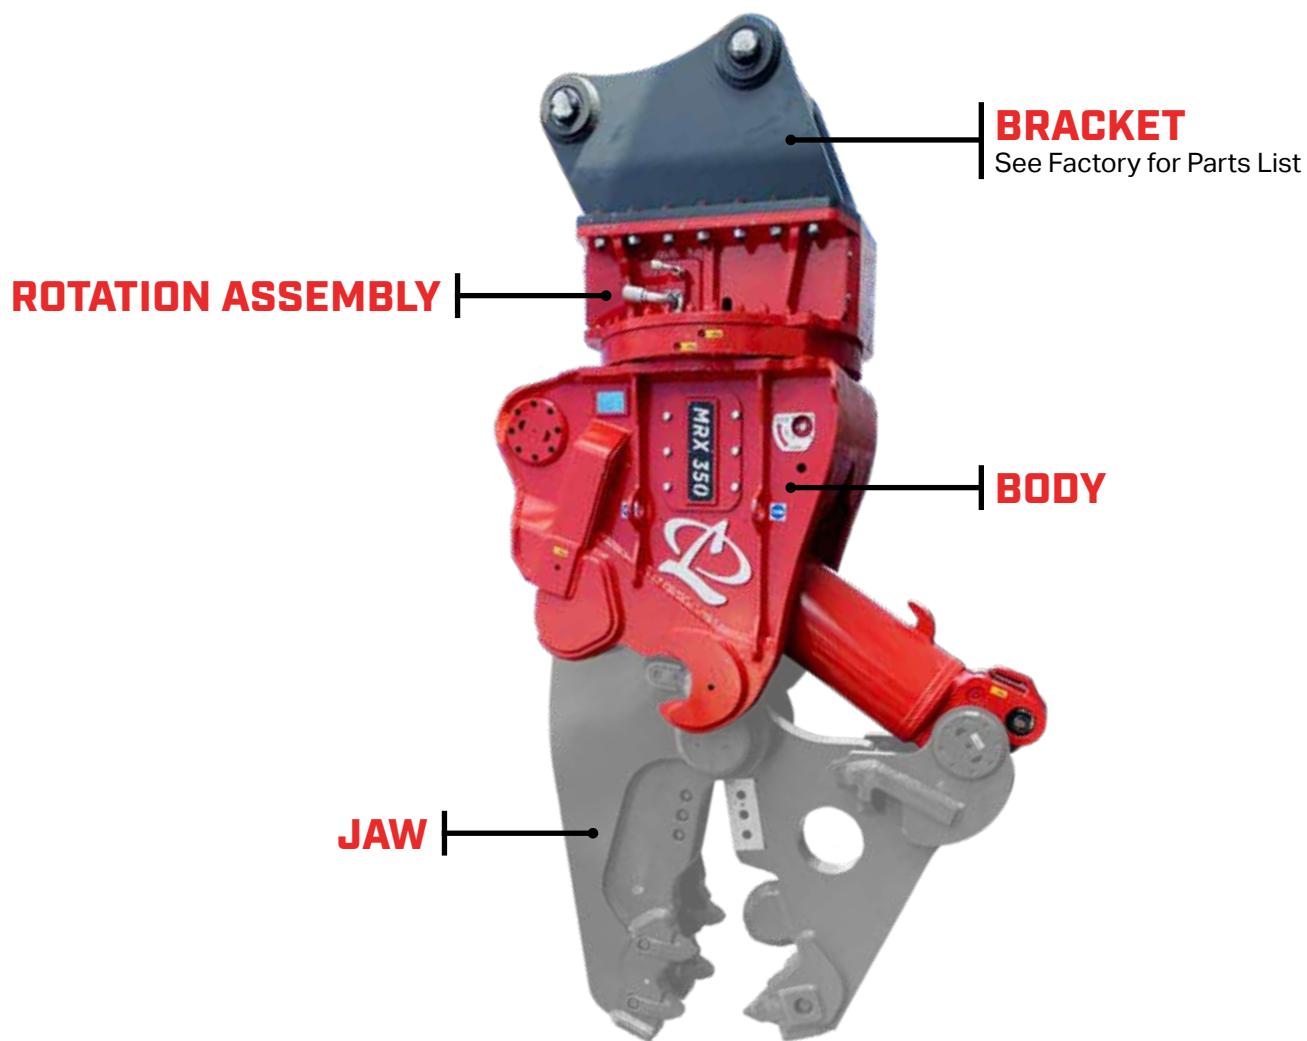

SAFETY

	The Safety Alert Symbol alerts you to potential personal injury hazards. Obey all safety messages that follow to avoid possible injury or death.
 DANGER	Indicates an imminently hazardous situation which will result in death or serious injury.
 WARNING	Indicates a potentially hazardous situation which could result in death or serious injury.
 CAUTION	Indicates hazards that could result in damage to the equipment or personal injury
 NOTICE	Indicates important procedures



Your safety and the safety of others is a direct result of how you operate and maintain your equipment. Read and understand this manual and other safety information provided with the base machine and be sure that you understand all controls and operating instructions before attempting to operate this equipment. Failure to follow the safety precautions can result in personal injury, death or property damage.

Carefully read all safety messages in this manual and on your equipment safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs.

Because LaBounty cannot foresee all hazardous circumstances, the precautions listed in this manual and on the equipment are not all-inclusive. If a procedure, method, tool or part is not specifically recommended by LaBounty, determine whether it is safe for you and others, and that the equipment will not be damaged or made unsafe as a result of your decision to implement it.

The basic rules are summarized in this section of the manual. They also appear throughout the manual along with additional specific rules for safety and operation.

GENERAL

- If the attachment is not functioning properly, shut down the machine, follow proper Lock-out / Tag-out procedures and follow proper repair procedures.
- Remove and replace any damaged or worn parts

with parts recommended by LaBounty. Use of parts that are not factory approved may cause damage or unnecessary downtime and may void the warranty.

- NEVER operate equipment without the original safety guards in place.
- DO NOT process material with the attachment over the operator's cab. Doing so will result in severe personal injury or death from falling debris.
- DO NOT attempt to process brittle materials, such as axles and railroad rail. DO NOT process any material in a position that may propel it toward the operator, other workers, buildings or equipment.
- Clear all persons and equipment from the area of operation and machine movement. NEVER move loads over people or equipment. When viewing the operation of the attachment, maintain a safe distance of at least 75 feet (23 meters).
- NEVER approach power lines with any part of the machine. Keep clear at a minimum of 15 feet (5 meters).
- DO NOT close the attachment on a structure and reverse the excavator in an attempt to pull down material.
- Use of this tool on certain materials could generate dust potentially containing a variety of hazardous substances, such as, asbestos, silica or lead. Inhalation of dust containing these, or other hazardous substances could result in serious injury, cancer or death. Protect yourself and those around you. Research and understand the materials you are processing. Follow safety procedures and comply with all applicable national, state or provisional health

and safety regulations relating to them. If appropriate, arrange for the safe disposal of the materials by a qualified person.

- Disassembly of any pin-connected attachment can be hazardous. NEVER remove any pin unless the attachment is on the ground and blocked up. Serious injury or death could result. Metal chips or debris may fly when a connecting pin is struck. Use a brass drift when striking pins and always wear protective clothing and proper eye protection. Pins may fly when struck with force to drive them in or out. Always keep people clear when removing or installing pins.
- Do not operate this, or any other equipment, under the influence of drugs or alcohol.
- DO NOT modify LaBounty equipment without factory authorization. This equipment is designed to do a specific job and alterations could result in injury.
- ALWAYS lower the boom to the ground before leaving the cab. If it is necessary to work on an attachment off the ground, securely support the machine and attachment. DO NOT support the machine on cinder blocks, hollow tiles or props that may crumble under continuous load. DO NOT rely on a cylinder to hold the attachment in the air. If a control is moved or hydraulic pressure is otherwise released, the attachment may drop. DO NOT work under a machine that is supported only by a jack.
- DO NOT weld on any structural member unless specifically authorized by LaBounty. Unauthorized welding will void the warranty, may cause structural failure and could result in personal injury.
- Keep clear of potential pinch points, including the moving upper jaw, cylinder connections, bucket linkages and other moving parts.
- Before operating the attachment, read and observe all safety instructions in the Operation & Maintenance manual. If you are unfamiliar with any operation or maintenance procedure, seek instruction before proceeding.
- Inspect the attachment daily. Do not operate a poorly maintained or damaged attachment.
- Never operate a machine if an unsafe condition exists. Attach a "Do Not Operate" tag to the machine.

BASE MACHINE

- Ensure that the cab is equipped with the proper safety guards for LaBounty applications. The cab MUST be equipped with an approved Falling Object Protection Structure (FOPS) and cab guarding. The FOPS must meet the requirements of SAE standard J1356. A transparent, shatter-resistant shield covering the front of the cab, is also required. Contact your base machine equipment dealer or manufacturer for more information on the availability of FOPS and cab guarding. Lack of proper FOPS and guards may result in injury or death.

- Avoid tipping. The attachment will alter the lift capacities of the base machine. DO NOT overload the excavator or serious injury could result. Lift capacities will vary if the base machine is not on level ground. Lifting incorrectly can cause severe injury or machine damage. Use the recommended excavator counterweight. Use short slings and lift the load only as high as necessary.
- DO NOT allow riders on the machine. Riders are subject to serious injuries, such as being struck by foreign objects or being thrown off the machine. Riders also distract and obstruct the operator, resulting in the machine being operated in an unsafe manner. NEVER use the attachment as a work platform or personnel carrier.
- Check ground conditions before operating. Avoid unstable or slippery areas and position the base machine on firm, level ground. If level ground is not possible, position the base machine to use the attachment to the front or back of the carrier. Avoid working over the side of the base machine.

HYDRAULIC


- Hydraulic oil becomes hot during operation. DO NOT come in contact with hot hydraulic oil as it could cause severe burns. Wear adequate protective clothing and safety equipment.
- DO NOT tamper with hydraulic lines or components while they are pressurized. Escaping fluid under pressure can penetrate the skin, causing serious injury. Keep hands and body away from pinholes and nozzles which eject fluids under high pressure. Use a piece of cardboard to search for leaks. If ANY fluid is injected into the skin, seek immediate medical assistance.

PPE

- ALWAYS wear close-fitting clothing and safety equipment appropriate to the job. Safety equipment should be worn at all times when viewing, operating or maintaining the attachment. Safety equipment includes eye protection, hard hat, steel toe shoes, gloves, hearing protection and respirator.

MRX70

BODY

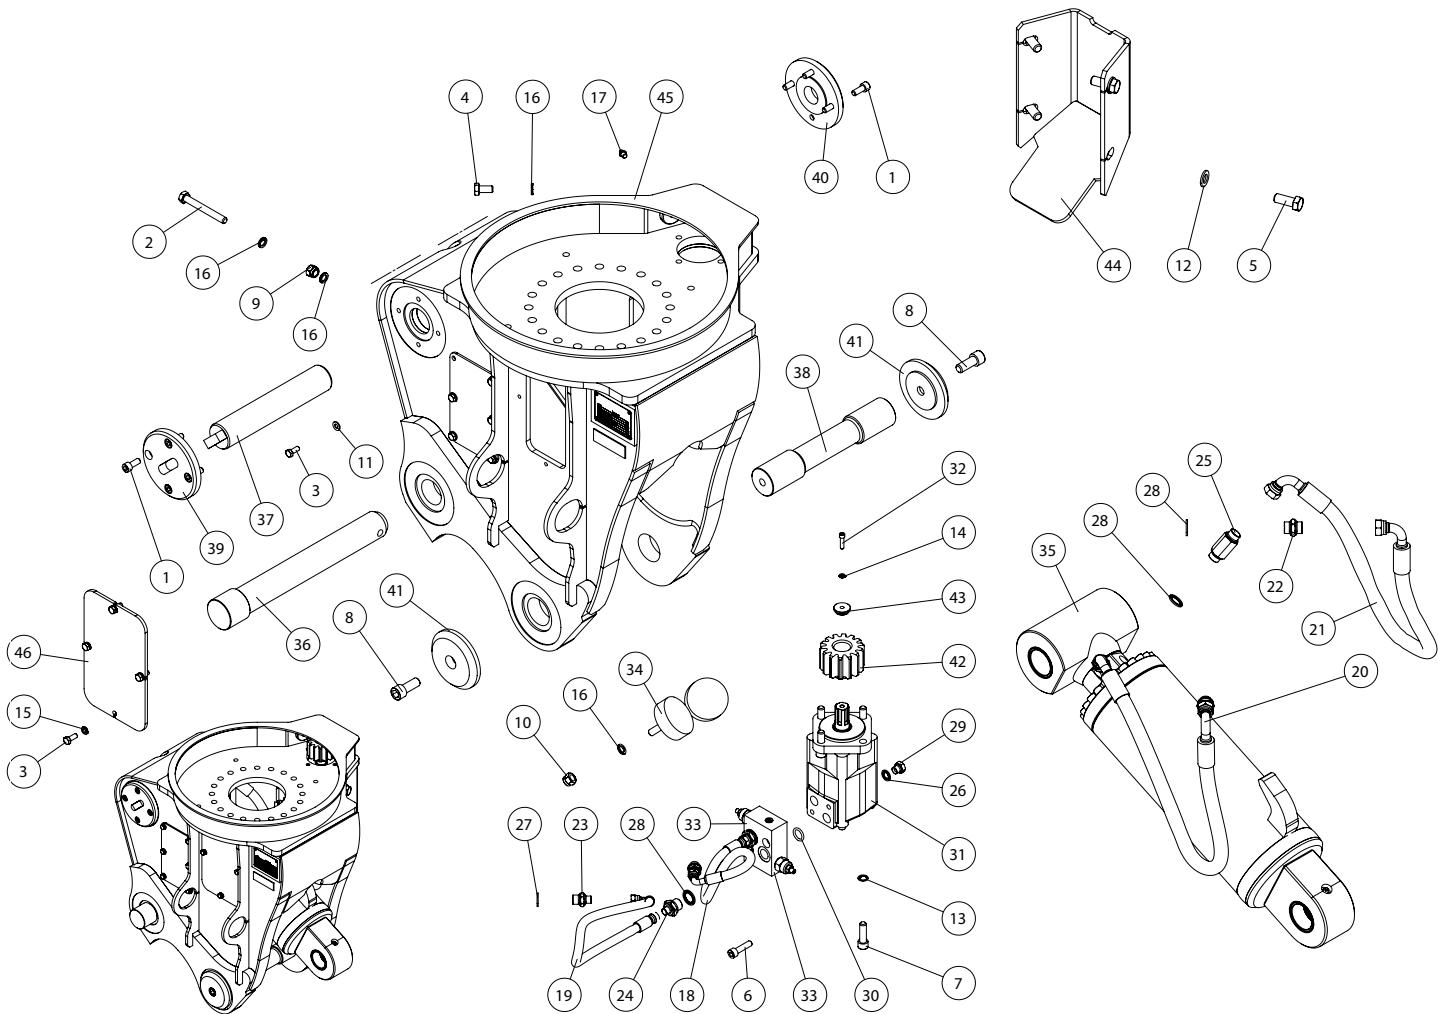


MRX70 Body Parts Illustration

Item	Qty	Description	Part Number
1	8	SOCKET HEAD CAPSCREW	519452
2	1	HEX HEAD CAPSCREW	519453
3	10	SOCKET HEAD CAPSCREW	519231
4	1	HEX HEAD CAPSCREW	518706
5	4	HEX HEAD CAPSCREW	518283
6	2	SOCKET HEAD CAPSCREW	519454
7	4	SOCKET HEAD CAPSCREW	518709
8	2	SOCKET HEAD CAPSCREW	519455
9	1	HEX NUT W/NYLOCK	519456
10	4	HEX NUT W/NYLOCK	518351
11	6	FLAT WASHER	519233
12	4	FLAT WASHER	518304


MRX70 Body Parts Illustration			
Item	Qty	Description	Part Number
13	4	FLAT WASHER	519458
14	1	FLAT WASHER	518352
15	4	FLAT WASHER	519185
16	7	FLAT WASHER	518354
17	1	GREASE ZERK	518203
18	1	HOSE ASSEMBLY	519459
19	1	HOSE ASSEMBLY	519460
20	1	HOSE ASSEMBLY	519461
21	1	HOSE ASSEMBLY	519462
22	2	HYDRAULIC ADAPTOR	518973
23	2	HOSE ADAPTOR	519190
24	2	HOSE ADAPTOR	518746
25	2	HOSE ADAPTOR	519463
26	1	FLAT WASHER	518308
27	2	FLAT WASHER	519191
28	6	FLAT WASHER	518720
29	1	HYDRAULIC ADAPTOR PLUG	518310
30	2	O RING SEAL	519159
31	1	HYDRAULIC MOTOR	519464
32	1	SOCKET HEAD CAPSCREW	519465
33	1	RELIEF VALVE	519443
34	4	DAMPENER	518374
35	1	CYLINDER ASSEMBLY	519433
36	1	PIN MACHINING	519467
37	1	PIN MACHINING	519417
38	1	PIN MACHINING	519468
39	1	PIN RETAINER	519469
40	1	PIN RETAINER	519470
41	2	PIN RETAINER	519471
42	1	PINION GEAR	519442
43	1	FLAT WASHER	519472
44	1	FORMED COVER PLATE	519473
45	1	MRX70 STICK	519474
46	1	COVER PLATE	519476

ROTATION

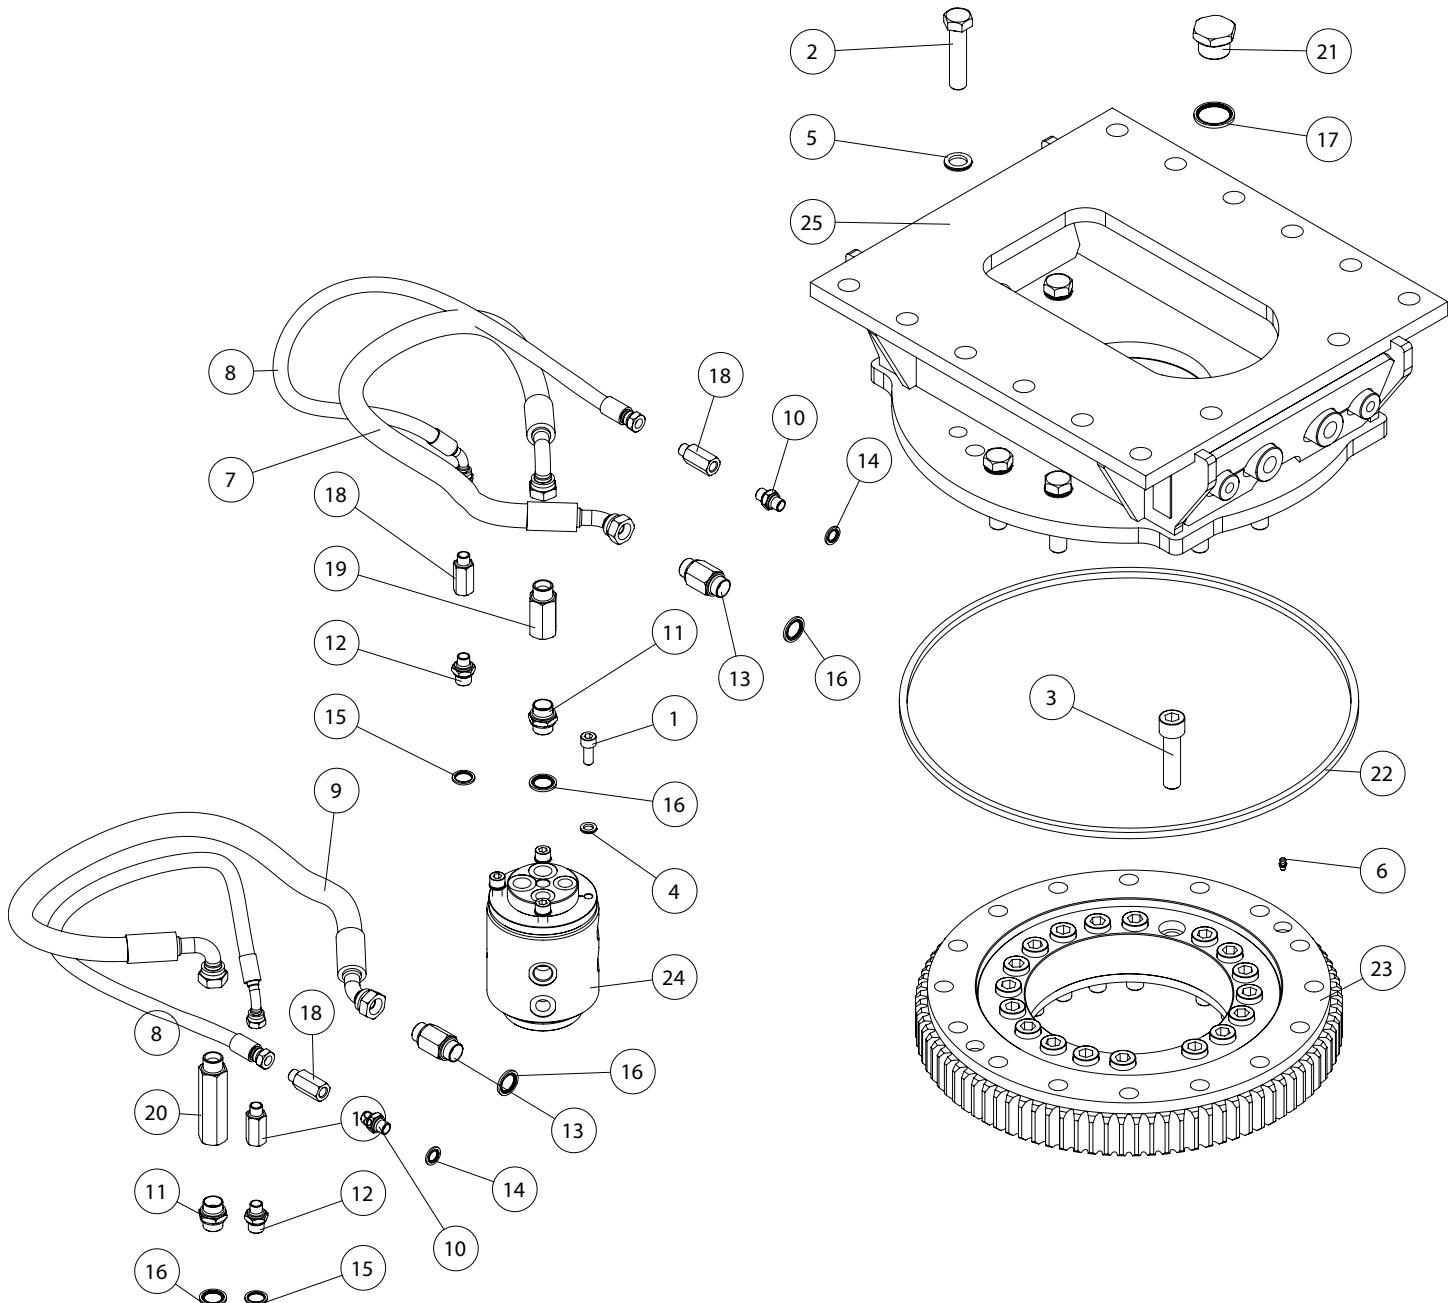


MRX70 Rotation Parts Illustration			
Item	Qty	Description	Part Number
1	4	SOCKET HEAD CAPSCREW	519452
2	12	HEX HEAD CAPSCREW	518642
3	19	SOCKET HEAD CAPSCREW	519447
4	4	FLAT WASHER	518353
5	12	FLAT WASHER	519449
6	2	M6 GREASE ZERK	519478
7	1	HOSE ASSEMBLY	519479
8	2	HOSE ASSEMBLY	519480
9	1	HOSE ASSEMBLY	519481
10	2	HOSE ADAPTOR	518368
11	2	HYDRAULIC ADAPTOR	518973
12	2	HOSE ADAPTOR	519190
13	2	HOSE ADAPTOR	519482
14	2	FLAT WASHER	518308
15	2	FLAT WASHER	519191
16	4	FLAT WASHER	518720
17	2	FLAT WASHER	518975
18	4	HOSE ADAPTOR	519483
19	1	HOSE ADAPTOR	519485
20	1	HOSE ADAPTOR	519486
21	2	HYDRAULIC ADAPTOR PLUG	519487
22	1	ORING SEAL	519450
23	1	TURNTABLE BEARING	519446
24	1	SWIVEL JOINT	519444
25	1	UPPERHEAD WELDMENT MACHINING	519488

CRACKER JAW

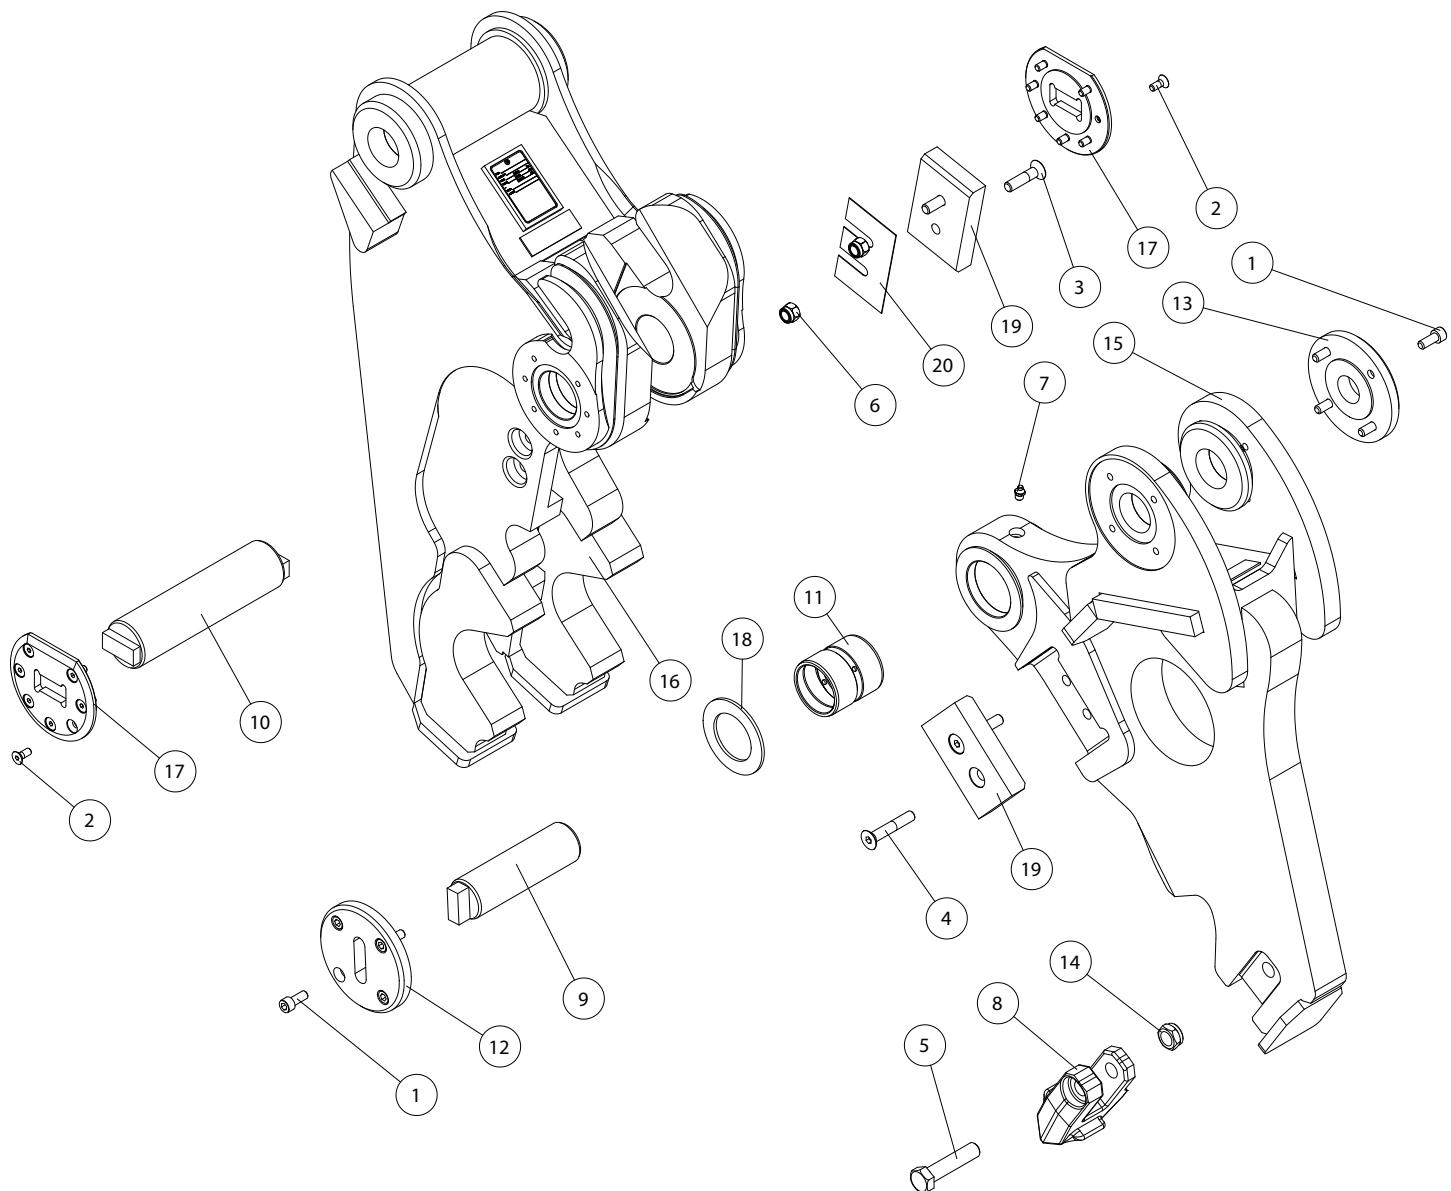


MRX70 Cracker Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	8	SOCKET HEAD CAPSCREW	519452
2	14	SOCKET HEAD CAPSCREW	519498
3	2	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
4	2	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
5	1	HEX HEAD CAPSCREW	518169
6	4	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85
7	1	GREASE ZERK	518203
8	1	CUTTING EDGE	518169
9	1	PIN MACHINING	519418
10	1	PIN MACHINING	519419
11	1	BEARING MACHINING	519423
12	1	PIN RETAINER	519469
13	1	PIN RETAINER	519470
14	1	HEX NUT W/NYLOCK	518169
15	1	UPPER WELDMENT MACHINING	519507
16	1	LOWER WELDMENT MACHINING	519508
17	2	SPACER SHIM	519501
18	2	SPACER SHIM	519422
19	2	BLADE MACHINING	See "MRX Blade Kits" on page 85
20	1	BLADE SHIM	See "MRX Blade Kits" on page 85

PULVERIZER JAW

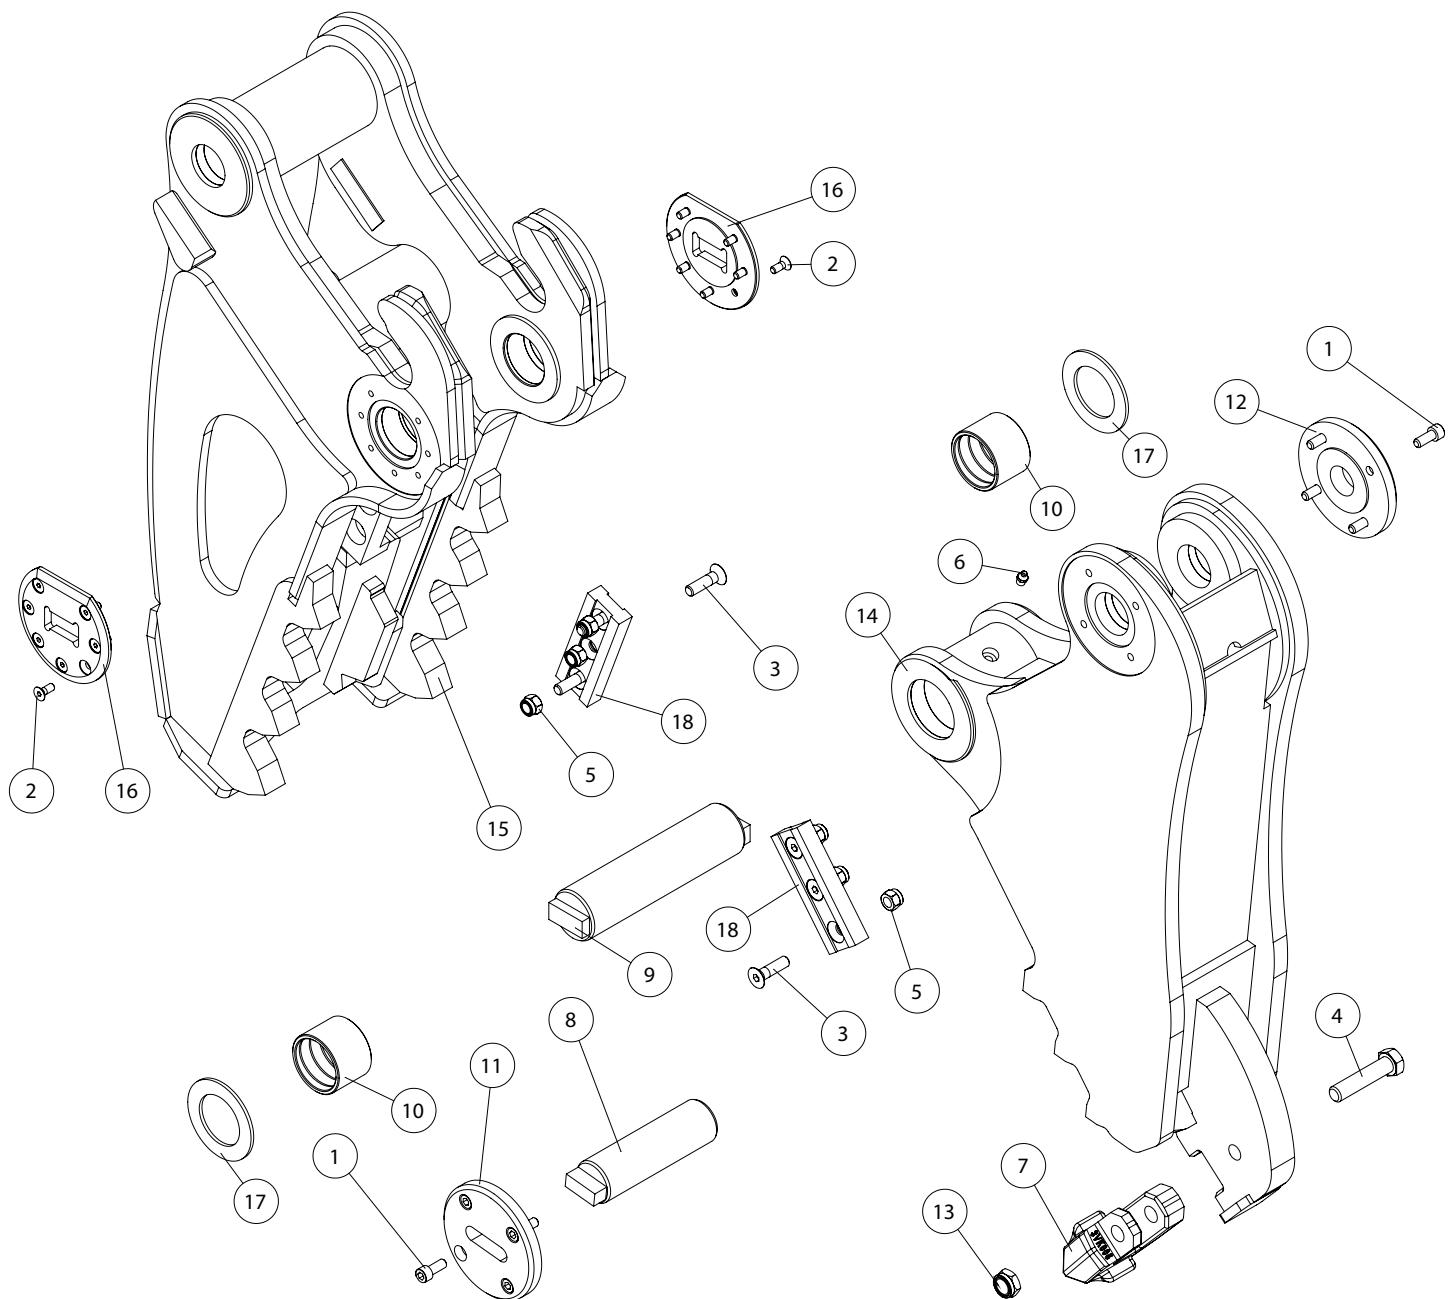

MRX70 Pulverizer Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	8	SOCKET HEAD CAPSCREW	519452
2	14	SOCKET HEAD CAPSCREW	519498
3	6	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
4	1	HEX HEAD CAPSCREW	518169
5	6	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85
6	1	GREASE ZERK	518203
7	1	CUTTING EDGE	518169
8	1	PIN MACHINING	519418
9	1	PIN MACHINING	519419
10	2	BEARING MACHINING	519420
11	1	PIN RETAINER	519469
12	1	PIN RETAINER	519470
13	1	HEX NUT W/NYLOCK	518169
14	1	UPPER WELDMENT MACHINING	519503
15	1	LOWER WELDMENT MACHINING	519504
16	2	SPACER SHIM	519501
17	2	SPACER SHIM	519422
18	2	CUTTING EDGE	See "MRX Blade Kits" on page 85


SHEAR JAW

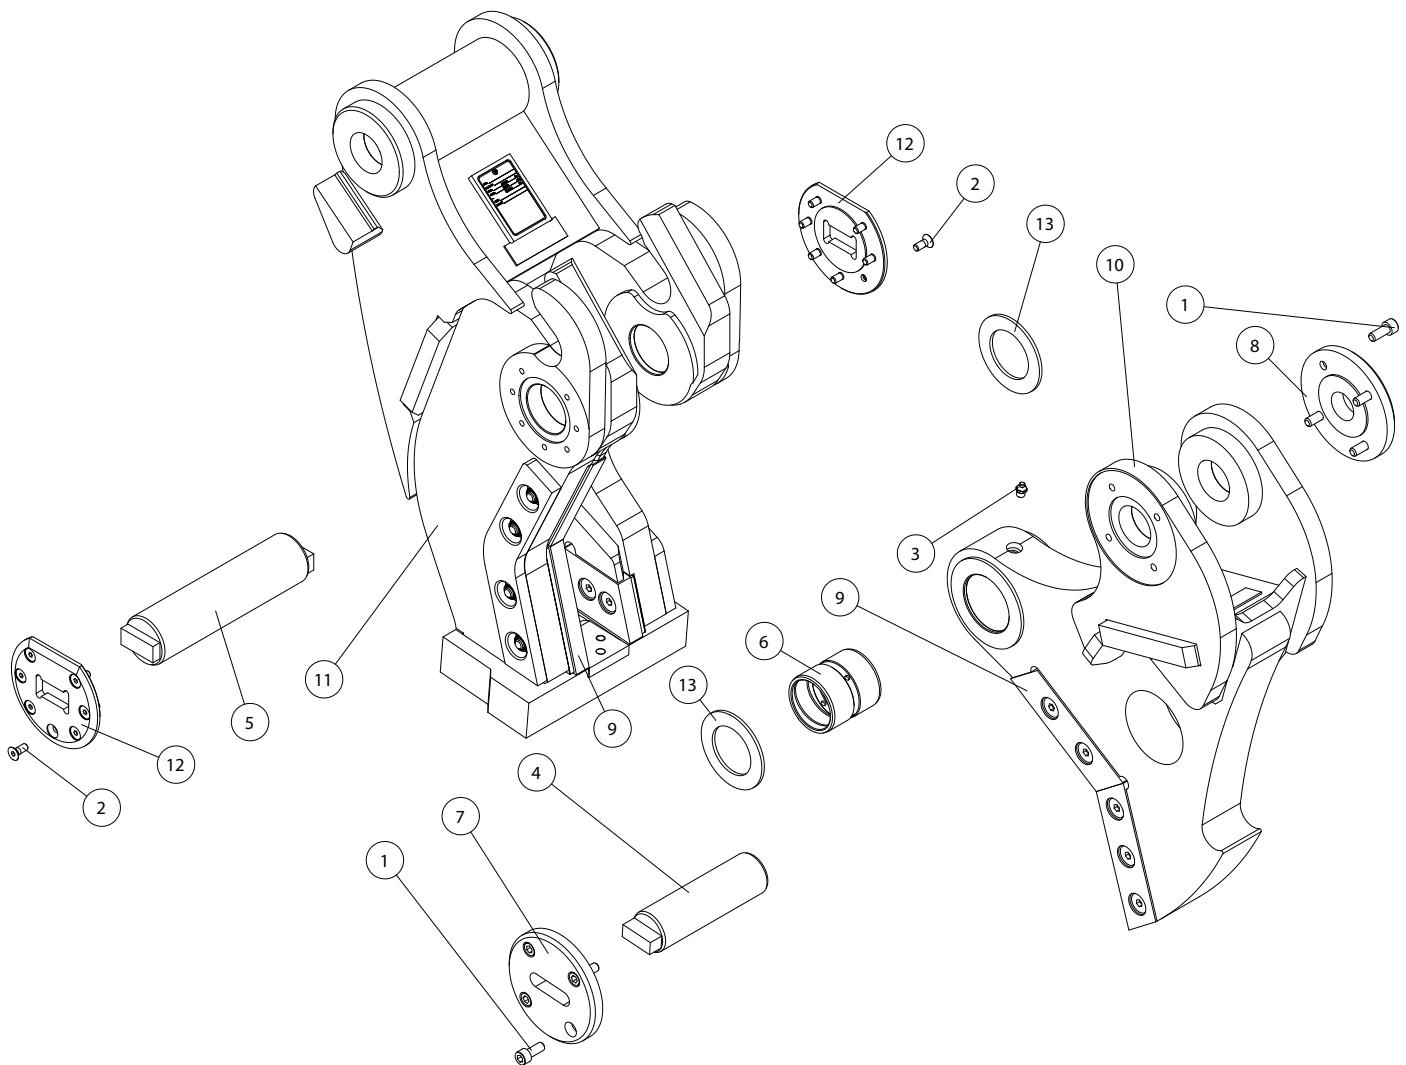

MRX70 Shear Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	8	SOCKET HEAD CAPSCREW	519452
2	14	SOCKET HEAD CAPSCREW	519498
3	1	GREASE ZERK	518203
4	1	PIN MACHINING	519418
5	1	PIN MACHINING	519419
6	1	BEARING MACHINING	519423
7	1	PIN RETAINER	519469
8	1	PIN RETAINER	519470
9	1	BLADE KIT	519370
10	1	UPPER WELDMENT MACHINING	519499
11	1	LOWER WELDMENT MACHINING	519500
12	2	SPACER SHIM	519501
13	2	SPACER SHIM	519422


MRX100

BODY

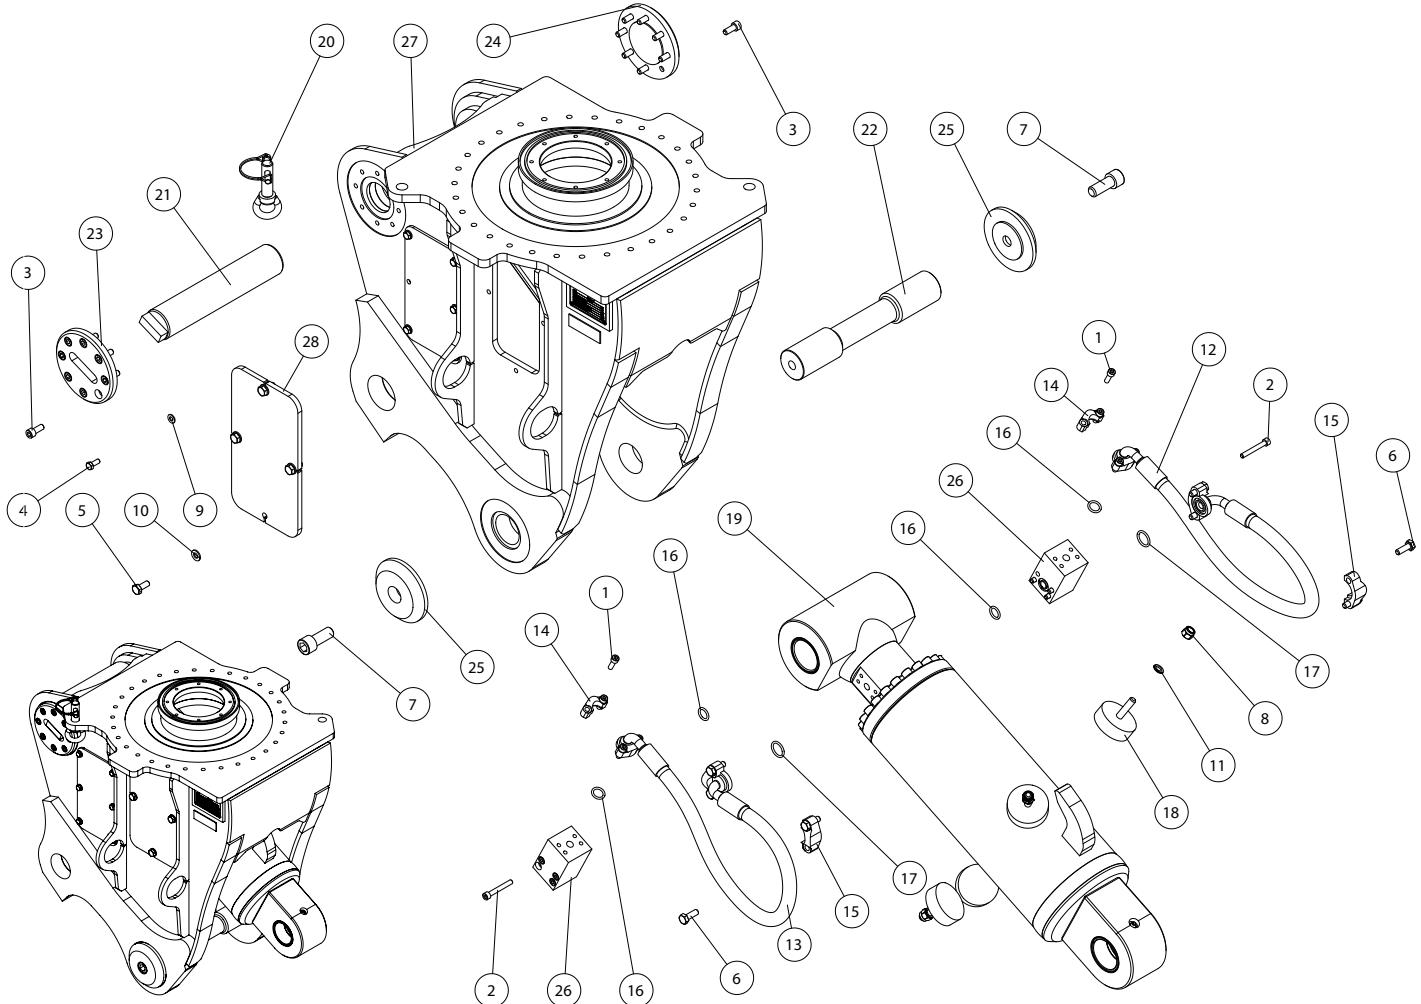


MRX100 Body Parts Illustration			
Item	Qty	Description	Part Number
1	8	SOCKET HEAD CAPSCREW	519533
2	8	SOCKET HEAD CAPSCREW	519534
3	16	SOCKET HEAD CAPSCREW	519452
4	12	SOCKET HEAD CAPSCREW	519231
5	8	HEX HEAD CAPSCREW	518192
6	8	HEX HEAD CAPSCREW	519152
7	2	SOCKET HEAD CAPSCREW	518266
8	4	HEX NUT W/NYLOCK	518351
9	12	FLAT WASHER	519233
10	8	FLAT WASHER	518201
11	4	FLAT WASHER	518354
12	1	HOSE ASSEMBLY	519546
13	1	HOSE ASSEMBLY	519548
14	4	SPLIT FLANGE HALF	519158
15	4	SPLT FLANGE HALF	518905
16	4	O RING SEAL	519159
17	2	ORING SEAL	518906
18	4	DAMPENER	518374
19	1	CYLINDER ASSEMBLY	519435
20	1	PIN MACHINING	519163
21	1	PIN MACHINING	519165
22	1	PIN MACHINING	519564
23	1	PIN RETAINER	519171
24	1	PIN RETAINER	519172
25	2	PIN RETAINER	519566
26	2	MANIFOLD MACHINING	519173
27	1	MRX100 STICK	519567
28	2	COVER PLATE	519568

ROTATION

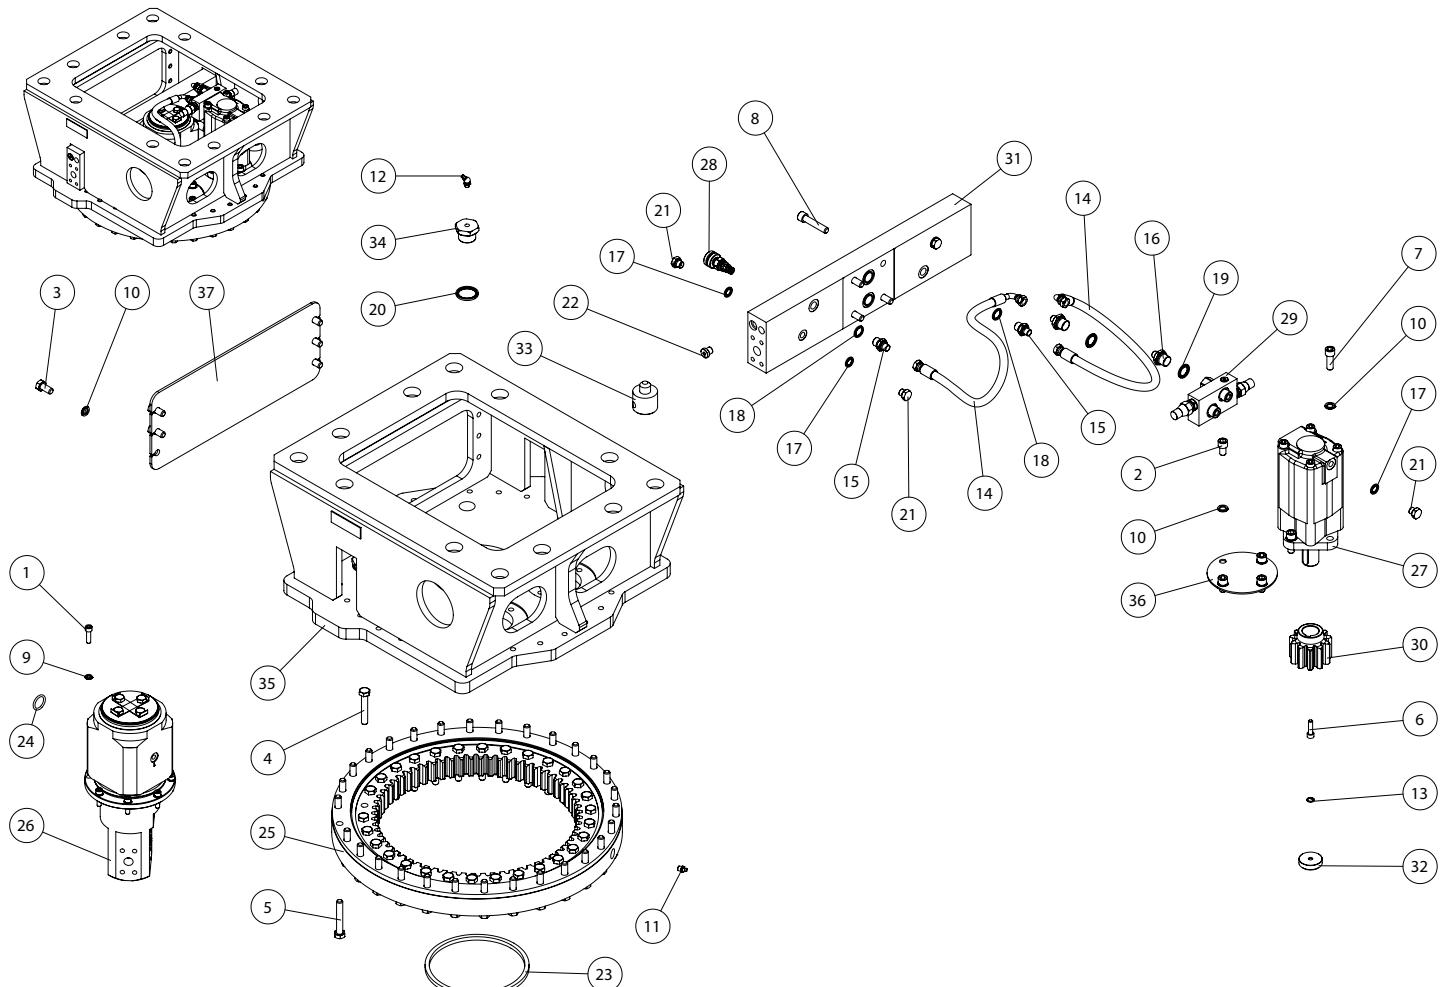


MRX100 Rotation Parts Illustration			
Item	Qty	Description	Part Number
1	8	SOCKET HEAD CAPSCREW	519180
2	4	SOCKET HEAD CAPSCREW	519181
3	6	HEX HEAD CAPSCREW	518706
4	30	HEX HEAD CAPSCREW	519182
5	30	HEX HEAD CAPSCREW	519183
6	1	SOCKET HEAD CAPSCREW	519184
7	4	SOCKET HEAD CAPSCREW	518708
8	4	SOCKET HEAD CAPSCREW	518956
9	8	FLAT WASHER	519185
10	14	FLAT WASHER	518354
11	2	GREASE ZERK	518203
12	2	GREASE ZERK	519186
13	1	SNAP RING	519188
14	2	HOSE ASSEMBLY	519189
15	2	HOSE ADAPTOR	519190
16	2	HOSE ADAPTOR	518746
17	5	FLAT WASHER	518308
18	2	FLAT WASHER	519191
19	2	FLAT WASHER	518720
20	2	FLAT WASHER	518975
21	5	HYDRAULIC ADAPTOR PLUG	518310
22	2	HYDRAULIC ADAPTOR PLUG	518397
23	1	RING SEAL	519192
24	2	ORING SEAL	518906
25	1	TURNTABLE BEARING	519193
26	1	HYDRAULIC ROTATION DISTRIBUTOR	519194
27	1	HYDRAULIC MOTOR	519195
28	2	HYDRAULIC ADAPTOR	518728
29	1	RELIEF VALVE	519197
30	1	PINNION GEAR	519198
31	1	MANIFOLD MACHINING	519199
32	1	PLATE MACHINING	519200
33	2	PIN RETAINER	519201
34	2	HYDRAULIC ADAPTOR PLUG	519202
35	1	UPPERHEAD WELDMENT MACHINING	519203
36	1	COVER PLATE	519204
37	1	COVER PLATE	519206

CRACKER JAW

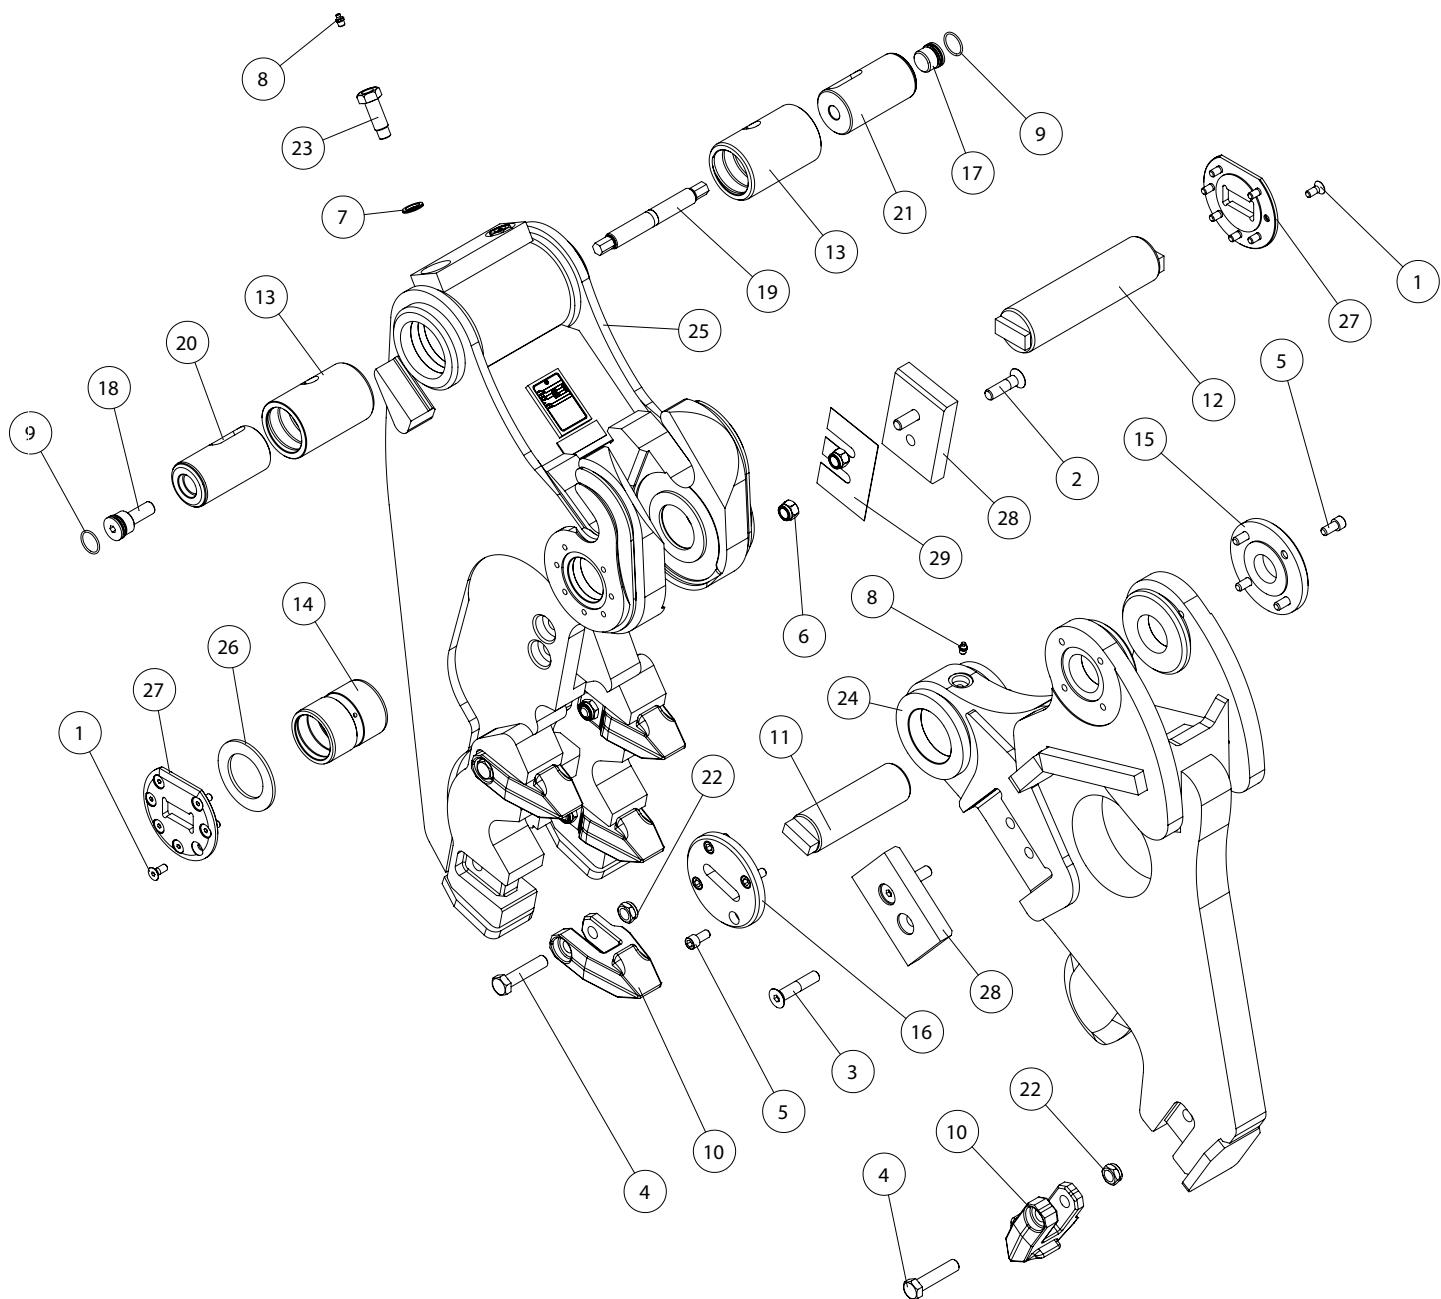


MRX100 Cracker Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	519569
2	2	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
3	2	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
4	5	HEX HEAD CAPSCREW	518169
5	8	SOCKET HEAD CAPSCREW	519155
6	4	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85
7	2	FLAT WASHER	518961
8	3	GREASE ZERK	518203
9	2	ORING SEAL	519245
10	5	CUTTING EDGE	518169
11	1	PIN MACHINING	519425
12	1	PIN MACHINING	519426
13	2	BEARING MACHINING	519570
14	1	BEARING MACHINING	519429
15	1	PIN RETAINER	519571
16	1	PIN RETAINER	519572
17	1	PIN MACHINING	519249
18	1	PIN MACHINING	519251
19	1	BAR MACHINING	519573
20	1	PIN MACHINING	519575
21	1	PIN MACHINING	519576
22	5	HEX NUT W/NYLOCK	518169
23	2	HEX HEAD CAPSCREW	519255
24	1	UPPER WELDMENT MACHINING	519582
25	1	LOWER WELDMENT MACHINING	519584
26	2	SPACER SHIM	519427
27	2	SPACER SHIM	519579
28	2	BLADE MACHINING	See "MRX Blade Kits" on page 85
29	1	BLADE SHIM	See "MRX Blade Kits" on page 85

PULVERIZER JAW

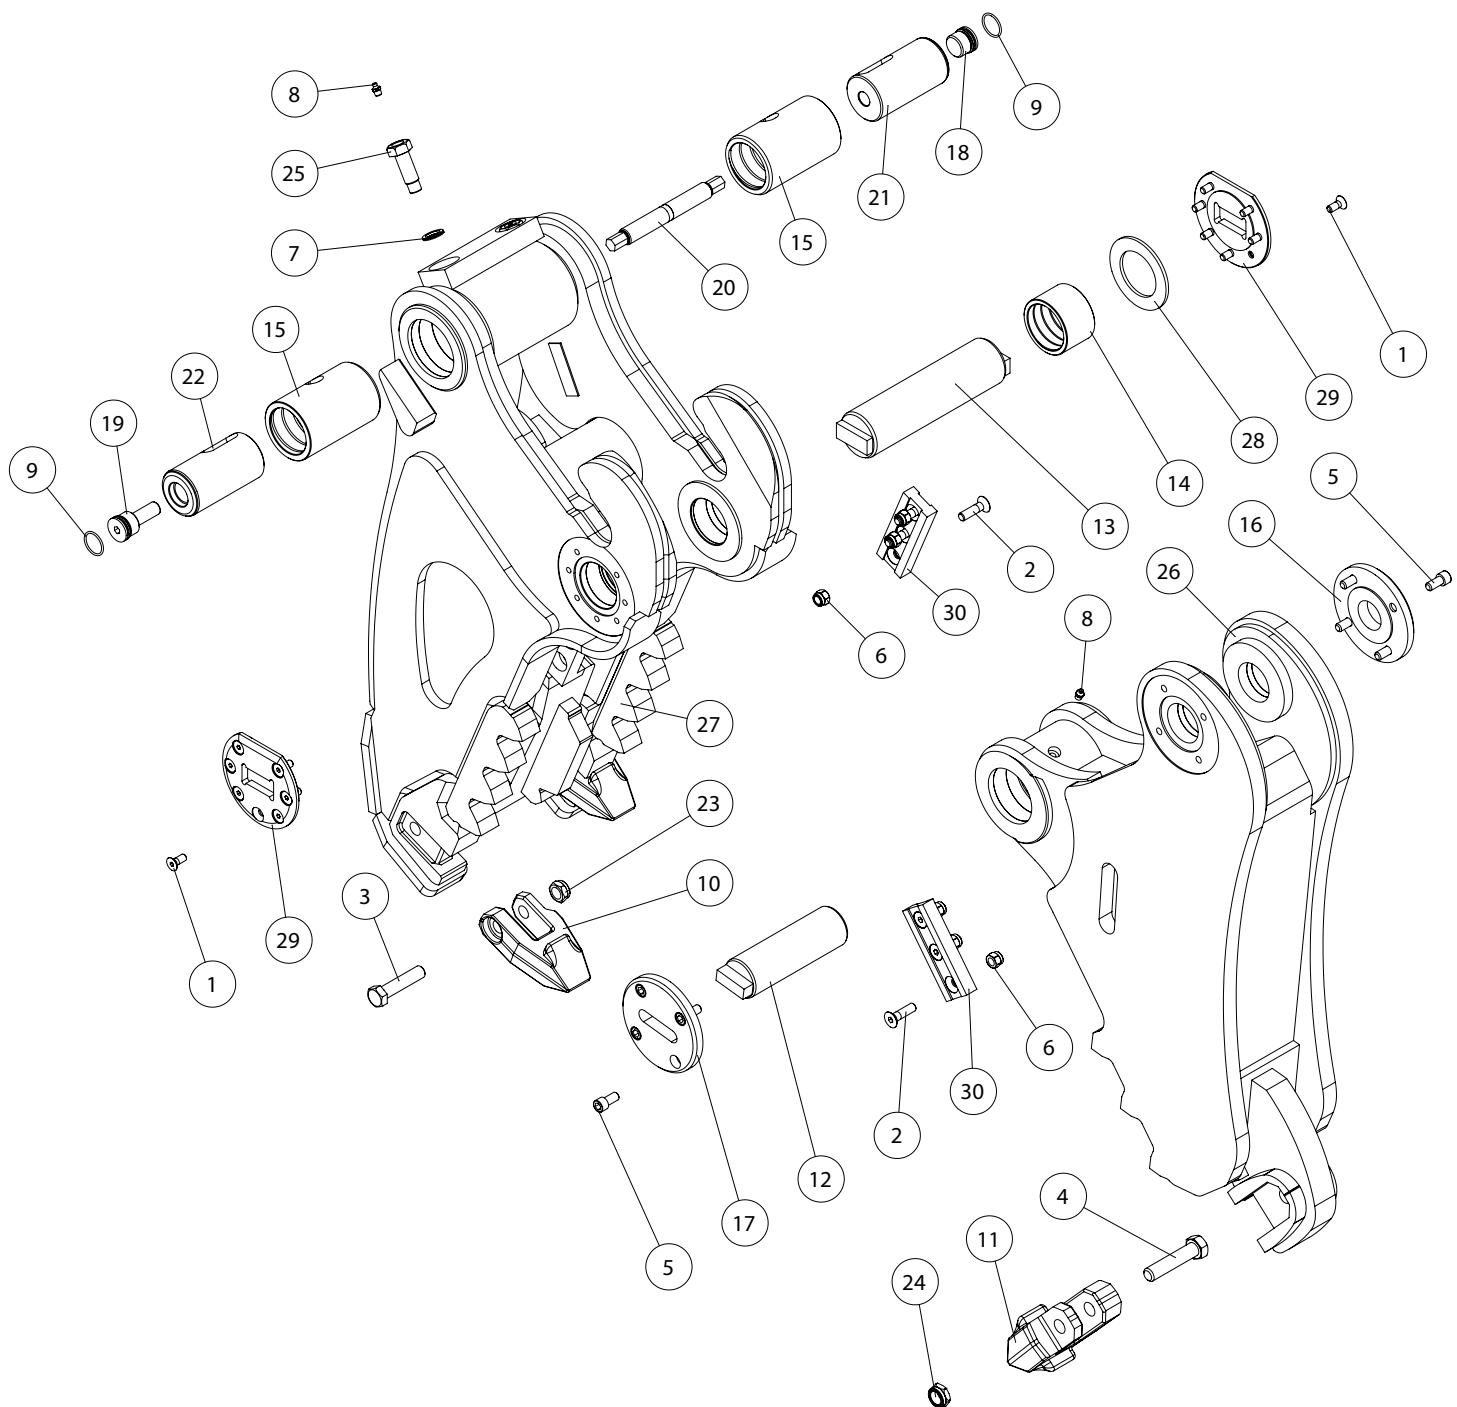

MRX100 Pulverizer Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	519569
2	6	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
3	2	HEX HEAD CAPSCREW	518169
4	1	HEX HEAD CAPSCREW	518171
5	8	SOCKET HEAD CAPSCREW	519155
6	6	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85
7	2	FLAT WASHER	518961
8	3	GREASE ZERK	518203
9	2	ORING SEAL	519245
10	2	CUTTING EDGE	518169
11	1	CUTTING EDGE	518171
12	1	PIN MACHINING	519425
13	1	PIN MACHINING	519426
14	2	BEARING MACHINING	519167
15	2	BEARING MACHINING	519570
16	1	PIN RETAINER	519571
17	1	PIN RETAINER	519572
18	1	PIN MACHINING	519249
19	1	PIN MACHINING	519251
20	1	BAR MACHINING	519573
21	1	PIN MACHINING	519575
22	1	PIN MACHINING	519576
23	2	HEX NUT W/NYLOCK	518169
24	1	HEX NUT W/NYLOCK	518171
25	2	HEX HEAD CAPSCREW	519255
26	1	UPPER WELDMENT MACHINING	519580
27	1	LOWER WELDMENT MACHINING	519581
28	2	SPACER SHIM	519427
29	2	SPACER SHIM	519579
30	2	CUTTING EDGE	See "MRX Blade Kits" on page 85


SHEAR JAW

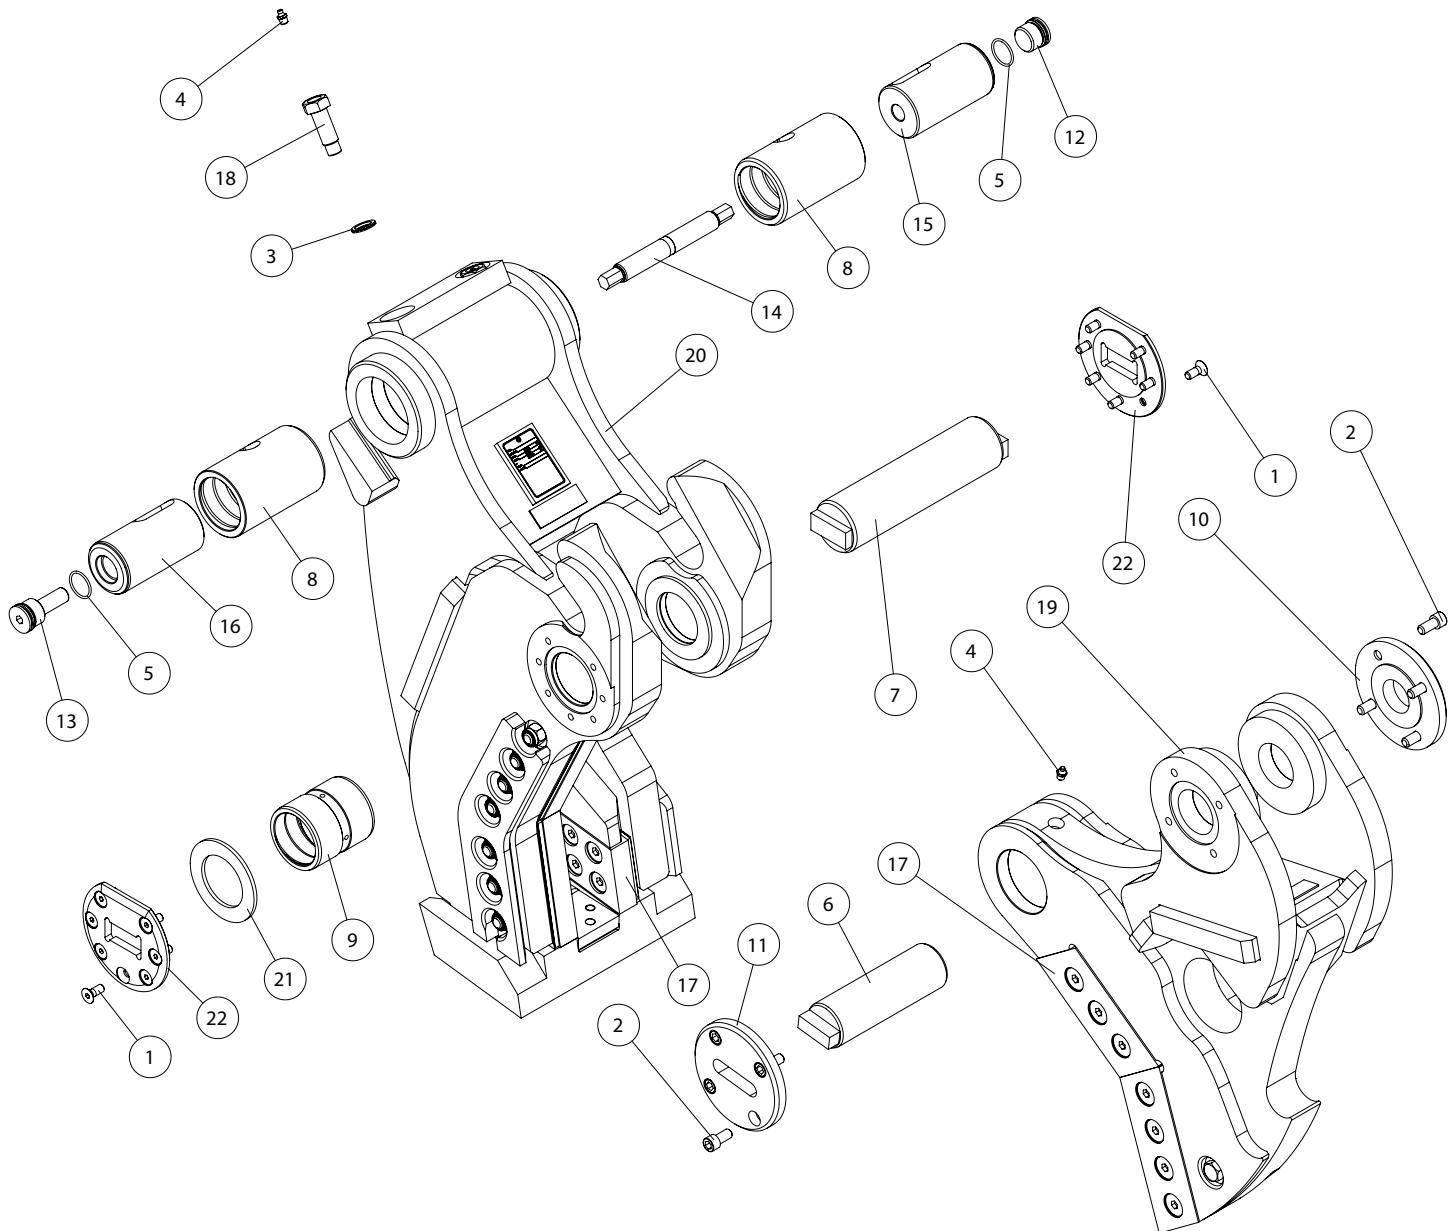

MRX100 Shear Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	519569
2	8	SOCKET HEAD CAPSCREW	519155
3	2	FLAT WASHER	518961
4	3	GREASE ZERK	518203
5	2	ORING SEAL	519245
6	1	PIN MACHINING	519425
7	1	PIN MACHINING	519426
8	2	BEARING MACHINING	519570
9	1	BEARING MACHINING	519428
10	1	PIN RETAINER	519571
11	1	PIN RETAINER	519572
12	1	PIN MACHINING	519249
13	1	PIN MACHINING	519251
14	1	BAR MACHINING	519573
15	1	PIN MACHINING	519575
16	1	PIN MACHINING	519576
17	1	BLADE KIT	519377
18	2	HEX HEAD CAPSCREW	519255
19	1	UPPER WELDMENT MACHINING	519577
20	1	LOWER WELDMENT MACHINING	519578
21	2	SPACER SHIM	519427
22	2	SPACER SHIM	519579


MRX130

BODY

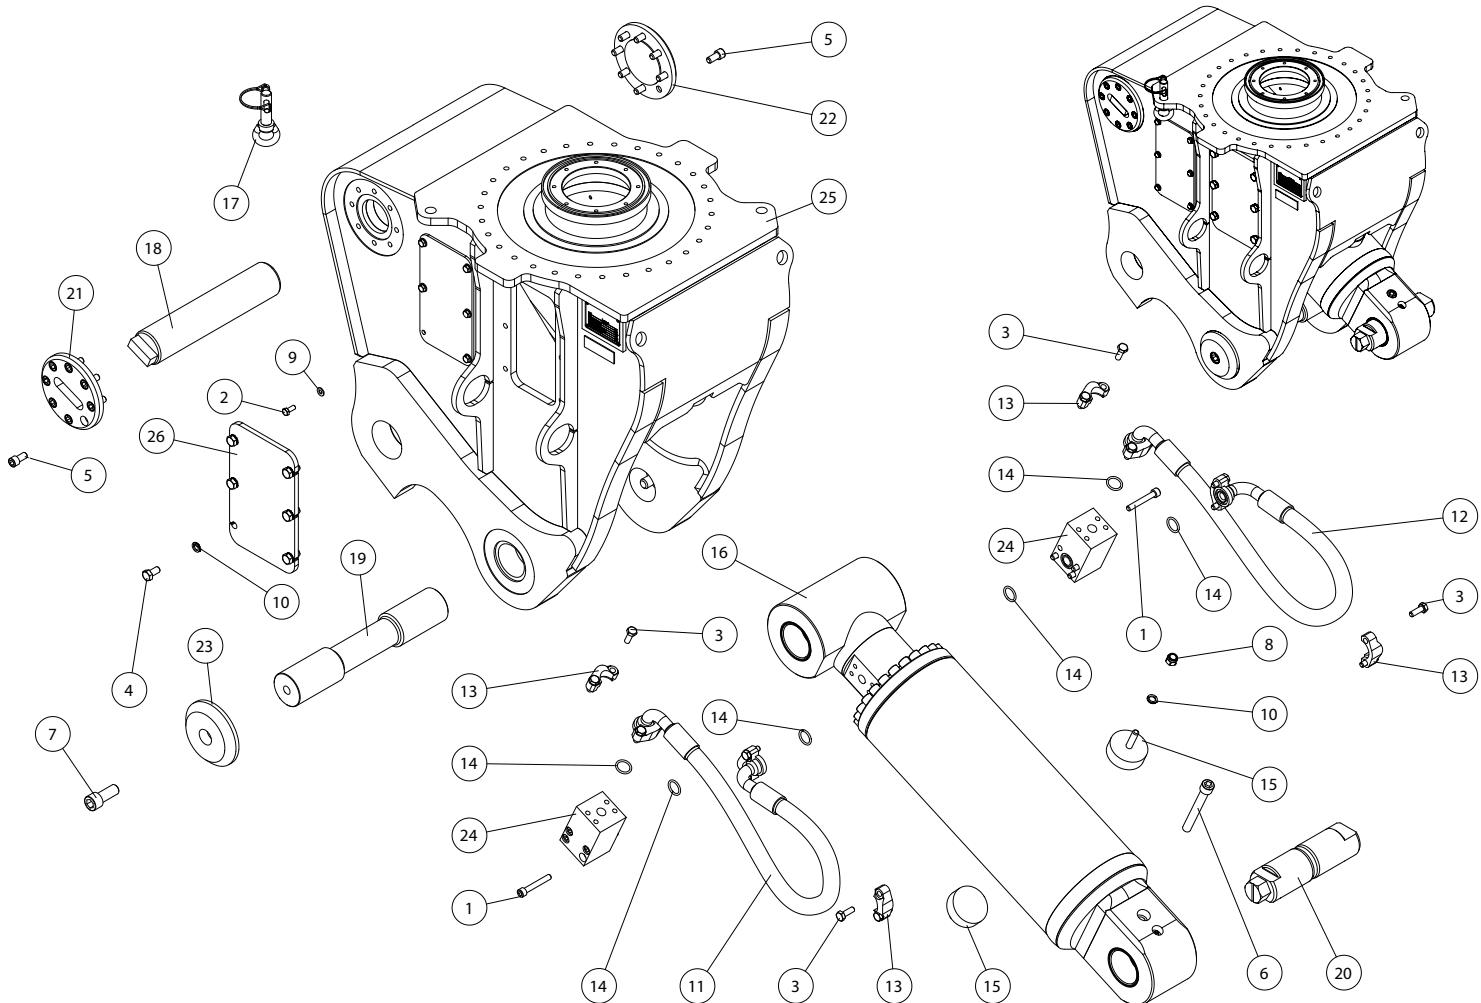


MRX130 Body Parts Illustration			
Item	Qty	Description	Part Number
1	8	SOCKET HEAD CAPSCREW	518898
2	12	SOCKET HEAD CAPSCREW	519231
3	16	HEX HEAD CAPSCREW	519152
4	12	HEX HEAD CAPSCREW	518706
5	16	SOCKET HEAD CAPSCREW	519155
6	1	SOCKET HEAD CAPSCREW	518713
7	2	SOCKET HEAD CAPSCREW	518266
8	2	HEX NUT W/NYLOCK	518351
9	12	FLAT WASHER	519233
10	14	FLAT WASHER	518354
11	1	HOSE ASSEMBLY	519234
12	1	HOSE ASSEMBLY	519235
13	8	SPLT FLANGE HALF	518905
14	6	ORING SEAL	518906
15	2	DAMPENER	518374
16	1	CYLINDER ASSEMBLY	519236
17	1	PIN MACHINING	519163
18	1	PIN MACHINING	519237
19	1	PIN MACHINING	519238
20	1	PIN MACHINING	519239
21	1	PIN RETAINER	519168
22	1	PIN RETAINER	519170
23	2	PIN RETAINER	519240
24	2	MANIFOLD MACHINING	518916
25	1	MRX130 STICK	519242
26	2	COVER PLATE	519243

ROTATION

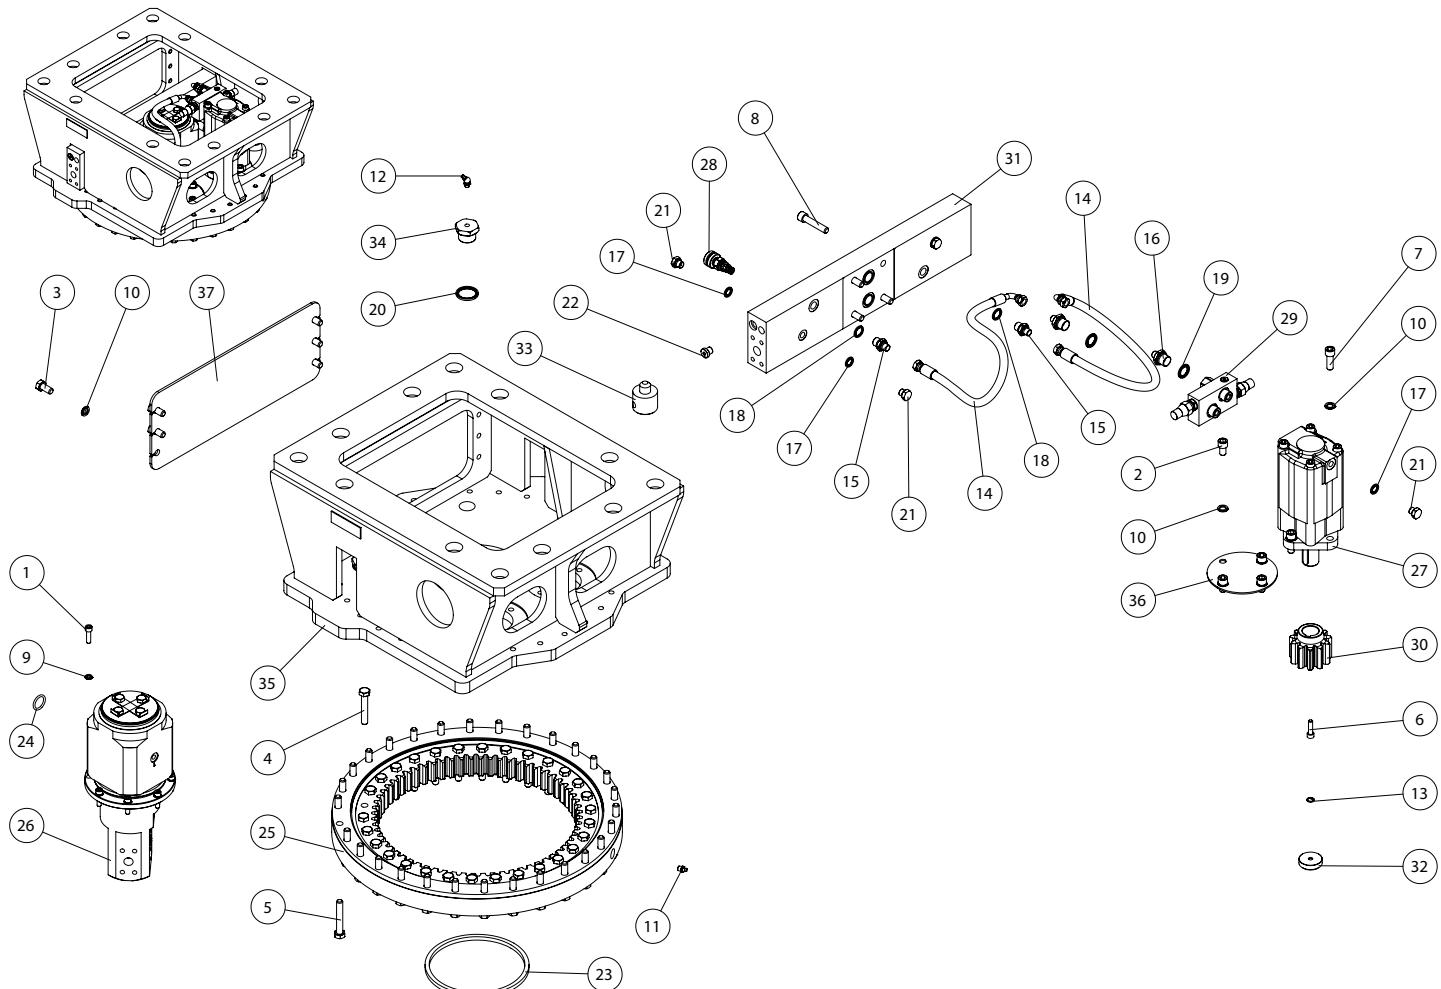


MRX130 Rotation Parts Illustration			
Item	Qty	Description	Part Number
1	8	SOCKET HEAD CAPSCREW	519180
2	4	SOCKET HEAD CAPSCREW	519181
3	6	HEX HEAD CAPSCREW	518706
4	30	HEX HEAD CAPSCREW	519182
5	30	HEX HEAD CAPSCREW	519183
6	1	SOCKET HEAD CAPSCREW	519184
7	4	SOCKET HEAD CAPSCREW	518708
8	4	SOCKET HEAD CAPSCREW	518956
9	8	FLAT WASHER	519185
10	14	FLAT WASHER	518354
11	2	GREASE ZERK	518203
12	2	GREASE ZERK	519186
13	1	SNAP RING	519188
14	2	HOSE ASSEMBLY	519189
15	2	HOSE ADAPTOR	519190
16	2	HOSE ADAPTOR	518746
17	5	FLAT WASHER	518308
18	2	FLAT WASHER	519191
19	2	FLAT WASHER	518720
20	2	FLAT WASHER	518975
21	5	HYDRAULIC ADAPTOR PLUG	518310
22	2	HYDRAULIC ADAPTOR PLUG	518397
23	1	RING SEAL	519192
24	2	ORING SEAL	518906
25	1	TURNTABLE BEARING	519193
26	1	HYDRAULIC ROTATION DISTRIBUTOR	519194
27	1	HYDRAULIC MOTOR	519195
28	2	HYDRAULIC ADAPTOR	518728
29	1	RELIEF VALVE	519197
30	1	PINNION GEAR	519198
31	1	MANIFOLD MACHINING	519199
32	1	PLATE MACHINING	519200
33	2	PIN RETAINER	519201
34	2	HYDRAULIC ADAPTOR PLUG	519202
35	1	UPPERHEAD WELDMENT MACHINING	519203
36	1	COVER PLATE	519204
37	1	COVER PLATE	519206

CRACKER JAW

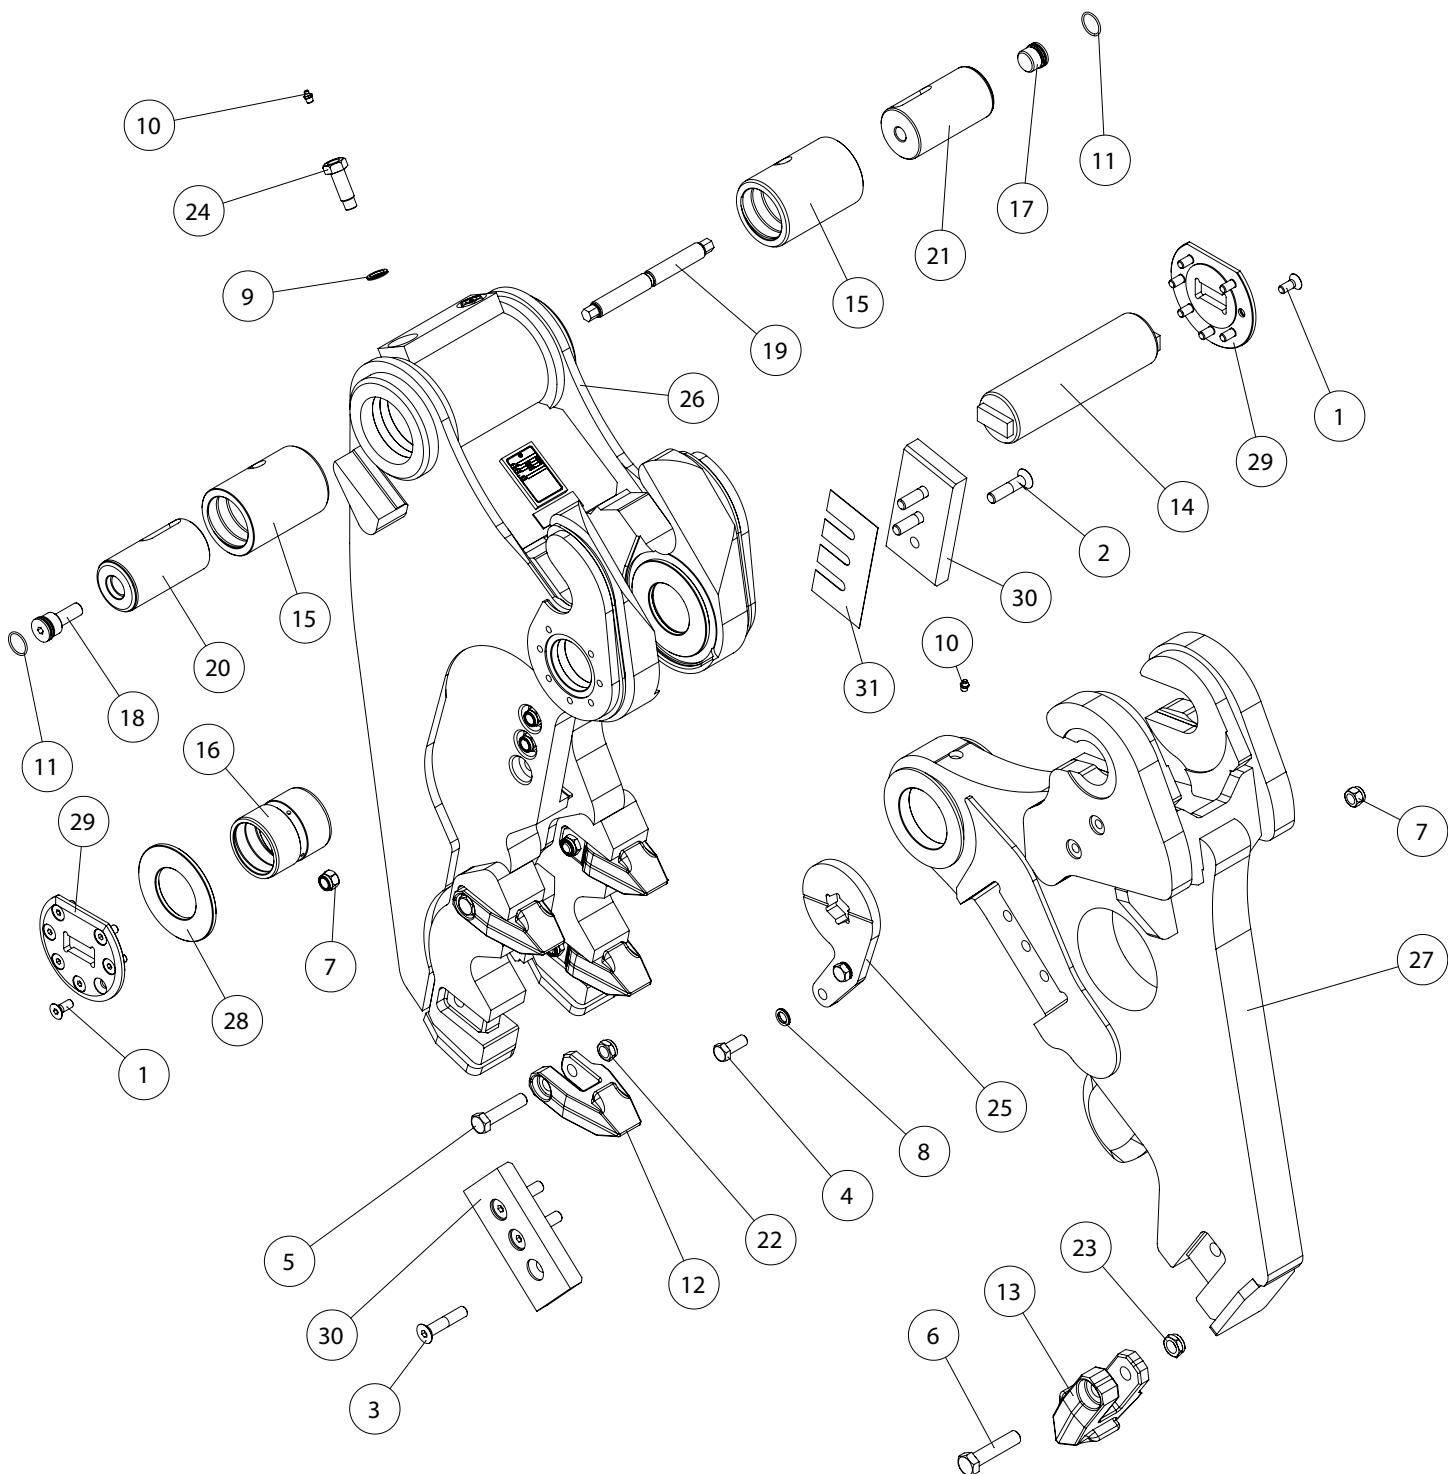


MRX130 Cracker Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	518416
2	3	HEX HEAD CAPSCREW	See "MRX Blade Kits" on page 85
3	3	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
4	2	HEX HEAD CAPSCREW	518283
5	4	HEX HEAD CAPSCREW	518169
6	1	HEX HEAD CAPSCREW	518171
7	6	HEX NUT W/NYLOCK	518199
8	2	FLAT WASHER	518714
9	2	FLAT WASHER	518961
10	3	GREASE ZERK	518203
11	2	ORING SEAL	519245
12	4	CUTTING EDGE	518169
13	1	CUTTING EDGE	518171
14	1	PIN MACHINING	519246
15	2	BEARING MACHINING	519247
16	1	BEARING MACHINING	519248
17	1	PIN MACHINING	519249
18	1	PIN MACHINING	519251
19	1	BAR MACHINING	519252
20	1	PIN MACHINING	519253
21	1	PIN MACHINING	519254
22	4	HEX NUT W/NYLOCK	518169
23	1	HEX NUT W/NYLOCK	518171
24	2	HEX HEAD CAPSCREW	519255
25	1	LOCK PIN	519256
26	1	MRX130 LOWER CC	519257
27	1	MRX130 UPPER CC	519258
28	2	SPACER SHIM	519260
29	2	SPACER SHIM	519261
30	2	BLADE MACHINING	See "MRX Blade Kits" on page 85
31	1	BLADE SHIM	See "MRX Blade Kits" on page 85

PULVERIZER JAW

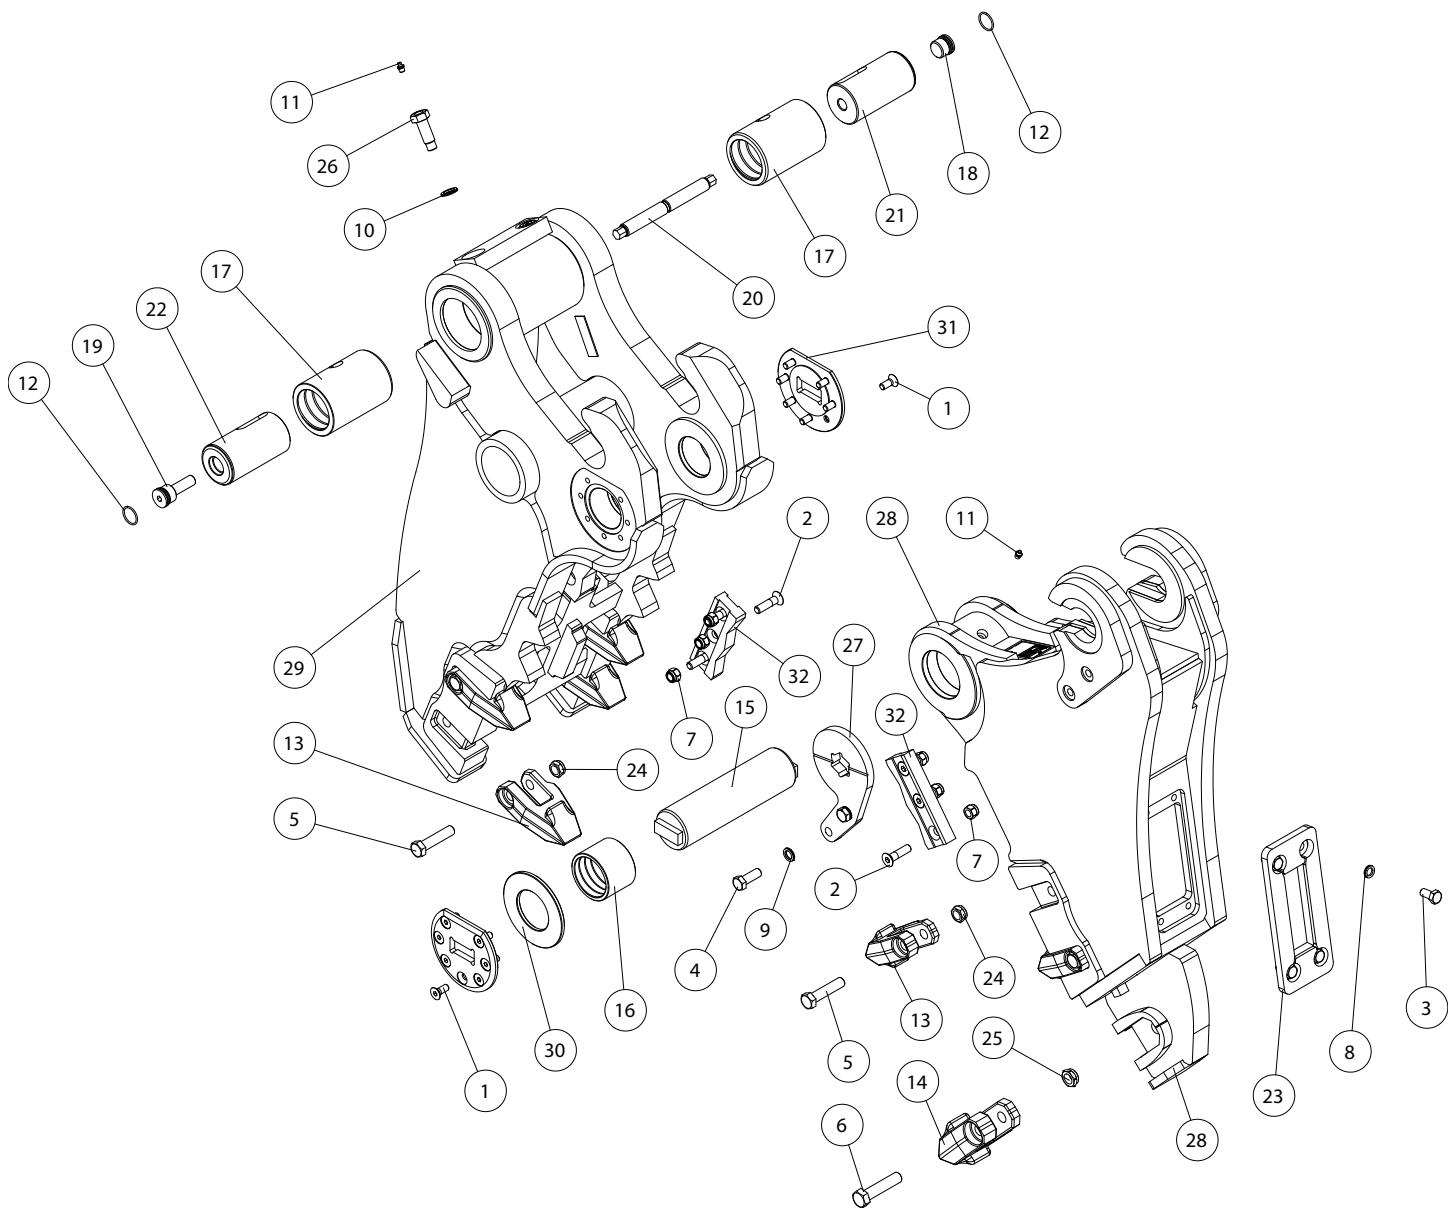

MRX130 Pulverizer Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	518416
2	6	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
3	4	HEX HEAD CAPSCREW	518195
4	2	HEX HEAD CAPSCREW	519265
5	8	HEX HEAD CAPSCREW	518169
6	1	HEX HEAD CAPSCREW	518171
7	6	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85
8	4	FLAT WASHER	518355
9	2	FLAT WASHER	518714
10	2	FLAT WASHER	518961
11	3	GREASE ZERK	518203
12	2	ORING SEAL	519245
13	8	CUTTING EDGE	518169
14	1	CUTTING EDGE	518171
15	1	PIN MACHINING	519246
16	2	BEARING MACHINING	519266
17	2	BEARING MACHINING	519247
18	1	PIN MACHINING	519249
19	1	PIN MACHINING	519267
20	1	BAR MACHINING	519252
21	1	PIN MACHINING	519253
22	1	PIN MACHINING	519254
23	1	COVER PLATE	518646
24	8	HEX NUT W/NYLOCK	518169
25	1	HEX NUT W/NYLOCK	518171
26	2	HEX HEAD CAPSCREW	519255
27	1	LOCK PIN	519256
28	1	MRX130 UPPER CP	519269
29	1	MRX130 LOWER CP	519270
30	2	SPACER SHIM	519260
31	2	SPACER SHIM	519261
32	2	CUTTING EDGE	See "MRX Blade Kits" on page 85


SHEAR JAW

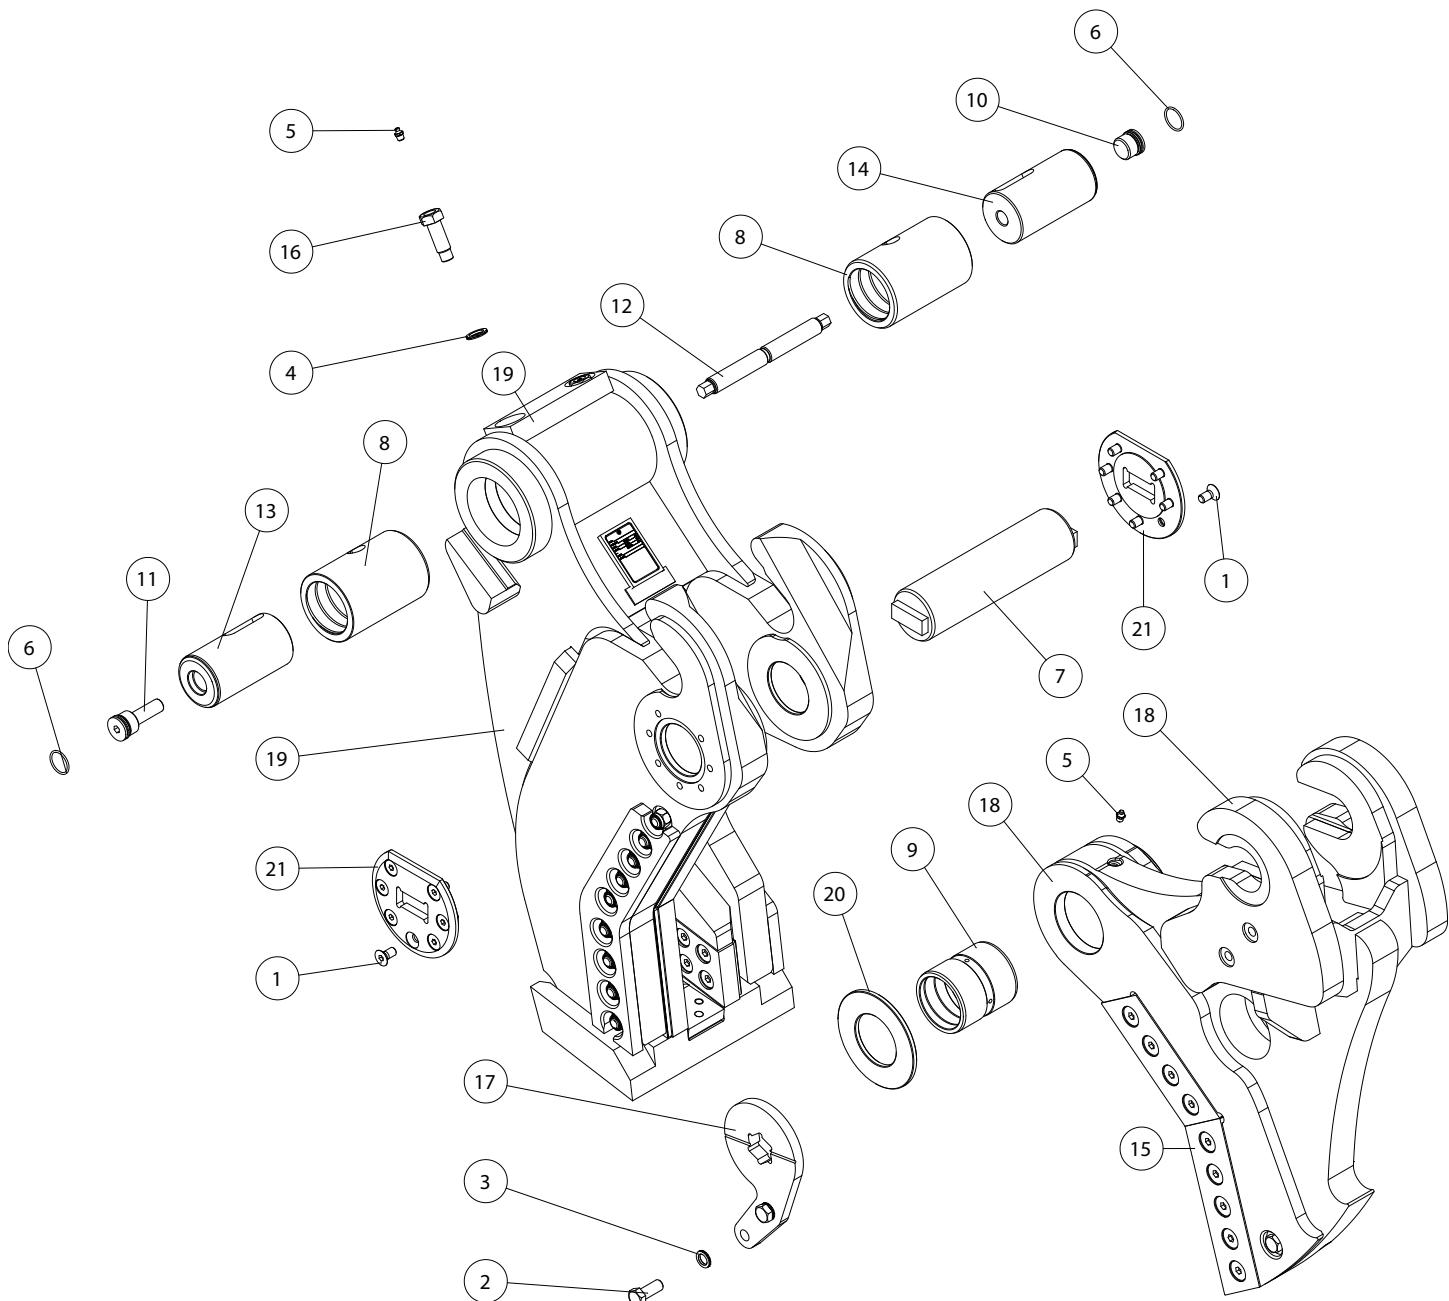

MRX130 Shear Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	518263
2	2	HEX HEAD CAPSCREW	518283
3	2	FLAT WASHER	518714
4	2	FLAT WASHER	518961
5	3	GREASE ZERK	518203
6	2	ORING SEAL	519245
7	1	PIN MACHINING	519246
8	2	BEARING MACHINING	519247
9	1	BEARING MACHINING	519303
10	1	PIN MACHINING	519249
11	1	PIN MACHINING	519267
12	1	BAR MACHINING	519252
13	1	PIN MACHINING	519253
14	1	PIN MACHINING	519254
15	1	BLADE KIT	519282
16	2	HEX HEAD CAPSCREW	519255
17	1	LOCK PIN	519256
18	1	UPPER WELDMENT MACHINING	519305
19	1	LOWER WELDMENT MACHINING	519306
20	2	SPACER SHIM	519260
21	2	SPACER SHIM	519261

MRX150

BODY

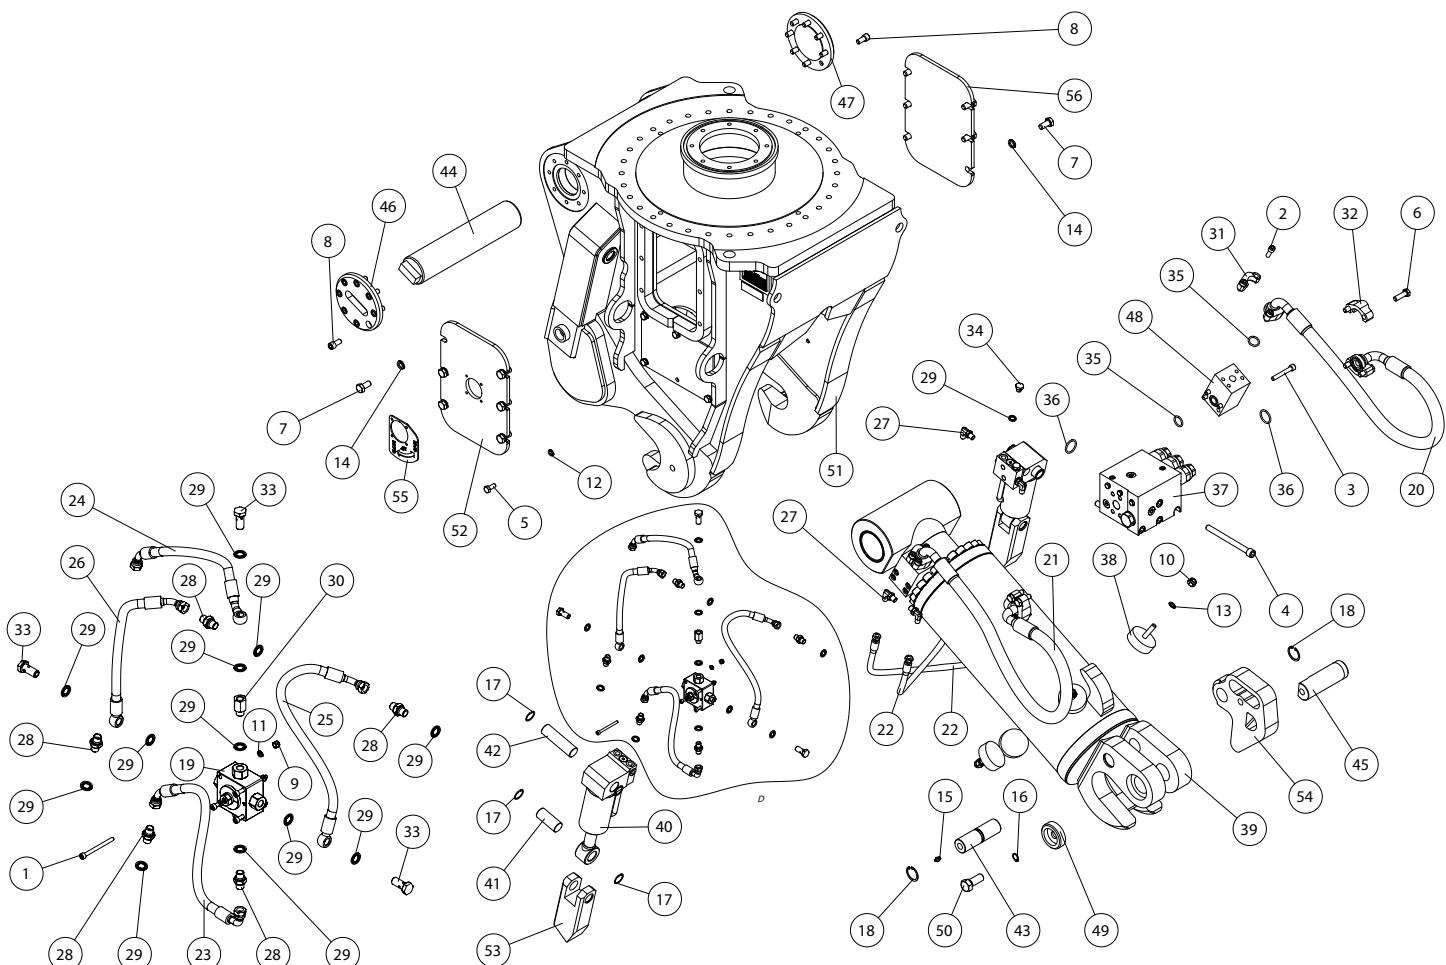


MRX150 Body Parts Illustration

Item	Qty	Description	Part Number
1	4	SOCKET HEAD CAPSCREW	518361
2	8	SOCKET HEAD CAPSCREW	518897
3	8	SOCKET HEAD CAPSCREW	518898
4	4	SOCKET HEAD CAPSCREW	518188
5	12	HEX HEAD CAPSCREW	518192
6	8	HEX HEAD CAPSCREW	518193
7	12	HEX HEAD CAPSCREW	518195
8	16	SOCKET HEAD CAPSCREW	519155
9	4	HEX NUT W/NYLOCK	518350
10	4	HEX NUT W/NYLOCK	518351
11	4	FLAT WASHER	518352
12	12	FLAT WASHER	518353
13	4	FLAT WASHER	518354


MRX150 Body Parts Illustration			
Item	Qty	Description	Part Number
14	12	FLAT WASHER	518355
15	4	GREASE ZERK	518203
16	1	C CLIP	519634
17	8	C CLIP	518358
18	2	C CLIP	518389
19	1	VALVE SWITCH	518360
20	1	HOSE ASSEMBLY	518902
21	1	HOSE ASSEMBLY	518903
22	2	HOSE ASSEMBLY	519635
23	1	HOSE ASSEMBLY	519636
24	1	HOSE ASSEMBLY	519637
25	1	HOSE ASSEMBLY	519638
26	1	HOSE ASSEMBLY	519639
27	4	HOSE ADAPTOR	518367
28	5	HOSE ADAPTOR	518368
29	14	FLAT WASHER	518308
30	1	EXTENSION ADAPTOR	518369
31	4	SPLT FLANGE HALF	518905
32	4	SPLIT FLANGE HALF	518204
33	3	HYDRAULIC ADAPTOR PLUG	518370
34	2	HYDRAULIC ADAPTOR PLUG	518310
35	4	ORING SEAL	518906
36	4	O RING SEAL	518205
37	1	MACHINING MANIFOLD	518208
38	4	DAMPENER	518374
39	1	CYLINDER ASSEMBLY	519437
40	2	CYLINDER ASSEMBLY	518376
41	2	MACHINED PIN	518377
42	2	MACHINED PIN	518378
43	1	PIN MACHINING	519640
44	1	PIN MACHINING	519536
45	1	PIN MACHINING	519641
46	1	PIN RETAINER	518912
47	1	PIN RETAINER	518915
48	2	MANIFOLD MACHINING	518916
49	1	FLAT WASHER	519643
50	1	HEX HEAD CAPSCREW	519644
51	1	MRX 150 STICK	519645
52	1	COVER PLATE	519646
53	2	CUTTING EDGE	519647
54	1	CYLINDER RETAINER	519648
55	1	OPEN CLOSE PLATE	518386
56	1	COVER PLATE	518226

ROTATION

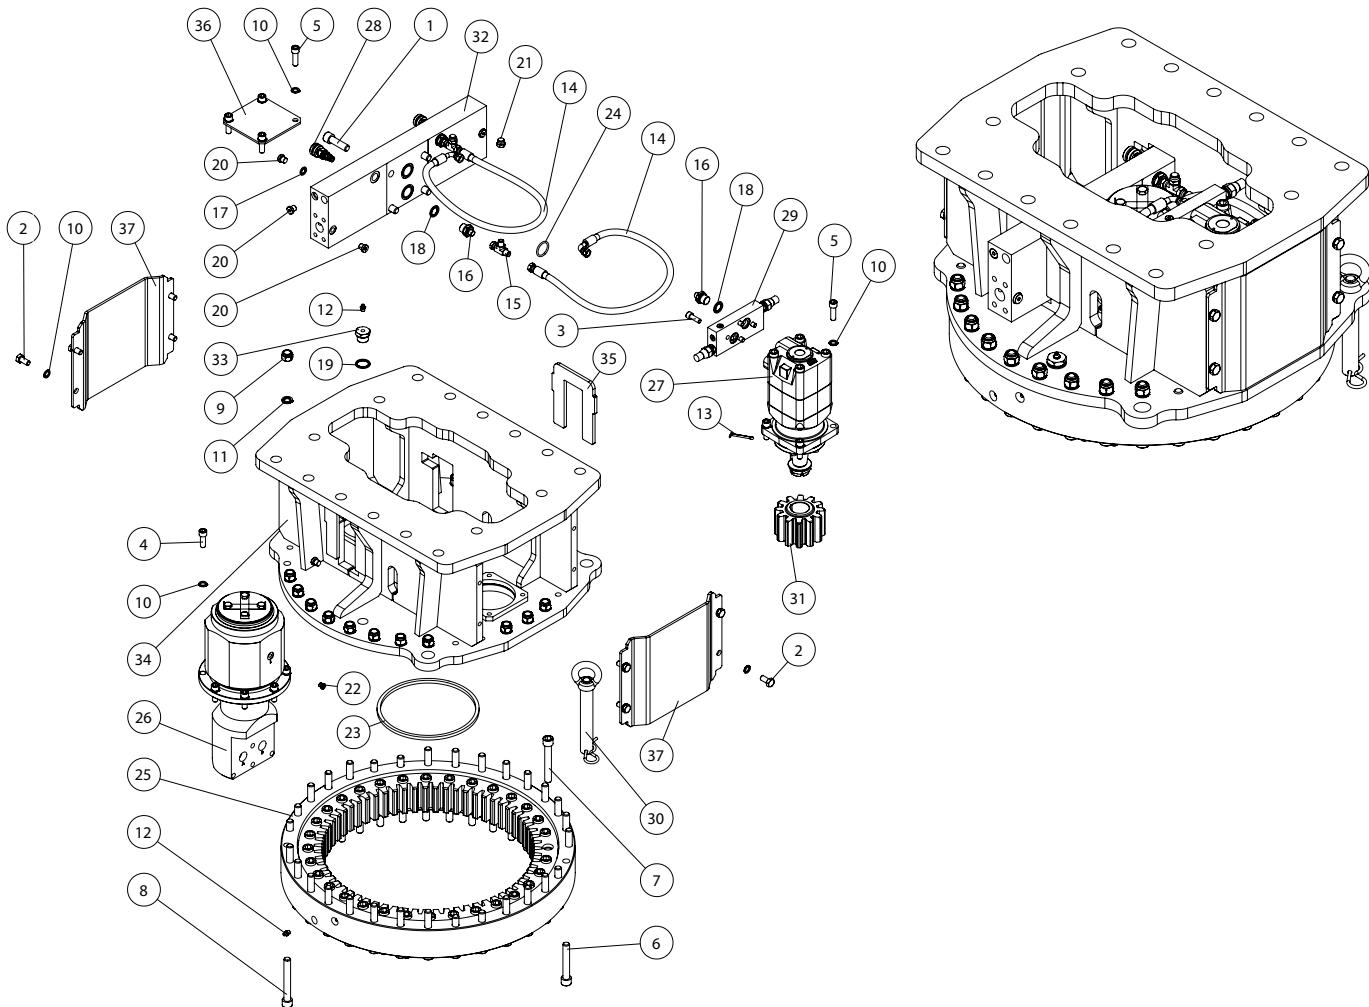


MRX150 Rotation Parts Illustration			
Item	Qty	Description	Part Number
1	4	SOCKET HEAD CAPSCREW	518705
2	8	HEX HEAD CAPSCREW	518706
3	4	SOCKET HEAD CAPSCREW	518707
4	8	SOCKET HEAD CAPSCREW	518708
5	8	SOCKET HEAD CAPSCREW	518709
6	8	SOCKET HEAD CAPSCREW	518711
7	32	SOCKET HEAD CAPSCREW	518712
8	24	SOCKET HEAD CAPSCREW	518743
9	24	HEX NUT W/NYLOCK	518199
10	24	FLAT WASHER	518354
11	24	FLAT WASHER	518714
12	6	GREASE ZERK	518203
13	1	COTTER (SPLIT) PIN	518715
14	2	HYDRAULIC HOSE	518744
15	2	HOSE ADAPTOR	518745
16	4	HOSE ADAPTOR	518746
17	2	FLAT WASHER	518308
18	4	FLAT WASHER	518720
19	2	FLAT WASHER	518721
20	8	HYDRAULIC ADAPTOR PLUG	518397
21	2	HYDRAULIC ADAPTOR PLUG	518747
22	1	HYDRAULIC ADAPTOR PLUG	518371
23	1	8x8 mm GASKET	518724
24	2	O RING SEAL	518205
25	1	TURN TABLE BEARING	518749
26	1	HYDRAULIC DISTRIBUTOR	518726
27	1	HYDRAULIC MOTOR	518727
28	2	HYDRAULIC ADAPTOR	518728
29	1	MANIFOLD MACHINING	518730
30	1	HITCH PIN	518731
31	1	PINION GEAR	518732
32	1	MANIFOLD MACHINING	518733
33	2	HYDRAULIC ADAPTOR PLUG	518734
34	1	UPPERHEAD WELDMENT MACHINING	518750
35	2	SIDE PLATE	518737
36	1	COVER PLATE	518738
37	2	FORMED COVER PLATE	518751

CRACKER JAW

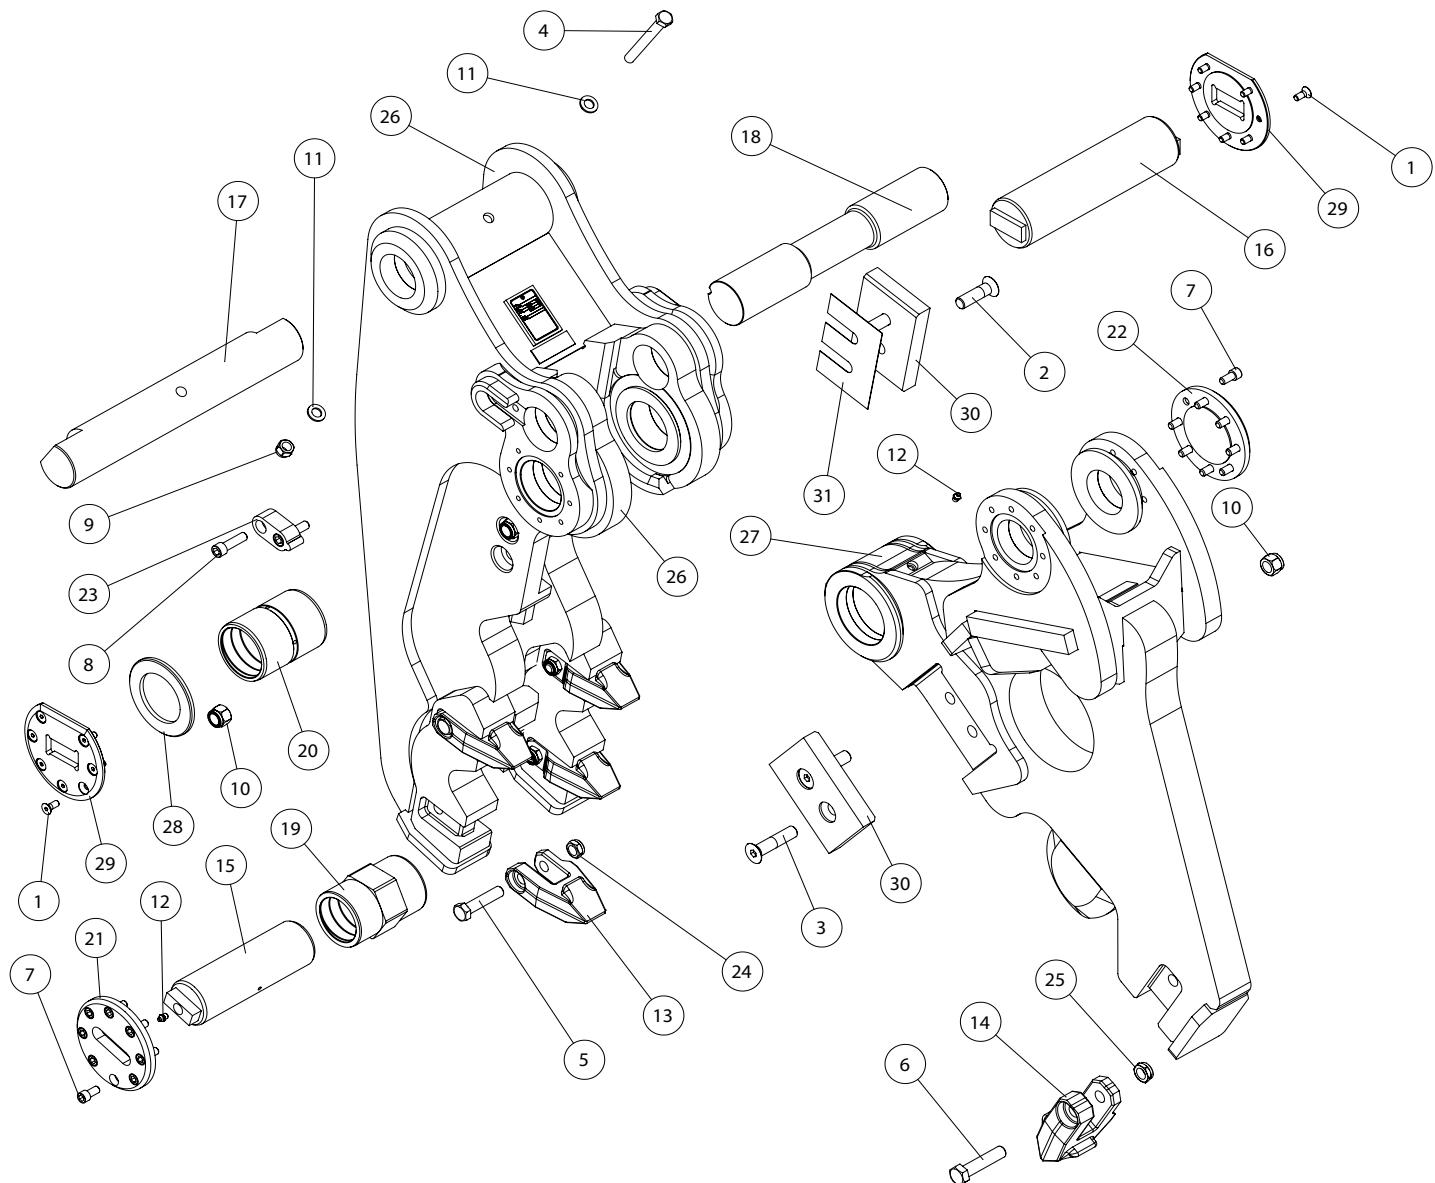

MRX150 Cracker Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	519569
2	2	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
3	2	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
4	1	HEX HEAD CAPSCREW	518614
5	4	HEX HEAD CAPSCREW	518169
6	1	HEX HEAD CAPSCREW	518171
7	16	SOCKET HEAD CAPSCREW	519155
8	4	SOCKET HEAD CAPSCREW	519649
9	1	HEX NUT W/NYLOCK	518419
10	4	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85
11	2	FLAT WASHER	518304
12	2	GREASE ZERK	518203
13	4	CUTTING EDGE	518169
14	1	CUTTING EDGE	518171
15	1	PIN MACHINING	519537
16	1	PIN MACHINING	519539
17	1	PIN MACHINING	519650
18	1	PIN MACHINING	519652
19	1	BEARING MACHINING	519540
20	1	BEARING MACHINING	519543
21	1	PIN RETAINER	518912
22	1	PIN RETAINER	518915
23	2	PIN RETAINER	519653
24	4	HEX NUT W/NYLOCK	518169
25	1	HEX NUT W/NYLOCK	518171
26	1	MRX 150 CC LOWER	519654
27	1	MRX 150 CC UPPER	519655
28	2	SPACER SHIM	519541
29	2	COVER PLATE	519656
30	2	BLADE MACHINING	See "MRX Blade Kits" on page 85
31	1	BLADE SHIM	See "MRX Blade Kits" on page 85


PULVERIZER JAW

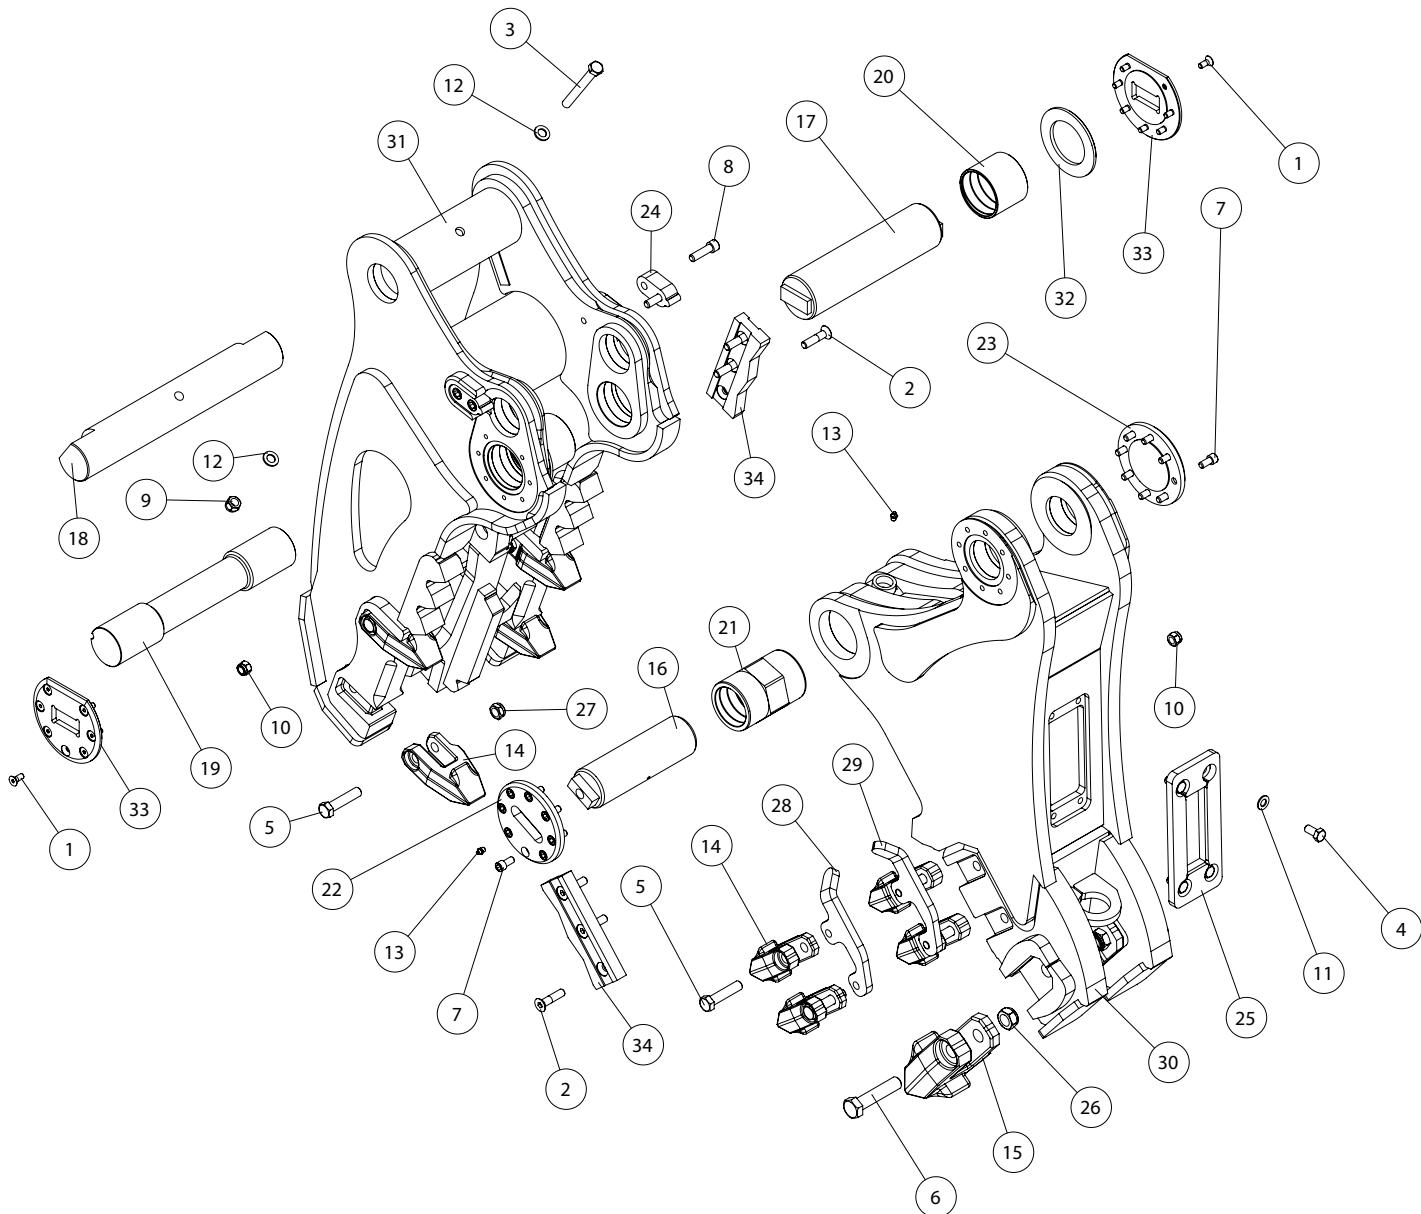

MRX150 Pulverizer Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	519569
2	6	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
3	1	HEX HEAD CAPSCREW	518614
4	4	HEX HEAD CAPSCREW	518195
5	8	HEX HEAD CAPSCREW	518169
6	2	HEX HEAD CAPSCREW	518170
7	16	SOCKET HEAD CAPSCREW	519155

MRX150 Pulverizer Jaw Parts Illustration			
Item	Qty	Description	Part Number
8	4	SOCKET HEAD CAPSCREW	519649
9	1	HEX NUT W/NYLOCK	518419
10	6	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85
11	4	FLAT WASHER	518202
12	2	FLAT WASHER	518304
13	2	GREASE ZERK	518203
14	8	CUTTING EDGE	518169
15	2	CUTTING EDGE	518170
16	1	PIN MACHINING	519537
17	1	PIN MACHINING	519539
18	1	PIN MACHINING	519650
19	1	PIN MACHINING	519695
20	2	BEARING MACHINING	518911
21	1	BEARING MACHINING	519540
22	1	PIN RETAINER	518912
23	1	PIN RETAINER	518915
24	2	PIN RETAINER	519653
25	1	COVER PLATE	518646
26	2	HEX NUT W/NYLOCK	518170
27	4	HEX NUT W/NYLOCK	518169
28	1	CUTTING EDGE	See "MRX Wear Kits" on page 86
29	1	CUTTING EDGE	See "MRX Wear Kits" on page 86
30	1	MRX 150 CP UPPER	519659
31	1	MRX 150 CP LOWER	519661
32	2	SPACER SHIM	519541
33	2	COVER PLATE	519656
34	2	CUTTING EDGE	See "MRX Blade Kits" on page 85


SHEAR JAW

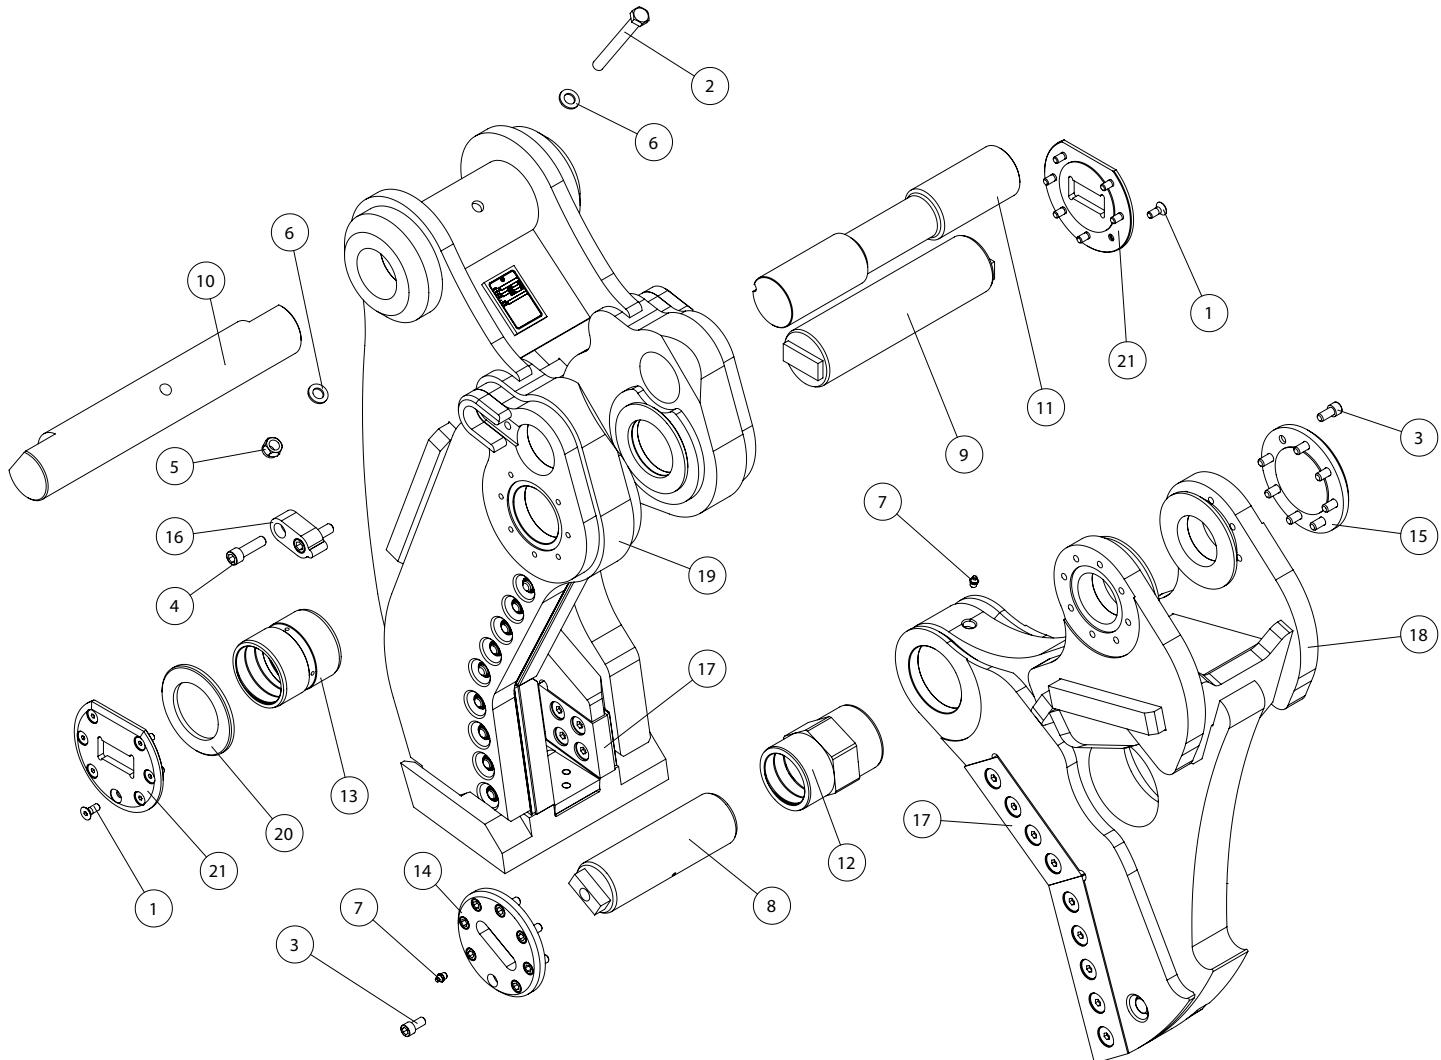

MRX150 Shear Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	519569
2	1	HEX HEAD CAPSCREW	518417
3	16	SOCKET HEAD CAPSCREW	519155
4	4	SOCKET HEAD CAPSCREW	519649
5	1	HEX NUT W/NYLOCK	518419
6	2	FLAT WASHER	518304
7	2	GREASE ZERK	518203
8	1	PIN MACHINING	519537
9	1	PIN MACHINING	519539
10	1	PIN MACHINING	519650
11	1	PIN MACHINING	519652
12	1	BEARING MACHINING	519540
13	1	BEARING MACHINING	519542
14	1	PIN RETAINER	518912
15	1	PIN RETAINER	518915
16	2	PIN RETAINER	519653
17	1	BLADE KIT	519383
18	1	MRX 150 SH LOWER	519662
19	1	MRX 150 SH UPPER	519663
20	2	SPACER SHIM	519541
21	2	COVER PLATE	519656

MRX200

BODY

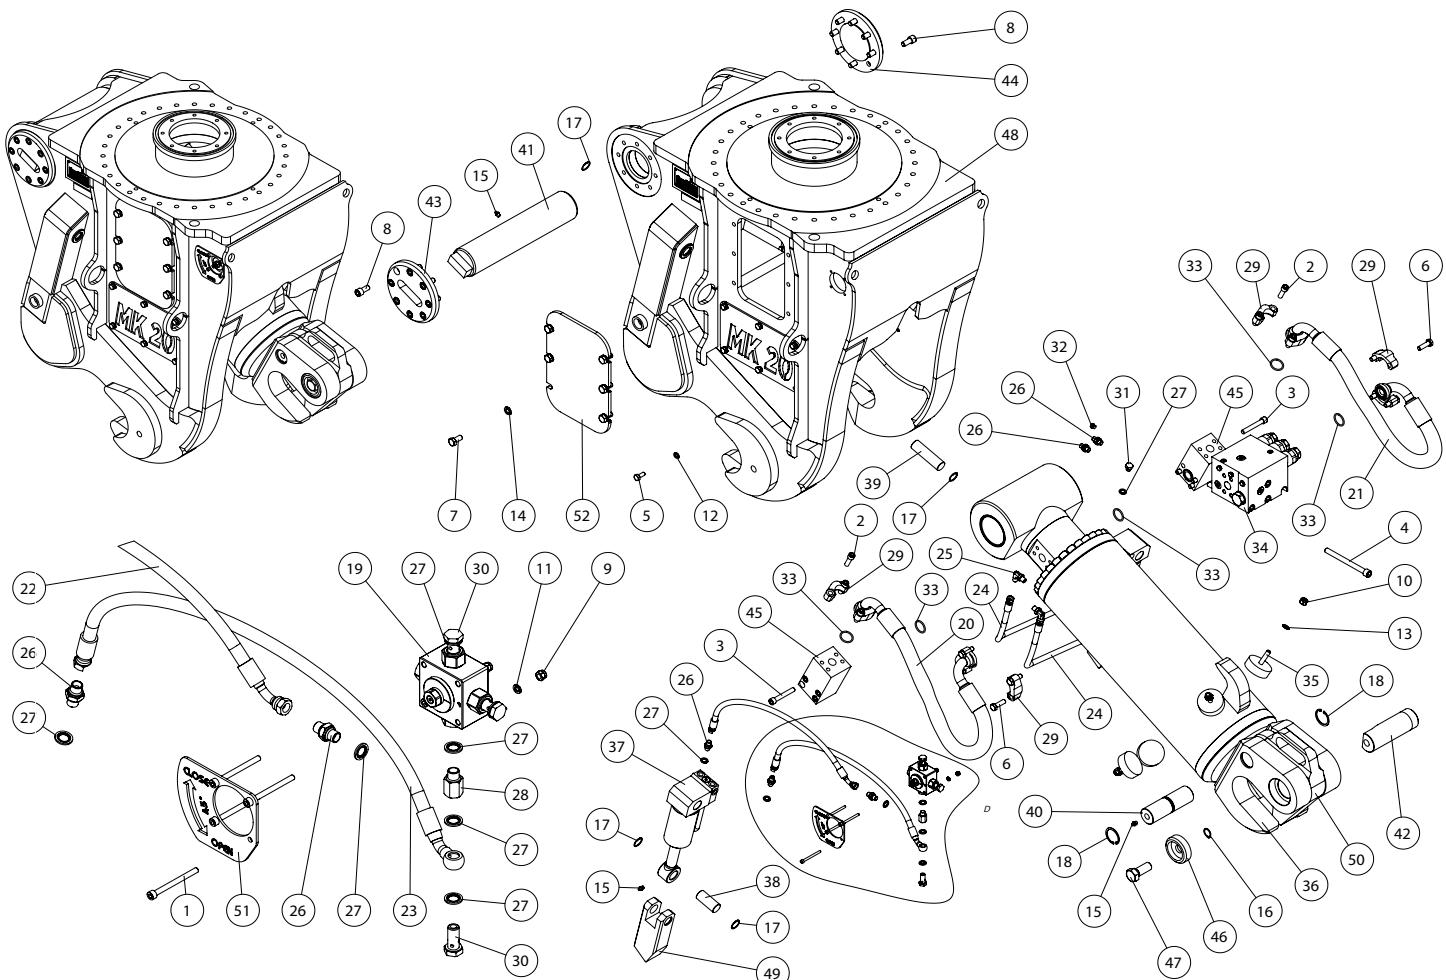


MRX200 Body Parts Illustration

Item	Qty	Description	Part Number
1	4	SOCKET HEAD CAPSCREW	518361
2	8	SOCKET HEAD CAPSCREW	518186
3	8	SOCKET HEAD CAPSCREW	518187
4	4	SOCKET HEAD CAPSCREW	518188
5	12	HEX HEAD CAPSCREW	518192
6	8	HEX HEAD CAPSCREW	518193
7	12	HEX HEAD CAPSCREW	518195
8	16	HEX NUT W/NYLOCK	518198
9	4	HEX NUT W/NYLOCK	518350
10	4	HEX NUT W/NYLOCK	518351
11	4	FLAT WASHER	518352
12	12	FLAT WASHER	518353
13	4	FLAT WASHER	518354


MRX200 Body Parts Illustration			
Item	Qty	Description	Part Number
14	12	FLAT WASHER	518355
15	4	GREASE ZERK	518203
16	1	C CLIP	518357
17	8	C CLIP	518358
18	2	C CLIP	518359
19	1	VALVE SWITCH	518360
20	1	HOSE ASSEMBLY	518362
21	1	HOSE ASSEMBLY	518363
22	1	HYDRAULIC HOSE	518364
23	1	HYDRAULIC HOSE	518365
24	2	HYDRAULIC HOSE	518366
25	4	HOSE ADAPTOR	518367
26	5	HOSE ADAPTOR	518368
27	14	FLAT WASHER	518308
28	1	EXTENSION ADAPTOR	518369
29	8	SPLIT FLANGE HALF	518204
30	3	HYDRAULIC ADAPTOR PLUG	518370
31	2	HYDRAULIC ADAPTOR PLUG	518310
32	1	HYDRAULIC ADAPTOR PLUG	518371
33	8	O RING SEAL	518205
34	1	MACHINING MANIFOLD	518208
35	4	DAMPENER	518374
36	1	CYLINDER ASSEMBLY	518375
37	2	CYLINDER ASSEMBLY	518376
38	2	MACHINED PIN	518377
39	2	MACHINED PIN	518378
40	1	MACHINED PIN	518379
41	1	BEARING MACHINING	518214
42	1	MACHINED PIN	518380
43	1	PIN RETAINER	518217
44	1	PIN RETAINER	518218
45	2	MANIFOLD MACHINING	518220
46	1	FLAT WASHER	518381
47	1	HEX HEAD CAPSCREW	518382
48	1	MRX200 STICK	518383
49	2	CUTTING EDGE	518384
50	1	CYLINDER RETAINER	518385
51	1	OPEN CLOSE PLATE	518386
52	2	COVER PLATE	518226

ROTATION

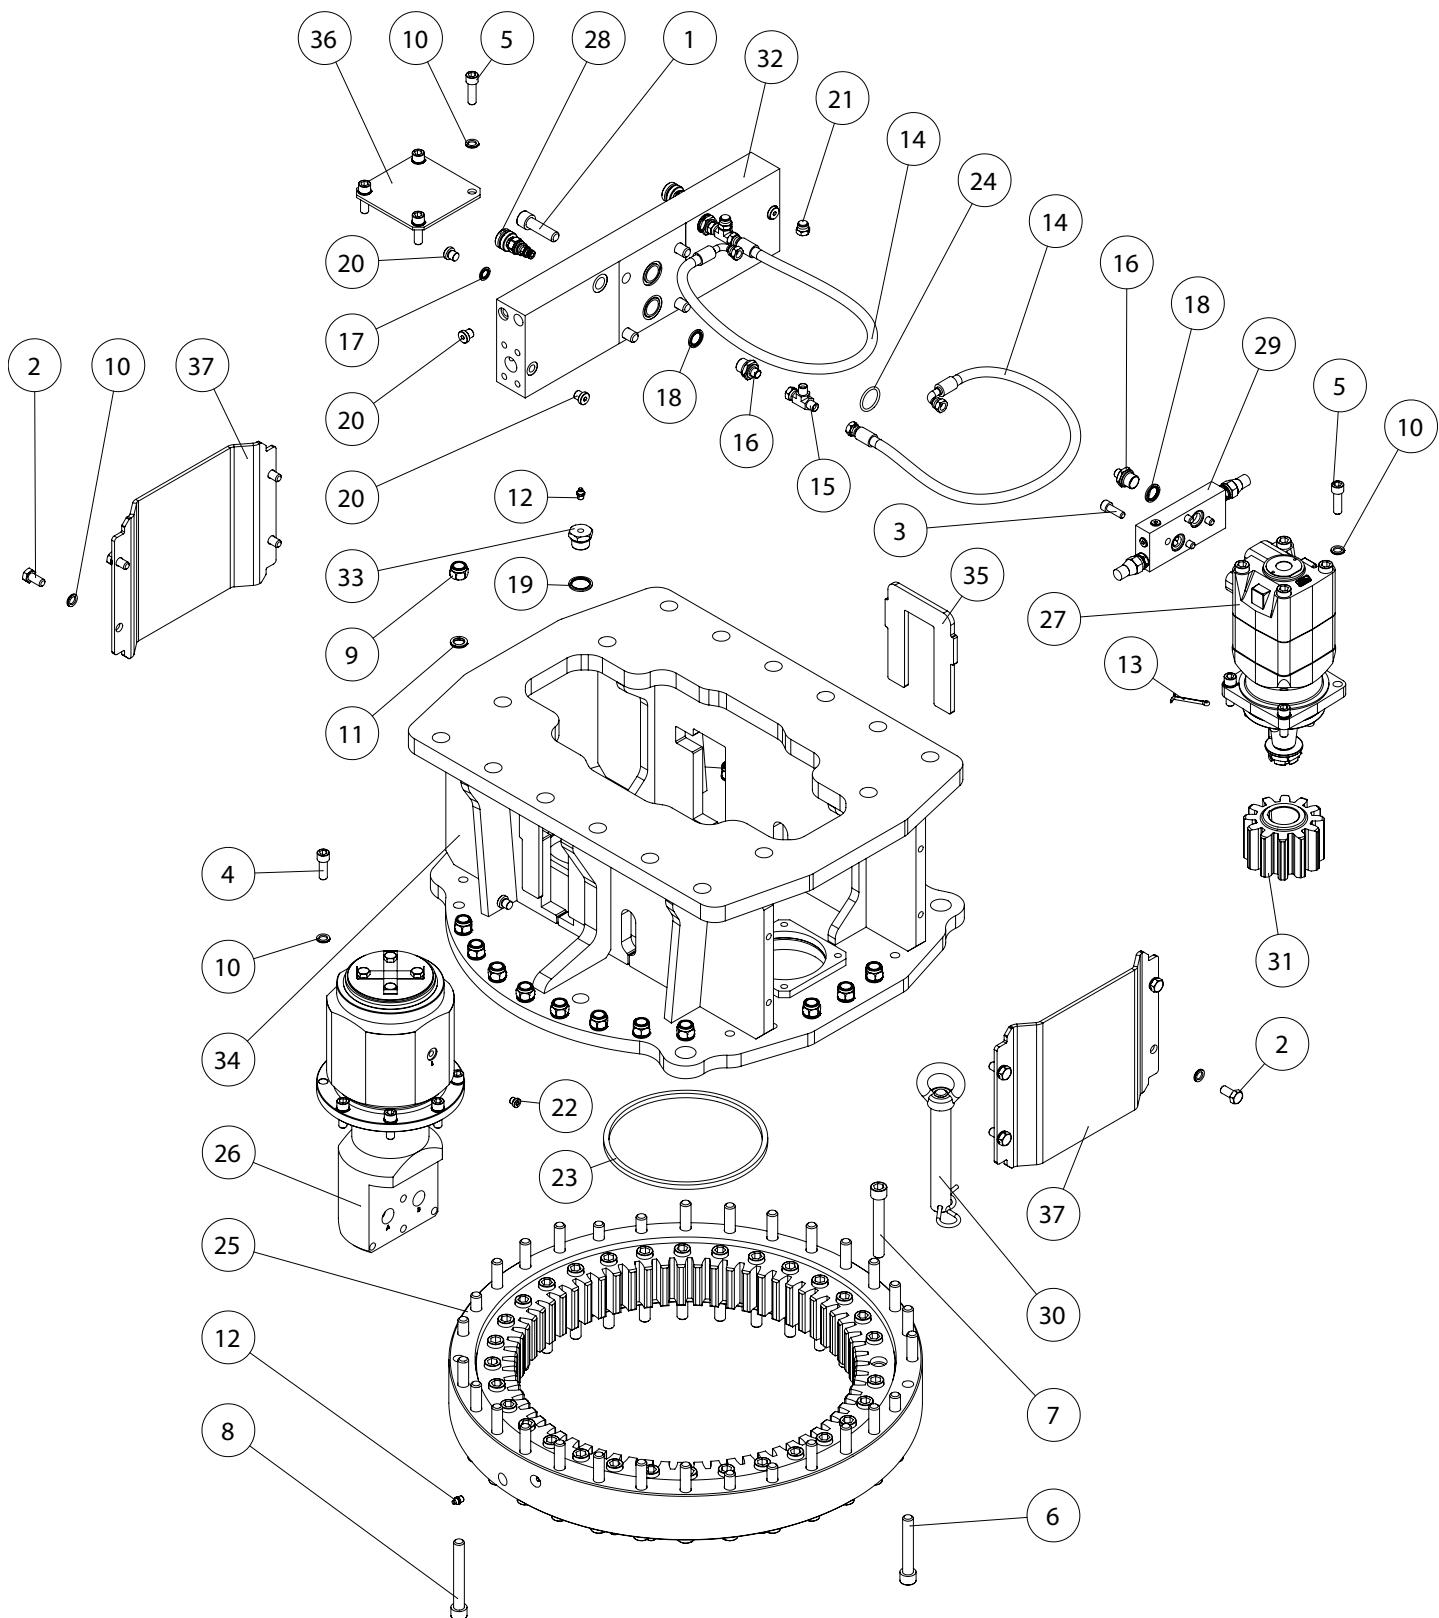


MRX200 Rotation Parts Illustration			
Item	Qty	Description	Part Number
1	4	SOCKET HEAD CAPSCREW	518705
2	8	HEX HEAD CAPSCREW	518706
3	4	SOCKET HEAD CAPSCREW	518707
4	8	SOCKET HEAD CAPSCREW	518708
5	8	SOCKET HEAD CAPSCREW	518709
6	8	SOCKET HEAD CAPSCREW	518711
7	32	SOCKET HEAD CAPSCREW	518712
8	24	SOCKET HEAD CAPSCREW	518743
9	24	HEX NUT W/NYLOCK	518199
10	24	FLAT WASHER	518354
11	24	FLAT WASHER	518714
12	6	GREASE ZERK	518203
13	1	COTTER (SPLIT) PIN	518715
14	2	HYDRAULIC HOSE	518744
15	2	HOSE ADAPTOR	518745
16	4	HOSE ADAPTOR	518746
17	2	FLAT WASHER	518308
18	4	FLAT WASHER	518720
19	2	FLAT WASHER	518721
20	8	HYDRAULIC ADAPTOR PLUG	518397
21	2	HYDRAULIC ADAPTOR PLUG	518747
22	1	HYDRAULIC ADAPTOR PLUG	518371
23	1	8x8 mm GASKET	518724
24	2	O RING SEAL	518205
25	1	TURN TABLE BEARING	518749
26	1	HYDRAULIC DISTRIBUTOR	518726
27	1	HYDRAULIC MOTOR	518727
28	2	HYDRAULIC ADAPTOR	518728
29	1	MANIFOLD MACHINING	518730
30	1	HITCH PIN	518731
31	1	PINION GEAR	518732
32	1	MANIFOLD MACHINING	518733
33	2	HYDRAULIC ADAPTOR PLUG	518734
34	1	UPPERHEAD WELDMENT MACHINING	518750
35	2	SIDE PLATE	518737
36	1	COVER PLATE	518738
37	2	FORMED COVER PLATE	518751

CRACKER JAW

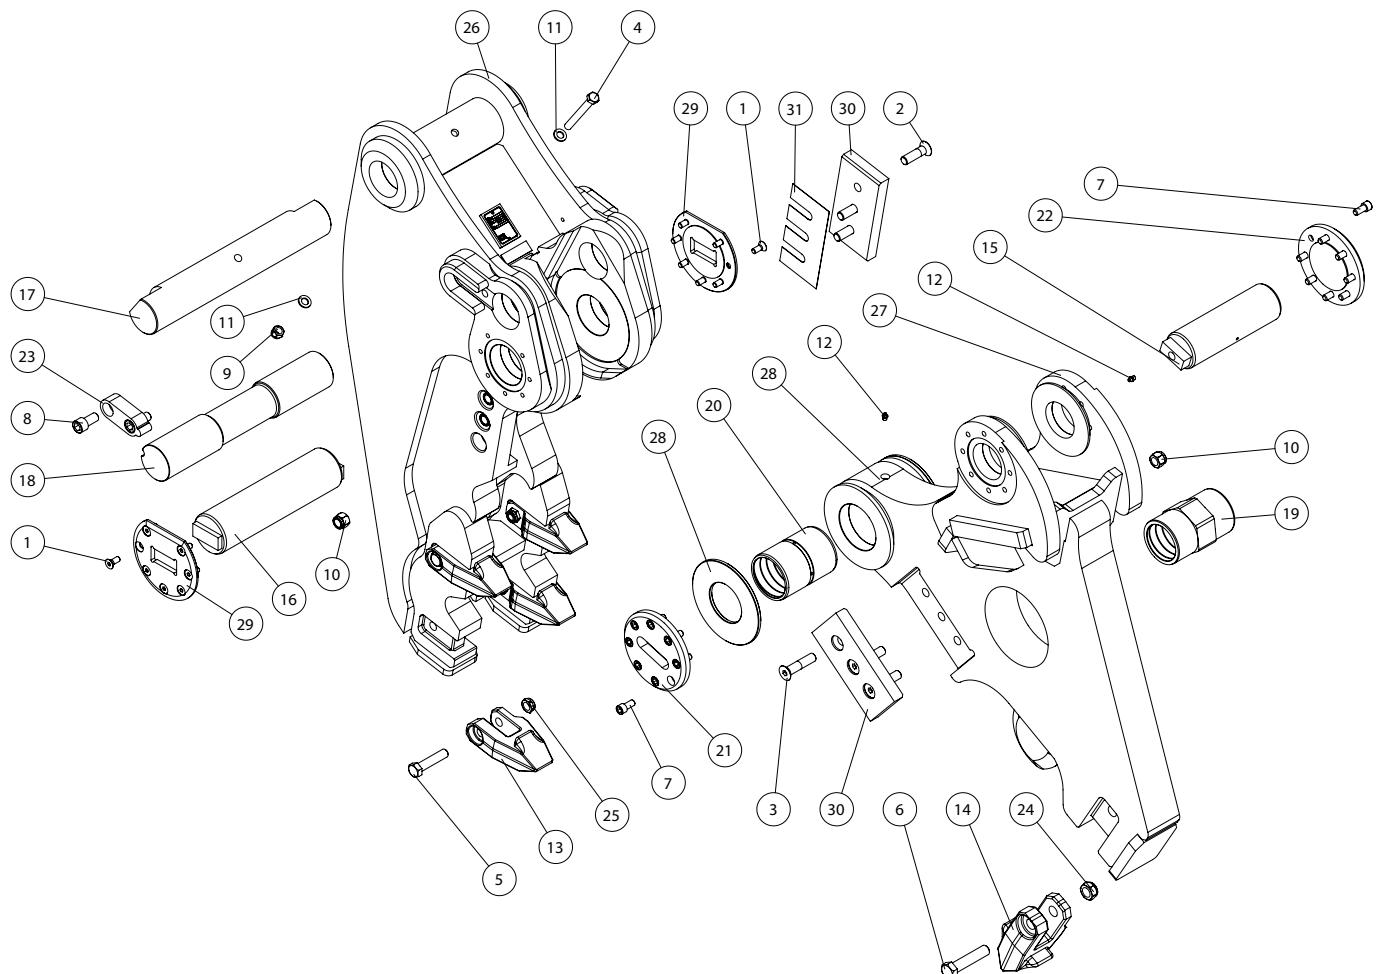


MRX200 Cracker Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	518416
2	3	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
3	3	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
4	1	HEX HEAD CAPSCREW	518614
5	4	HEX HEAD CAPSCREW	518171
6	1	HEX HEAD CAPSCREW	518170
7	16	HEX NUT W/NYLOCK	518198
8	4	HEX HEAD CAPSCREW	518433
9	1	HEX NUT W/NYLOCK	518419
10	6	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85
11	2	FLAT WASHER	518304
12	2	GREASE ZERK	518203
13	4	CUTTING EDGE	518171
14	1	CUTTING EDGE	518170
15	1	PIN MACHINING	518420
16	1	PIN MACHINING	518421
17	1	PIN MACHINING	518422
18	1	PIN MACHINING	518423
19	1	BEARING MACHINING	518424
20	1	BEARING MACHINING	518620
21	1	PIN RETAINER	518217
22	1	PIN RETAINER	518218
23	2	PIN RETAINER	518426
24	1	HEX NUT W/NYLOCK	518170
25	4	HEX NUT W/NYLOCK	518171
26	1	LOWER WELDMENT MACHINING	518623
27	1	UPPER WELDMENT MACHINING	518624
28	2	SPACER SHIM	518429
29	2	SPACER SHIM	518430
30	2	BLADE MACHINING	See "MRX Blade Kits" on page 85
31	1	BLADE SHIM	See "MRX Blade Kits" on page 85

PULVERIZER JAW

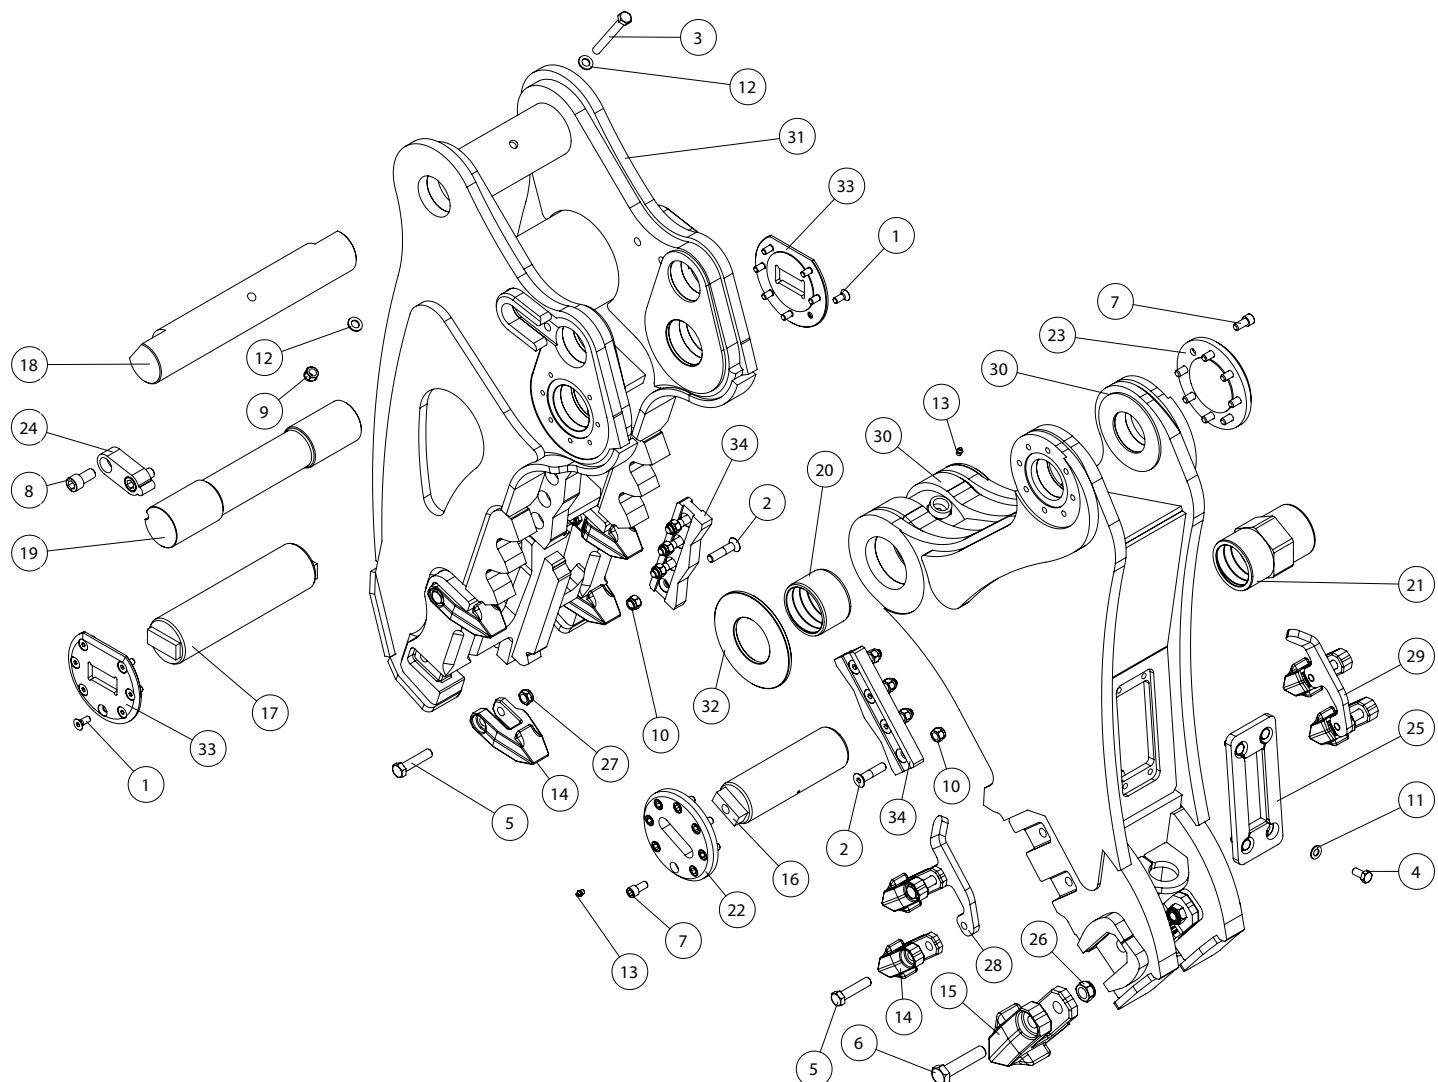

MRX200 Pulverizer Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	518416
2	8	HEX HEAD CAPSCREW	See "MRX Blade Kits" on page 85
3	1	HEX HEAD CAPSCREW	518614
4	4	HEX HEAD CAPSCREW	518195
5	8	HEX HEAD CAPSCREW	518169
6	2	HEX HEAD CAPSCREW	518170
7	16	HEX NUT W/NYLOCK	518198
8	4	HEX HEAD CAPSCREW	518433
9	1	HEX NUT W/NYLOCK	518419
10	8	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85
11	4	FLAT WASHER	518202
12	2	FLAT WASHER	518304
13	2	GREASE ZERK	518203
14	8	CUTTING EDGE	518169
15	2	CUTTING EDGE	518170
16	1	PIN MACHINING	518420
17	1	PIN MACHINING	518421
18	1	PIN MACHINING	518422
19	1	PIN MACHINING	518644
20	2	BEARING MACHINING	518645
21	1	BEARING MACHINING	518424
22	1	PIN RETAINER	518217
23	1	PIN RETAINER	518218
24	2	PIN RETAINER	518426
25	1	COVER PLATE	518646
26	2	HEX NUT W/NYLOCK	518170
27	4	HEX NUT W/NYLOCK	518169
28	1	CUTTING EDGE	518649
29	1	CUTTING EDGE	518650
30	1	UPPER WELDMENT MACHINING	518651
31	1	LOWER WELDMENT MACHINING	518652
32	2	SPACER SHIM	518429
33	2	SPACER SHIM	518430
34	2	PIN RETAINER	See "MRX Blade Kits" on page 85

SHEAR JAW

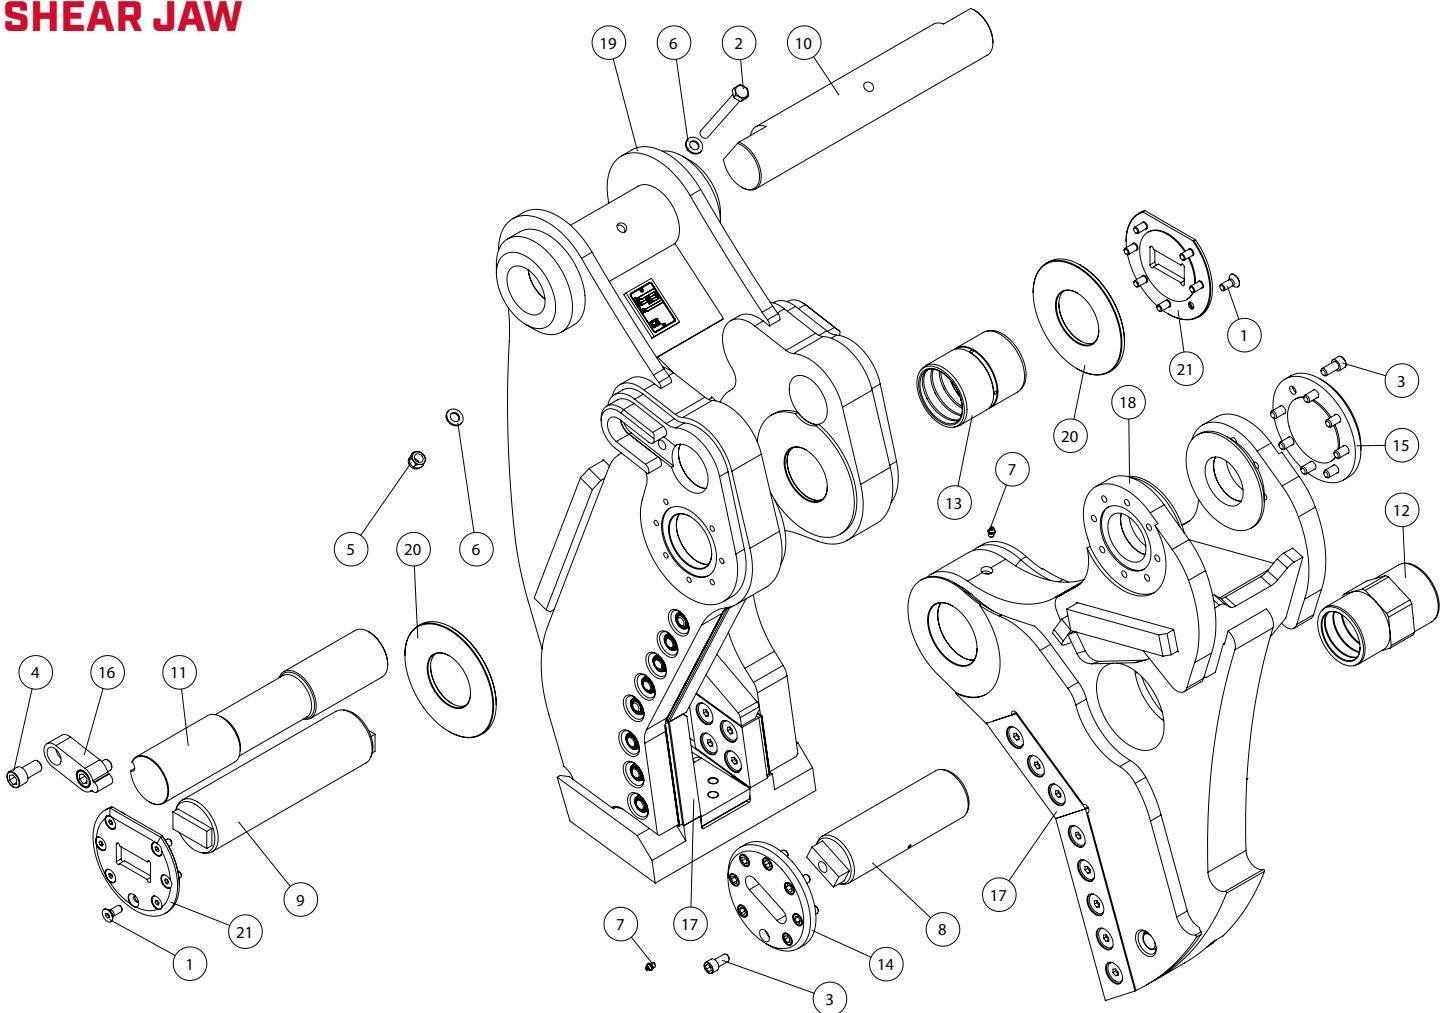

MRX200 Shear Jaw Parts Illustration


Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	518416
2	1	HEX HEAD CAPSCREW	518417
3	16	HEX NUT W/NYLOCK	518198
4	4	HEX HEAD CAPSCREW	518433
5	1	HEX NUT W/NYLOCK	518419
6	2	FLAT WASHER	518304
7	2	GREASE ZERK	518203
8	1	PIN MACHINING	518420
9	1	PIN MACHINING	518421
10	1	PIN MACHINING	518422
11	1	PIN MACHINING	518423
12	1	BEARING MACHINING	518424
13	1	BEARING MACHINING	518425
14	1	PIN RETAINER	518217

MRX200 Shear Jaw Parts Illustration

Item	Qty	Description	Part Number
15	1	PIN RETAINER	518218
16	2	PIN RETAINER	518426
17	1	MRX200 BLADE KIT	518174
18	1	UPPER WELDMENT MACHINING	518427
19	1	LOWER WELDMENT MACHINING	518428
20	2	SPACER SHIM	518429
21	2	SPACER SHIM	518430

MRX250

BODY

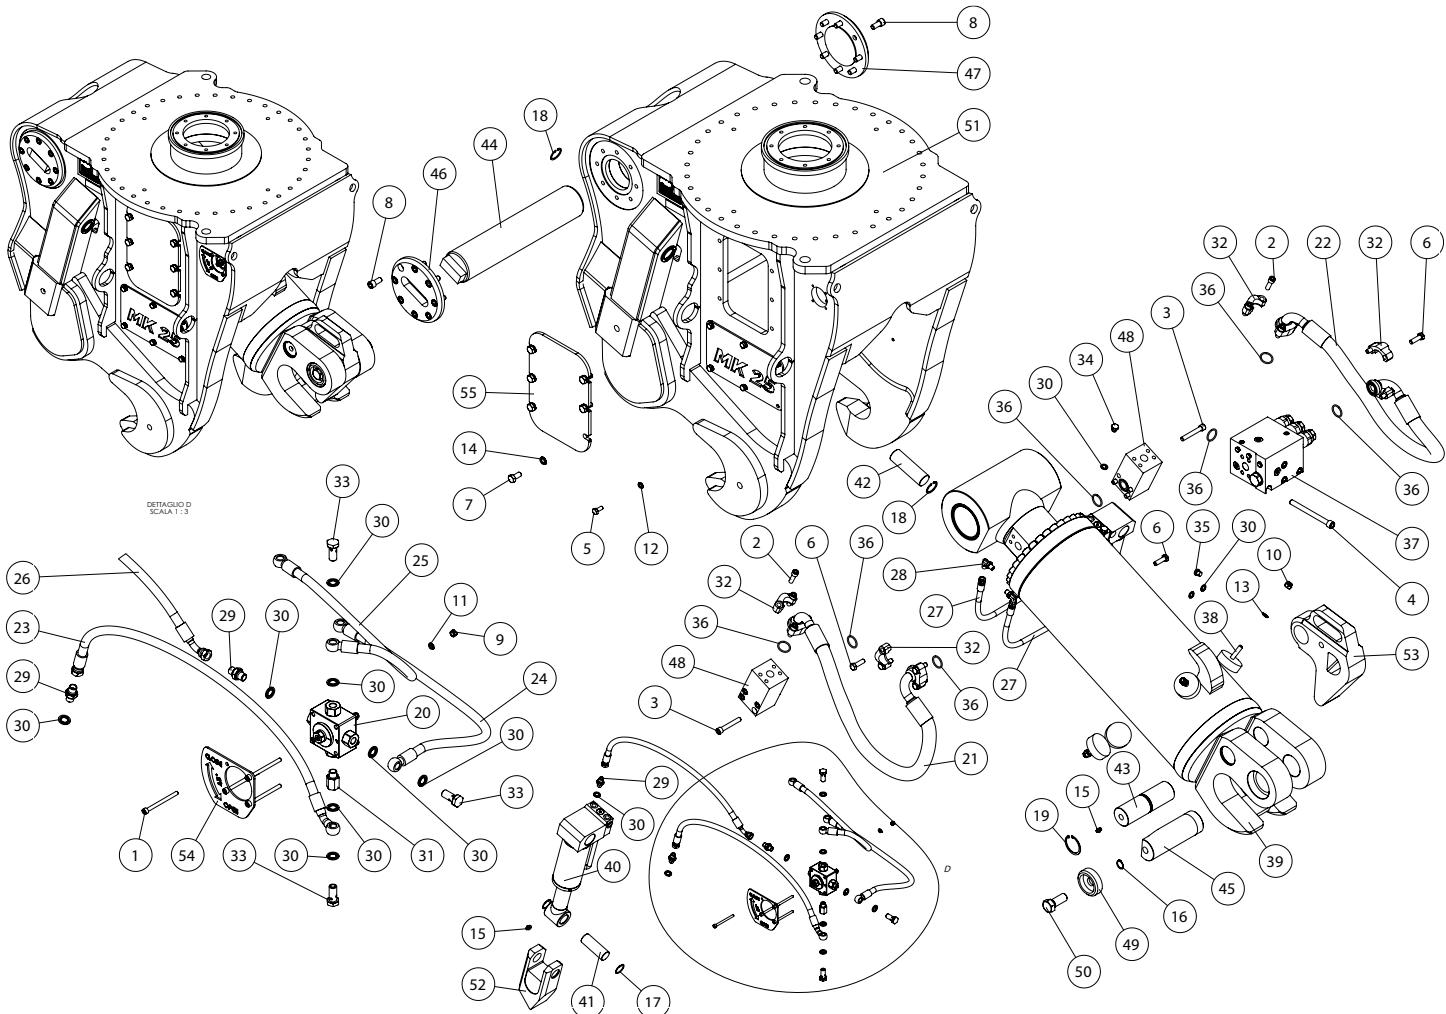


MRX250 Body Parts Illustration

Item	Qty	Description	Part Number
1	4	SOCKET HEAD CAPSCREW	518387
2	8	SOCKET HEAD CAPSCREW	518186
3	8	SOCKET HEAD CAPSCREW	518187
4	4	SOCKET HEAD CAPSCREW	518188
5	12	HEX HEAD CAPSCREW	518192
6	8	HEX HEAD CAPSCREW	518193
7	12	HEX HEAD CAPSCREW	518195
8	16	HEX NUT W/NYLOCK	518198
9	4	HEX NUT W/NYLOCK	518350
10	4	HEX NUT W/NYLOCK	518351
11	4	FLAT WASHER	518352
12	12	FLAT WASHER	518353
13	4	FLAT WASHER	518354


MRX250 Body Parts Illustration			
Item	Qty	Description	Part Number
14	12	FLAT WASHER	518355
15	3	GREASE ZERK	518203
16	1	C CLIP	518357
17	4	C CLIP	518388
18	4	C CLIP	518389
19	2	C CLIP	518390
20	1	VALVE SWITCH	518360
21	1	HOSE ASSEMBLY	518245
22	1	HOSE ASSEMBLY	518246
23	1	HYDRAULIC HOSE	518391
24	1	HYDRAULIC HOSE	518392
25	1	HYDRAULIC HOSE	518393
26	1	HYDRAULIC HOSE	518394
27	2	HYDRAULIC HOSE	518395
28	4	HOSE ADAPTOR	518367
29	3	HOSE ADAPTOR	518368
30	15	FLAT WASHER	518308
31	1	EXTENSION ADAPTOR	518369
32	8	SPLIT FLANGE HALF	518204
33	4	HYDRAULIC ADAPTOR PLUG	518370
34	2	HYDRAULIC ADAPTOR PLUG	518310
35	1	HYDRAULIC ADAPTOR PLUG	518397
36	8	O RING SEAL	518205
37	1	MACHINING MANIFOLD	518208
38	4	DAMPENER	518374
39	1	CYLINDER ASSEMBLY	518398
40	2	CYLINDER ASSEMBLY	518399
41	2	PIN MACHINING	518400
42	2	PIN MACHINING	518401
43	1	PIN MACHINING	518402
44	1	MACHINING PIN	518213
45	1	PIN MACHINING	518403
46	1	PIN RETAINER	518216
47	1	PIN RETAINER	518219
48	2	MANIFOLD MACHINING	518220
49	1	FLAT WASHER	518381
50	1	HEX HEAD CAPSCREW	518382
51	1	MRX250 STICK	518404
52	2	CUTTING EDGE	518405
53	1	CYLINDER RETAINER	518406
54	1	OPEN CLOSE PLATE	518386
55	2	COVER PLATE	518226

ROTATION

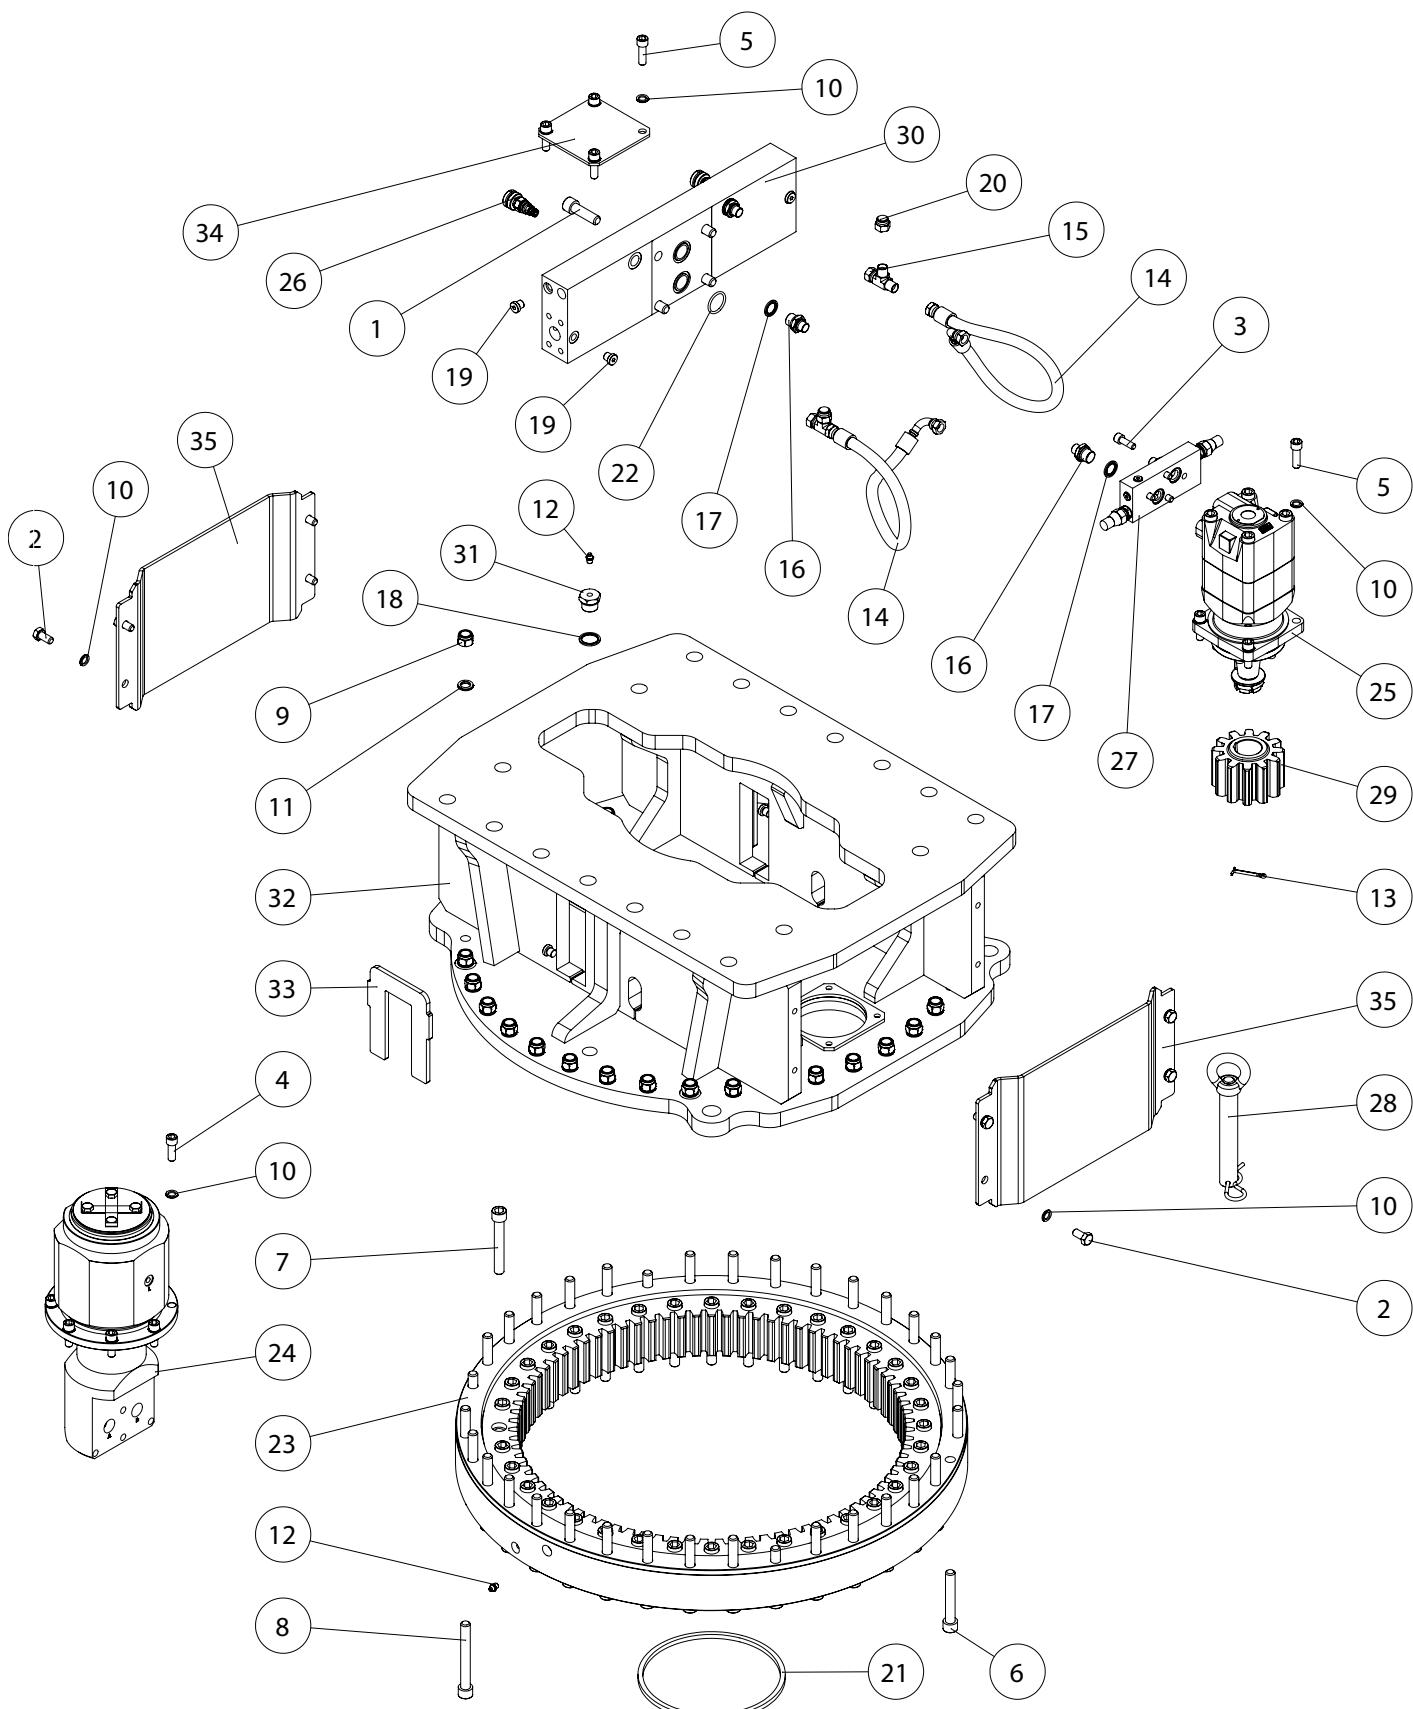


MRX250 Rotation Parts Illustration			
Item	Qty	Description	Part Number
1	4	SOCKET HEAD CAPSCREW	518705
2	8	HEX HEAD CAPSCREW	518706
3	4	SOCKET HEAD CAPSCREW	518707
4	8	SOCKET HEAD CAPSCREW	518708
5	8	SOCKET HEAD CAPSCREW	518709
6	4	SOCKET HEAD CAPSCREW	518711
7	36	SOCKET HEAD CAPSCREW	518712
8	32	SOCKET HEAD CAPSCREW	518713
9	32	HEX NUT W/NYLOCK	518199
10	24	FLAT WASHER	518354
11	32	FLAT WASHER	518714
12	6	GREASE ZERK	518203
13	1	COTTER (SPLIT) PIN	518715
14	2	HOSE ASSEMBLY	518716
15	2	HOSE ADAPTOR	518717
16	4	HOSE ADAPTOR	518718
17	4	FLAT WASHER	518720
18	2	FLAT WASHER	518721
19	7	HYDRAULIC ADAPTOR PLUG	518397
20	2	HYDRAULIC ADAPTOR PLUG	518722
21	1	8x8 mm GASKET	518724
22	2	O RING SEAL	518205
23	1	TURN TABLE BEARING	518725
24	1	HYDRAULIC DISTRIBUTOR	518726
25	1	HYDRAULIC MOTOR	518727
26	2	HYDRAULIC ADAPTOR	518728
27	1	MANIFOLD MACHINING	518730
28	1	HITCH PIN	518731
29	1	PINION GEAR	518732
30	1	MANIFOLD MACHINING	518733
31	2	HYDRAULIC ADAPTOR PLUG	518734
32	1	UPPERHEAD WELDMENT MACHINING	518736
33	2	SIDE PLATE	518737
34	1	COVER PLATE	518738
35	2	FORMED COVER PLATE	518740

CRACKER JAW

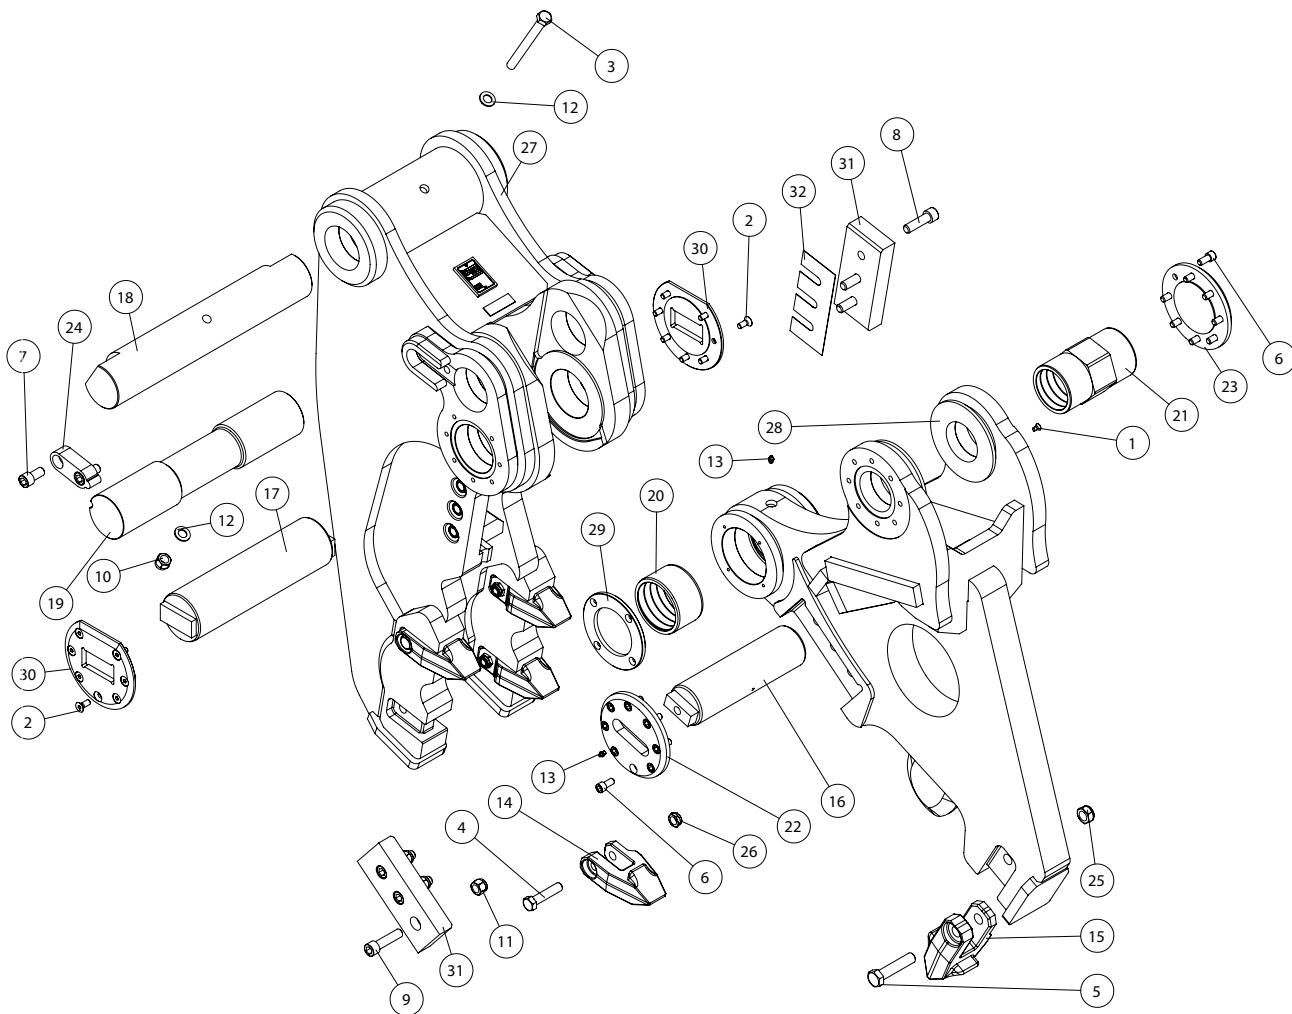

MRX250 Cracker Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	8	SOCKET HEAD CAPSCREW	518431
2	14	SOCKET HEAD CAPSCREW	518416
3	1	HEX HEAD CAPSCREW	518432
4	4	HEX HEAD CAPSCREW	518171
5	1	HEX HEAD CAPSCREW	518170
6	16	HEX NUT W/NYLOCK	518198
7	4	HEX HEAD CAPSCREW	518433
8	3	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
9	3	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
10	1	HEX NUT W/NYLOCK	518435
11	6	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85
12	2	FLAT WASHER	518436
13	2	GREASE ZERK	518203
14	4	CUTTING EDGE	518171
15	1	CUTTING EDGE	518170
16	1	PIN MACHINING	518593
17	1	PIN MACHINING	518594
18	1	PIN MACHINING	518595
19	1	PIN MACHINING	518596
20	2	BEARING MACHINING	518251
21	1	BEARING MACHINING	518597
22	1	PIN RETAINER	518216
23	1	PIN RETAINER	518219
24	2	PIN RETAINER	518426
25	1	HEX NUT W/NYLOCK	518170
26	4	HEX NUT W/NYLOCK	518171
27	1	UPPER WELDMENT MACHINING	518630
28	1	LOWER WELDMENT MACHINING	518631
29	2	SPACER SHIM	518600
30	2	SPACER SHIM	518602
31	2	BLADE MACHINING	See "MRX Blade Kits" on page 85
32	1	BLADE SHIM	See "MRX Blade Kits" on page 85


PULVERIZER JAW

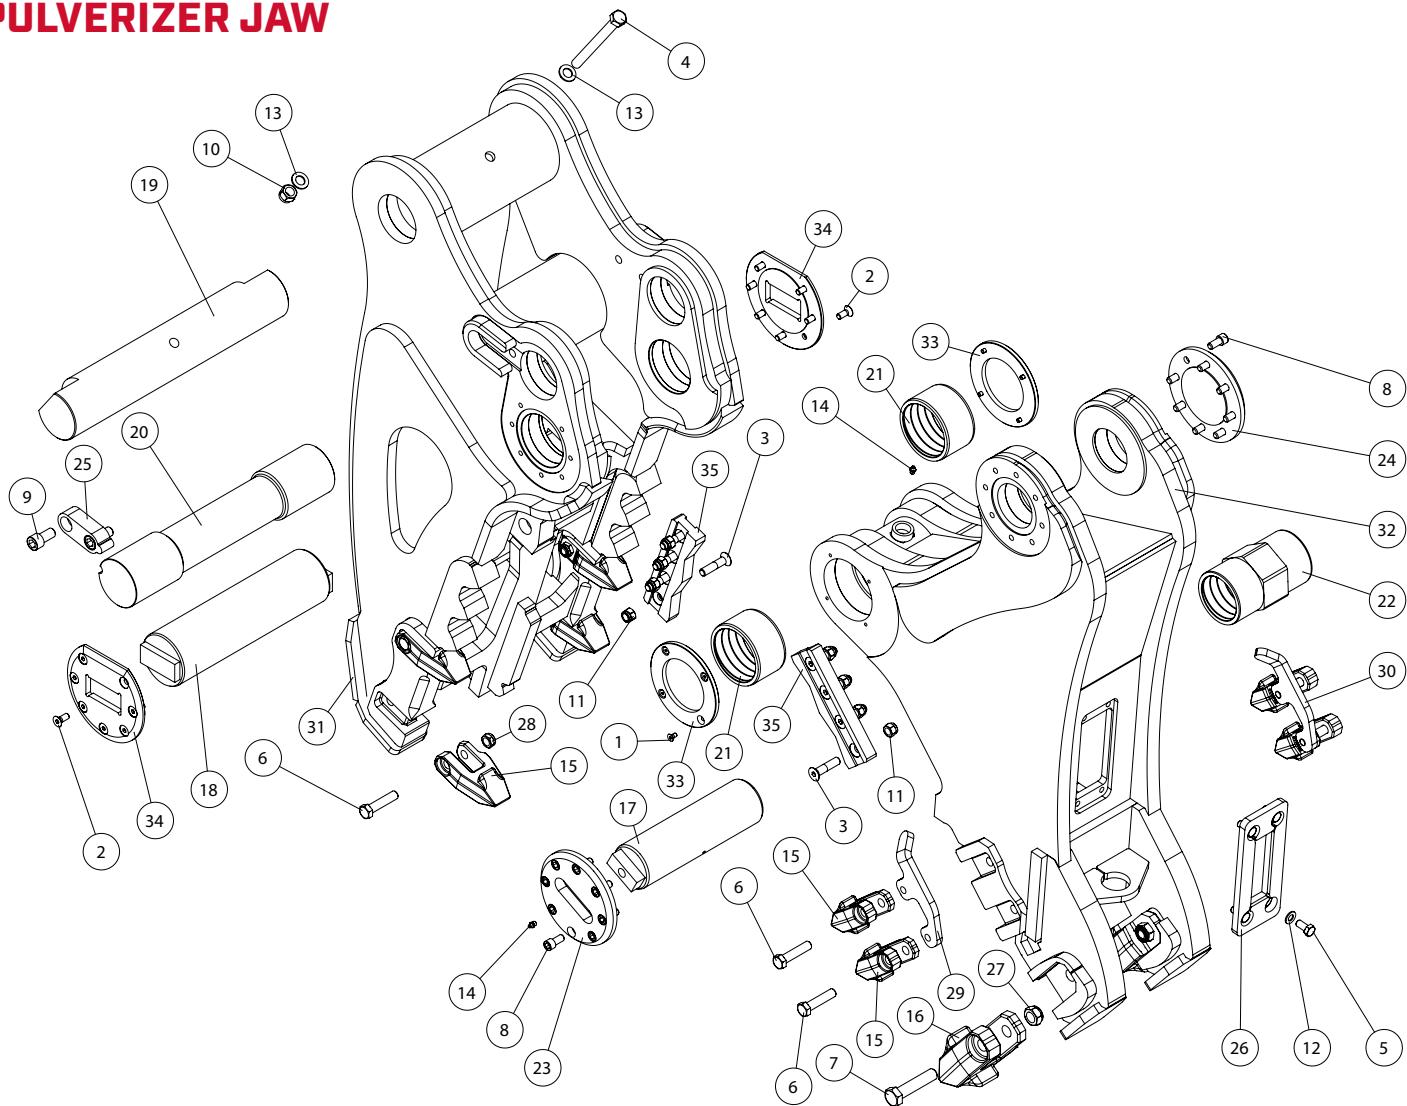

MRX250 Pulverizer Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	8	SOCKET HEAD CAPSCREW	518431
2	14	SOCKET HEAD CAPSCREW	518416
3	8	HEX HEAD CAPSCREW	See "MRX Blade Kits" on page 85
4	1	HEX HEAD CAPSCREW	518432
5	4	HEX HEAD CAPSCREW	518195
6	8	HEX HEAD CAPSCREW	518169
7	2	HEX HEAD CAPSCREW	518170
8	16	HEX NUT W/NYLOCK	518198
9	4	HEX HEAD CAPSCREW	518433
10	1	HEX NUT W/NYLOCK	518435
11	8	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85

MRX250 Pulverizer Jaw Parts Illustration			
Item	Qty	Description	Part Number
12	4	FLAT WASHER	518202
13	2	FLAT WASHER	518436
14	2	GREASE ZERK	518203
15	8	CUTTING EDGE	518169
16	2	CUTTING EDGE	518170
17	1	PIN MACHINING	518593
18	1	PIN MACHINING	518594
19	1	PIN MACHINING	518595
20	1	PIN MACHINING	518654
21	2	BEARING MACHINING	518251
22	1	BEARING MACHINING	518597
23	1	PIN RETAINER	518216
24	1	PIN RETAINER	518219
25	2	PIN RETAINER	518426
26	1	COVER PLATE	518646
27	2	HEX NUT W/NYLOCK	518170
28	4	HEX NUT W/NYLOCK	518169
29	1	CUTTING EDGE	518649
30	1	CUTTING EDGE	518650
31	1	UPPER WELDMENT MACHINING	518655
32	1	LOWER WELDMENT MACHINING	518657
33	2	SPACER SHIM	518600
34	2	SPACER SHIM	518602
35	2	PIN RETAINER	See "MRX Blade Kits" on page 85

SHEAR JAW

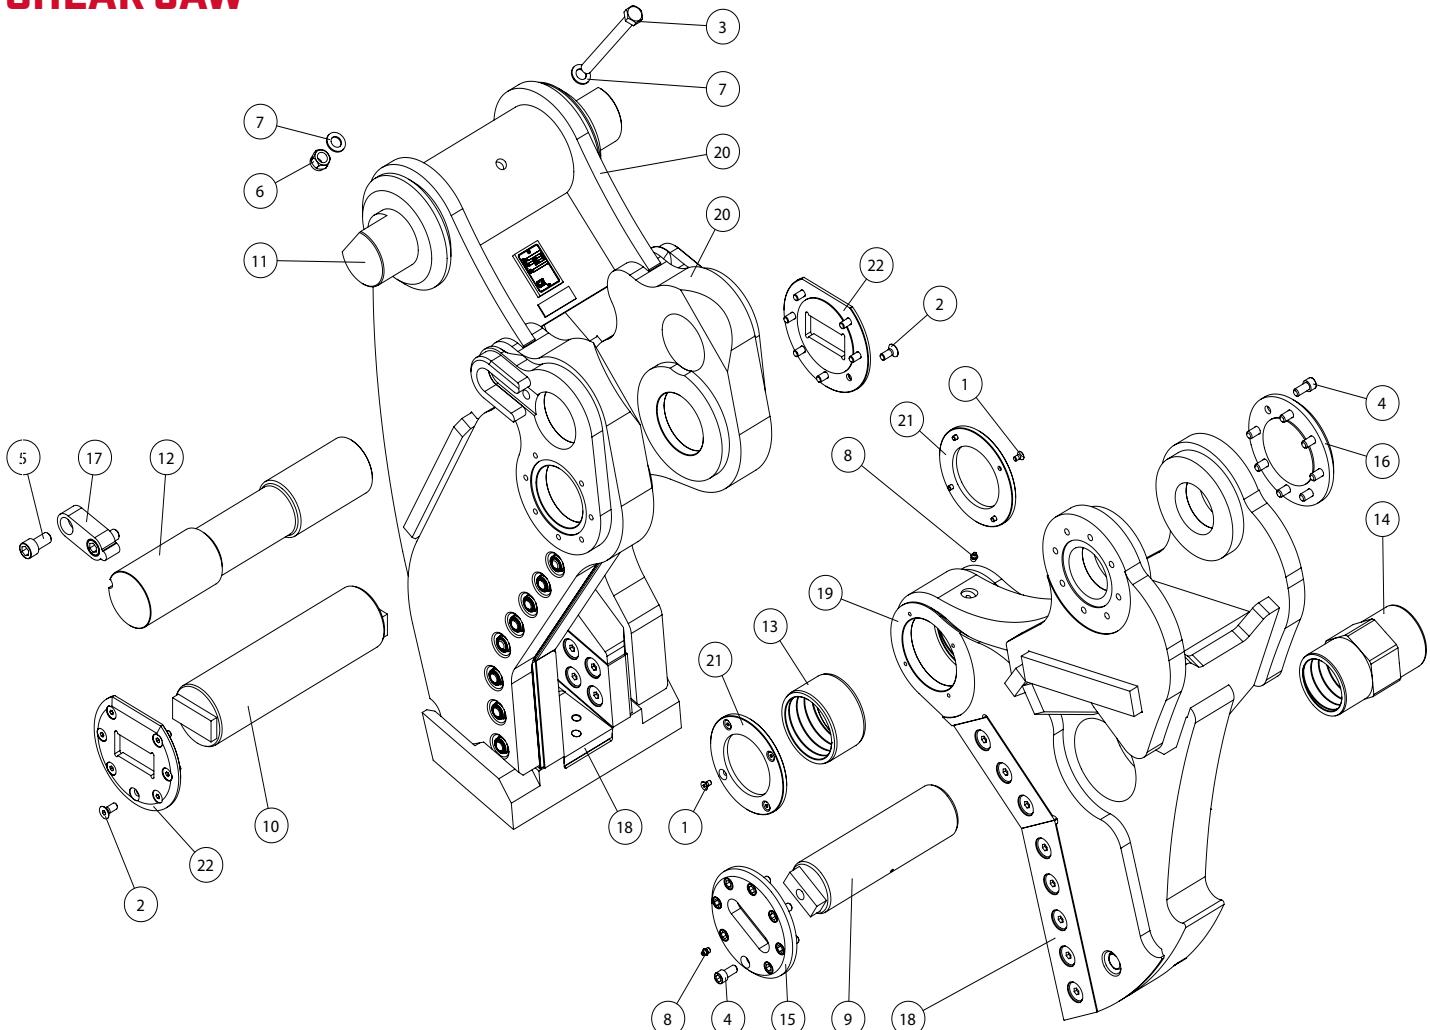


MRX250 Shear Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	8	SOCKET HEAD CAPSCREW	518431
2	14	SOCKET HEAD CAPSCREW	518416
3	1	HEX HEAD CAPSCREW	518432
4	16	HEX NUT W/NYLOCK	518198
5	4	HEX HEAD CAPSCREW	518433
6	1	HEX NUT W/NYLOCK	518435
7	2	FLAT WASHER	518436
8	2	GREASE ZERK	518203
9	1	PIN MACHINING	518593
10	1	PIN MACHINING	518594
11	1	PIN MACHINING	518595
12	1	PIN MACHINING	518596
13	2	BEARING MACHINING	518251

MRX250 Shear Jaw Parts Illustration			
Item	Qty	Description	Part Number
14	1	BEARING MACHINING	518597
15	1	PIN RETAINER	518216
16	1	PIN RETAINER	518219
17	2	PIN RETAINER	518426
18	1	MRX250 BLADE KIT	518175
19	1	UPPER WELDMENT MACHINING	518598
20	1	LOWER WELDMENT MACHINING	518599
21	2	SPACER SHIM	518600
22	2	SPACER SHIM	518602

MRX350

BODY

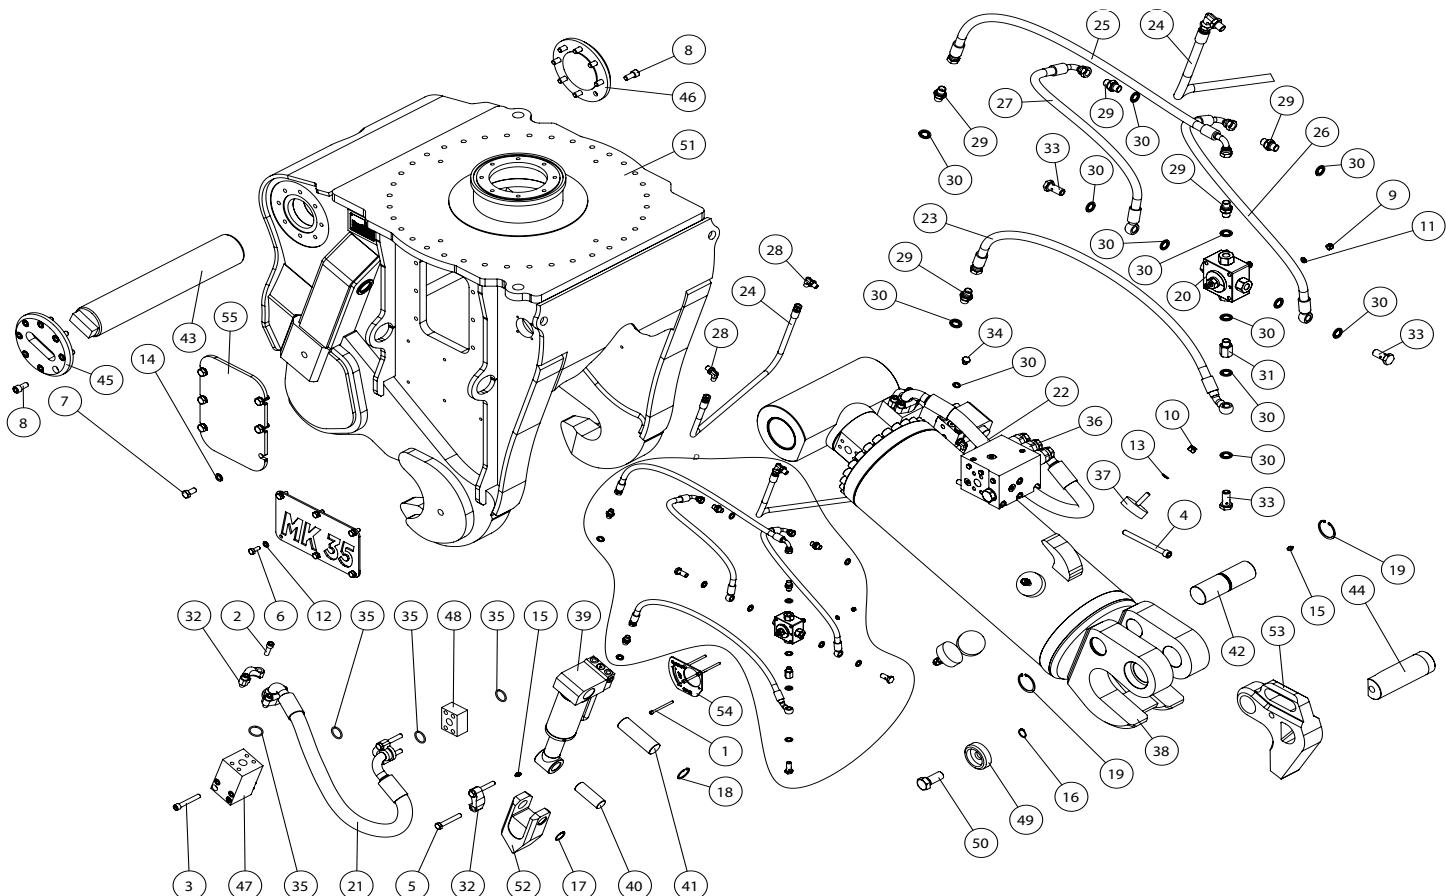


MRX350 Body Parts Illustration

Item	Qty	Description	Part Number
1	4	SOCKET HEAD CAPSCREW	518407
2	8	SOCKET HEAD CAPSCREW	518186
3	8	SOCKET HEAD CAPSCREW	518187
4	4	SOCKET HEAD CAPSCREW	518188
5	8	HEX HEAD CAPSCREW	518239
6	12	HEX HEAD CAPSCREW	518192
7	12	HEX HEAD CAPSCREW	518195
8	16	HEX NUT W/NYLOCK	518198
9	4	HEX NUT W/NYLOCK	518350
10	4	HEX NUT W/NYLOCK	518351
11	4	FLAT WASHER	518352
12	12	FLAT WASHER	518353
13	4	FLAT WASHER	518354
14	12	FLAT WASHER	518355
15	3	GREASE ZERK	518203
16	1	C CLIP	518357
17	4	C CLIP	518388


MRX350 Body Parts Illustration			
Item	Qty	Description	Part Number
18	4	C CLIP	518389
19	2	C CLIP	518390
20	1	VALVE SWITCH	518360
21	1	HOSE ASSEMBLY	518245
22	1	HOSE ASSEMBLY	518246
23	1	HYDRAULIC HOSE	518391
24	2	HYDRAULIC HOSE	518408
25	1	HYDRAULIC HOSE	518409
26	1	HYDRAULIC HOSE	518410
27	1	HYDRAULIC HOSE	518411
28	4	HOSE ADAPTOR	518367
29	5	HOSE ADAPTOR	518368
30	14	FLAT WASHER	518308
31	1	EXTENSION ADAPTOR	518369
32	8	SPLIT FLANGE HALF	518204
33	3	HYDRAULIC ADAPTOR PLUG	518370
34	2	1/4 INCH PLUG	518310
35	10	O RING SEAL	518205
36	1	MACHINING MANIFOLD	518208
37	4	DAMPENER	518374
38	1	CYLINDER ASSEMBLY	518412
39	2	CYLINDER ASSEMBLY	518399
40	2	PIN MACHINING	518400
41	2	PIN MACHINING	518401
42	1	PIN MACHINING	518402
43	1	PIN MACHINING	518269
44	1	PIN MACHINING	518403
45	1	PIN RETAINER	518216
46	1	PIN RETAINER	518219
47	2	MANIFOLD MACHINING	518220
48	2	MANIFOLD MACHINING	518256
49	1	FLAT WASHER	518381
50	1	HEX HEAD CAPSCREW	518382
51	1	MRX350 STICK	518413
52	2	CUTTING EDGE	518405
53	1	CYLINDER RETAINER	518414
54	1	OPEN CLOSE PLATE	518386
55	2	COVER PLATE	518226

ROTATION

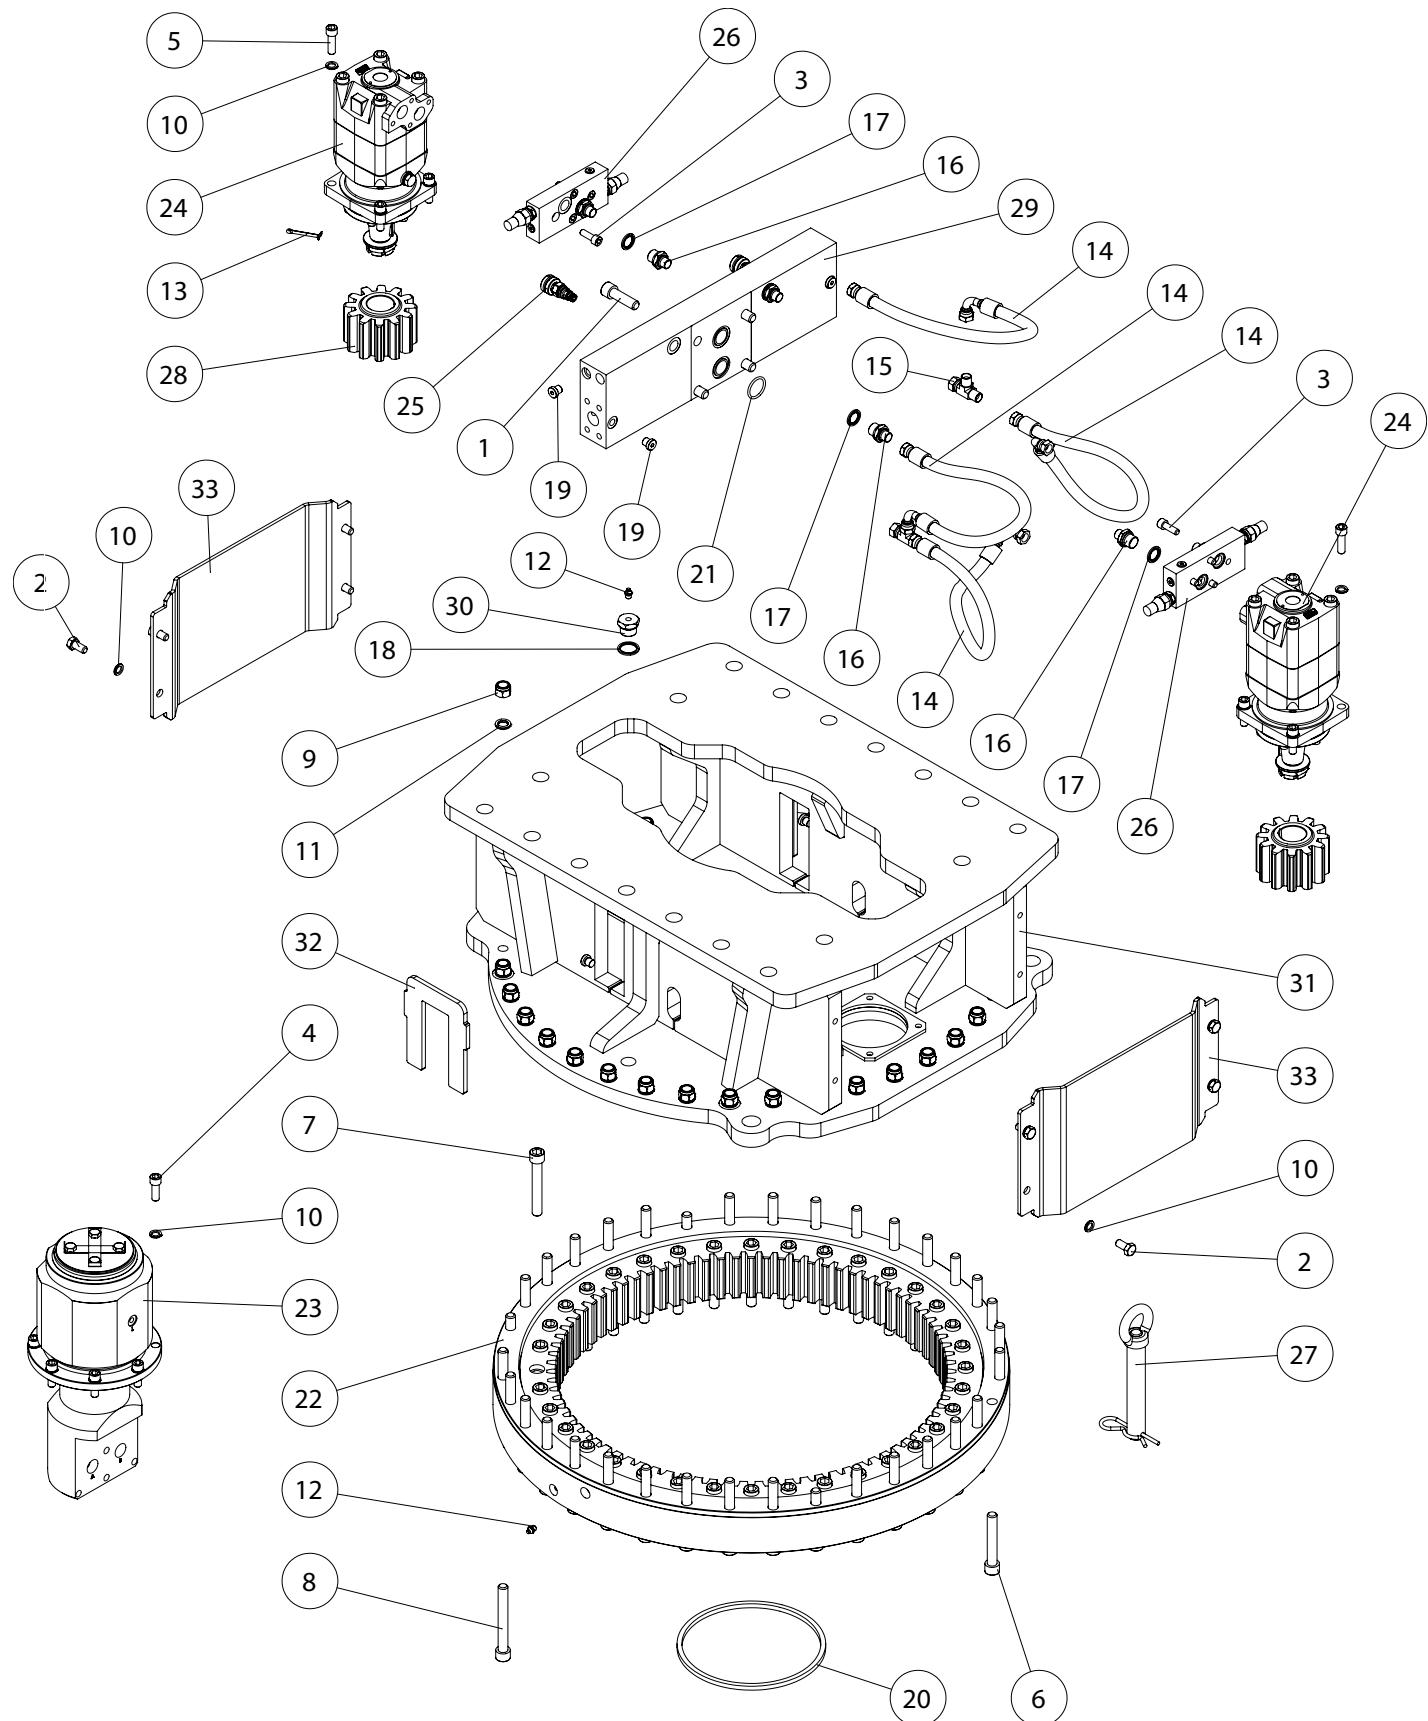


MRX350 Rotation Parts Illustration			
Item	Qty	Description	Part Number
1	4	SOCKET HEAD CAPSCREW	518705
2	8	HEX HEAD CAPSCREW	518706
3	8	SOCKET HEAD CAPSCREW	518707
4	8	SOCKET HEAD CAPSCREW	518709
5	8	SOCKET HEAD CAPSCREW	518709
6	4	SOCKET HEAD CAPSCREW	518711
7	36	SOCKET HEAD CAPSCREW	518712
8	32	SOCKET HEAD CAPSCREW	518713
9	32	HEX NUT W/NYLOCK	518199
10	24	FLAT WASHER	518354
11	32	FLAT WASHER	518714
12	6	GREASE ZERK	518203
13	2	COTTER (SPLIT) PIN	518715
14	4	HOSE ASSEMBLY	518716
15	2	HOSE ADAPTOR	518717
16	6	HOSE ADAPTOR	518718
17	6	FLAT WASHER	518720
18	2	FLAT WASHER	518721
19	7	HYDRAULIC ADAPTOR PLUG	518397
20	1	8x8 mm GASKET	518724
21	2	O RING SEAL	518205
22	1	TURN TABLE BEARING	518725
23	1	HYDRAULIC DISTRIBUTOR	518726
24	2	HYDRAULIC MOTOR	518727
25	2	HYDRAULIC ADAPTOR	518728
26	2	MANIFOLD MACHINING	518730
27	1	HITCH PIN	518731
28	2	PINION GEAR	518732
29	1	MANIFOLD MACHINING	518733
30	2	HYDRAULIC ADAPTOR PLUG	518734
31	1	UPPERHEAD WELDMENT MACHINING	518736
32	2	SIDE PLATE	518737
33	2	FORMED COVER PLATE	518740

CRACKER JAW

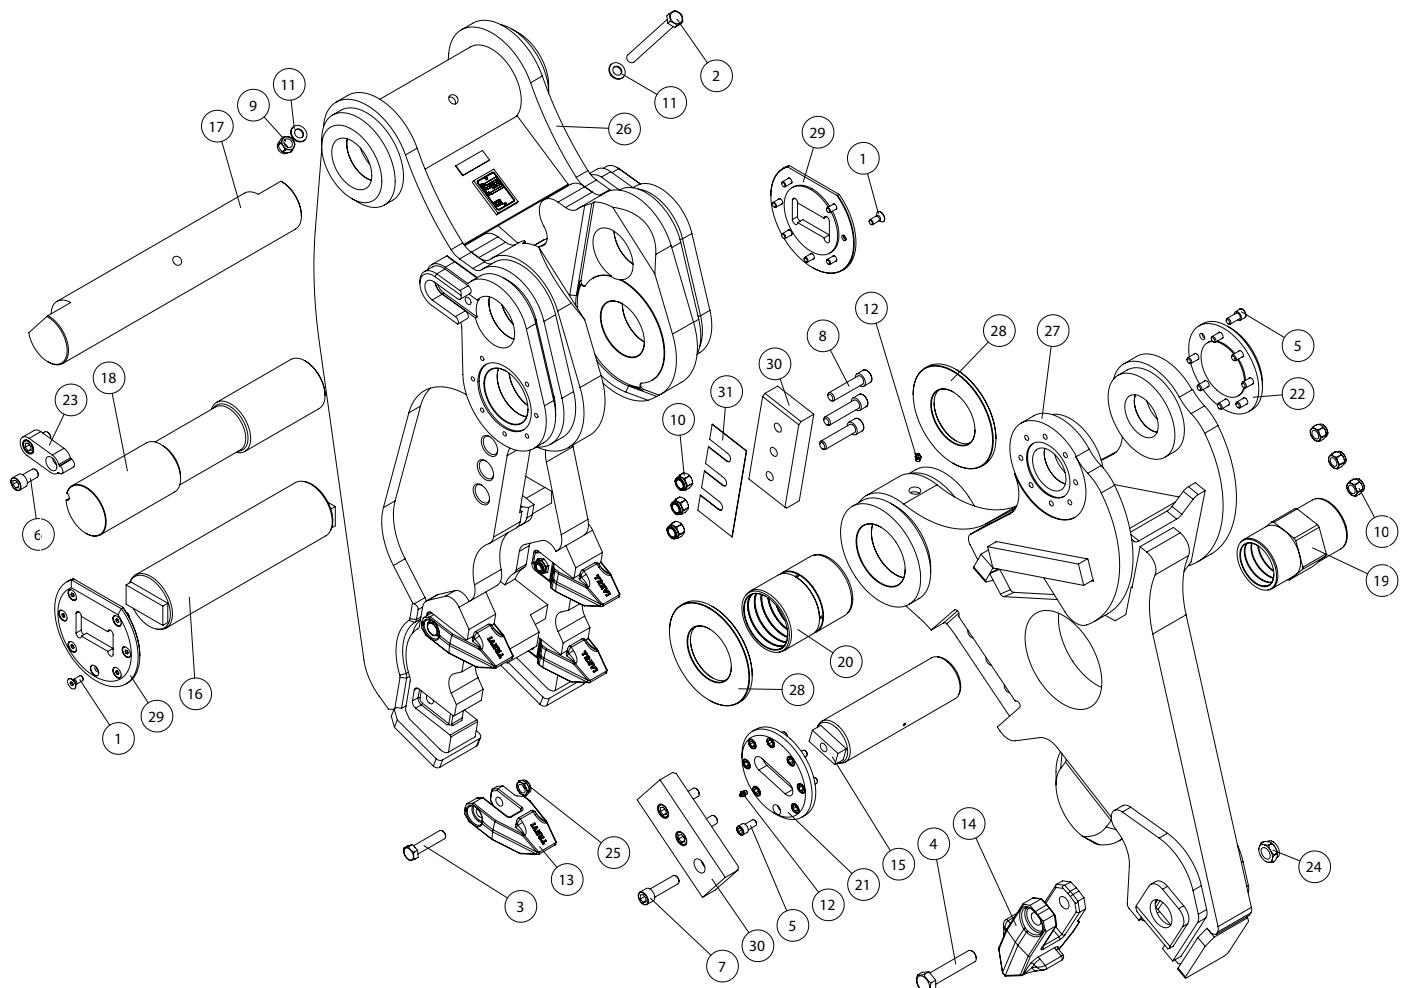

MRX350 Cracker Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	See "MRX Wear Kits" on page 86
2	1	HEX HEAD CAPSCREW	518432
3	4	HEX HEAD CAPSCREW	518171
4	1	HEX HEAD CAPSCREW	518172
5	16	HEX NUT W/NYLOCK	518198
6	4	HEX HEAD CAPSCREW	518433
7	3	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
8	3	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
9	1	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85
10	6	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85
11	2	FLAT WASHER	518436
12	2	GREASE ZERK	518203
13	4	CUTTING EDGE	518171
14	1	CUTTING EDGE	518172
15	1	PIN MACHINING	518593
16	1	PIN MACHINING	518603
17	1	PIN MACHINING	518604
18	1	PIN MACHINING	518605
19	1	BEARING MACHINING	518597
20	1	BEARING MACHINING	518637
21	1	PIN RETAINER	518216
22	1	PIN RETAINER	518219
23	2	PIN RETAINER	518426
24	1	HEX NUT W/NYLOCK	518172
25	4	HEX NUT W/NYLOCK	518171
26	1	LOWER WELDMENT MACHINING	518640
27	1	UPPER WELDMENT MACHINING	518641
28	2	SPACER SHIM	518609
29	2	SPACER SHIM	518611
30	2	BLADE MACHINING	See "MRX Blade Kits" on page 85
31	1	BLADE SHIM	See "MRX Blade Kits" on page 85


PULVERIZER JAW

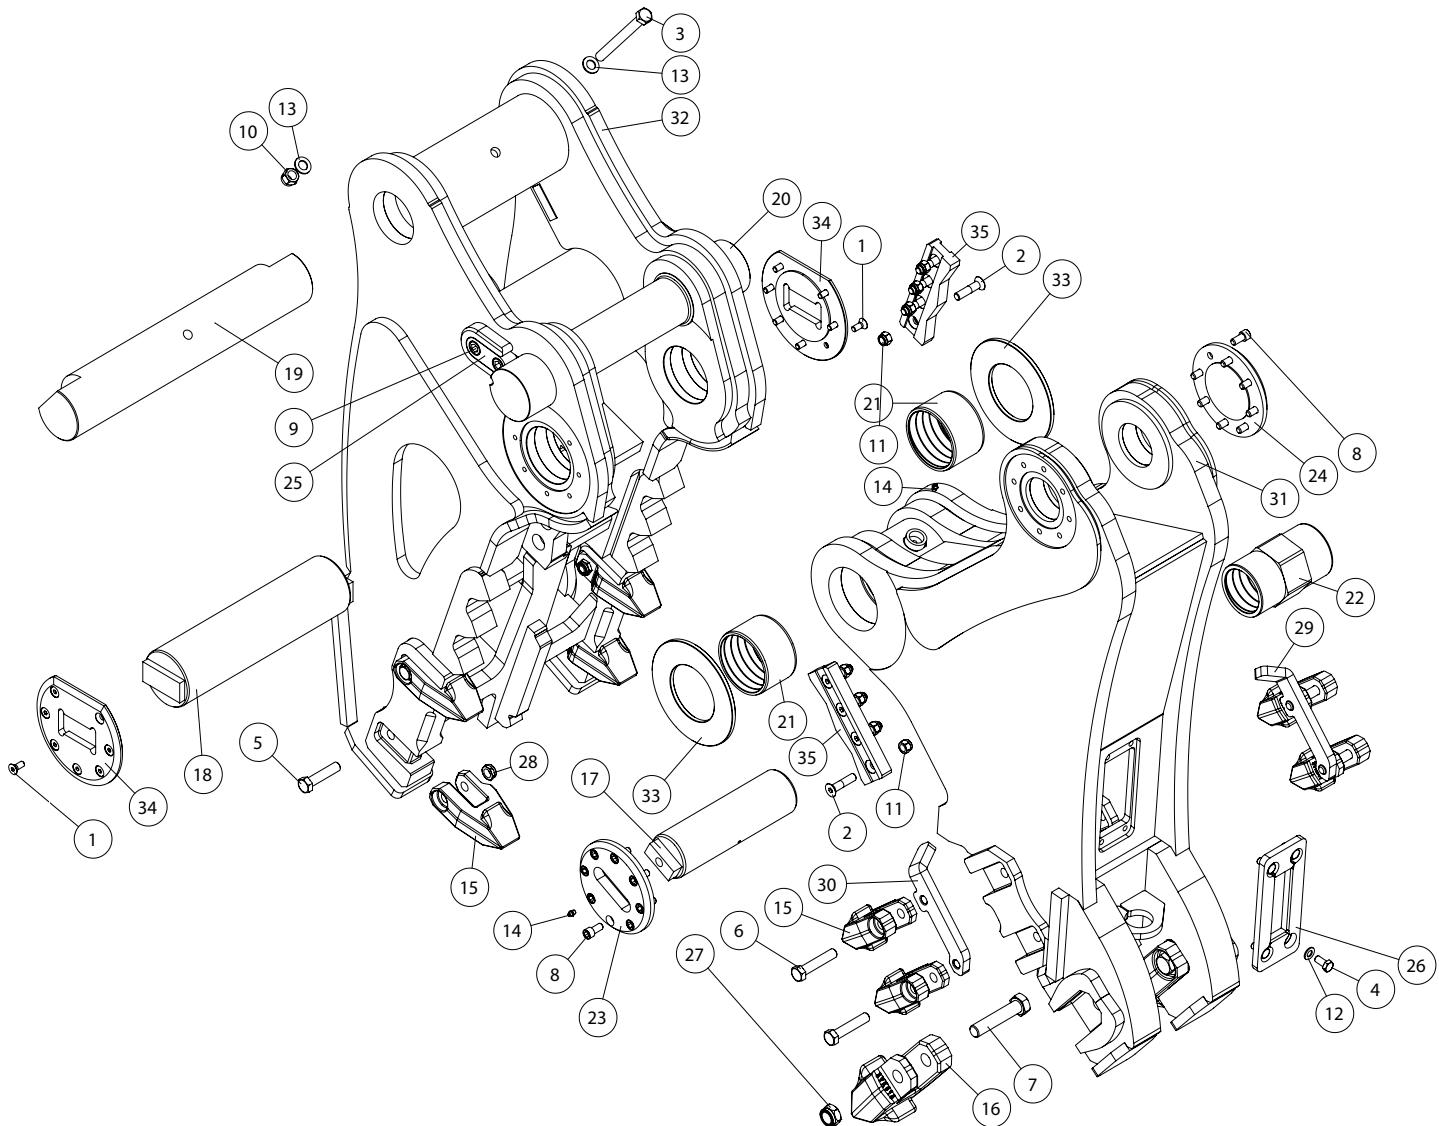

MRX350 Pulverizer Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	518416
2	8	HEX HEAD CAPSCREW	See "MRX Blade Kits" on page 85
3	1	HEX HEAD CAPSCREW	518432
4	4	HEX HEAD CAPSCREW	518195
5	4	HEX HEAD CAPSCREW	518171
6	4	HEX HEAD CAPSCREW	See "MRX Wear Kits" on page 86
7	2	HEX HEAD CAPSCREW	518172

MRX350 Pulverizer Jaw Parts Illustration			
Item	Qty	Description	Part Number
8	16	HEX NUT W/NYLOCK	518198
9	4	HEX HEAD CAPSCREW	518433
10	1	HEX NUT W/NYLOCK	518435
11	8	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85
12	4	FLAT WASHER	518202
13	2	FLAT WASHER	518436
14	2	GREASE ZERK	518203
15	8	CUTTING EDGE	518171
16	2	CUTTING EDGE	518172
17	1	PIN MACHINING	518593
18	1	PIN MACHINING	518603
19	1	PIN MACHINING	518604
20	1	PIN MACHINING	518659
21	2	BEARING MACHINING	518660
22	1	BEARING MACHINING	518597
23	1	PIN RETAINER	518216
24	1	PIN RETAINER	518219
25	2	PIN RETAINER	518426
26	1	COVER PLATE	518646
27	2	HEX NUT W/NYLOCK	518172
28	4	HEX NUT W/NYLOCK	518171
29	1	CUTTING EDGE	518661
30	1	CUTTING EDGE	518662
31	1	UPPER WELDMENT MACHINING	518663
32	1	LOWER WELDMENT MACHINING	518664
33	2	SPACER SHIM	518609
34	2	SPACER SHIM	518611
35	2	PIN RETAINER	See "MRX Blade Kits" on page 85

SHEAR JAW

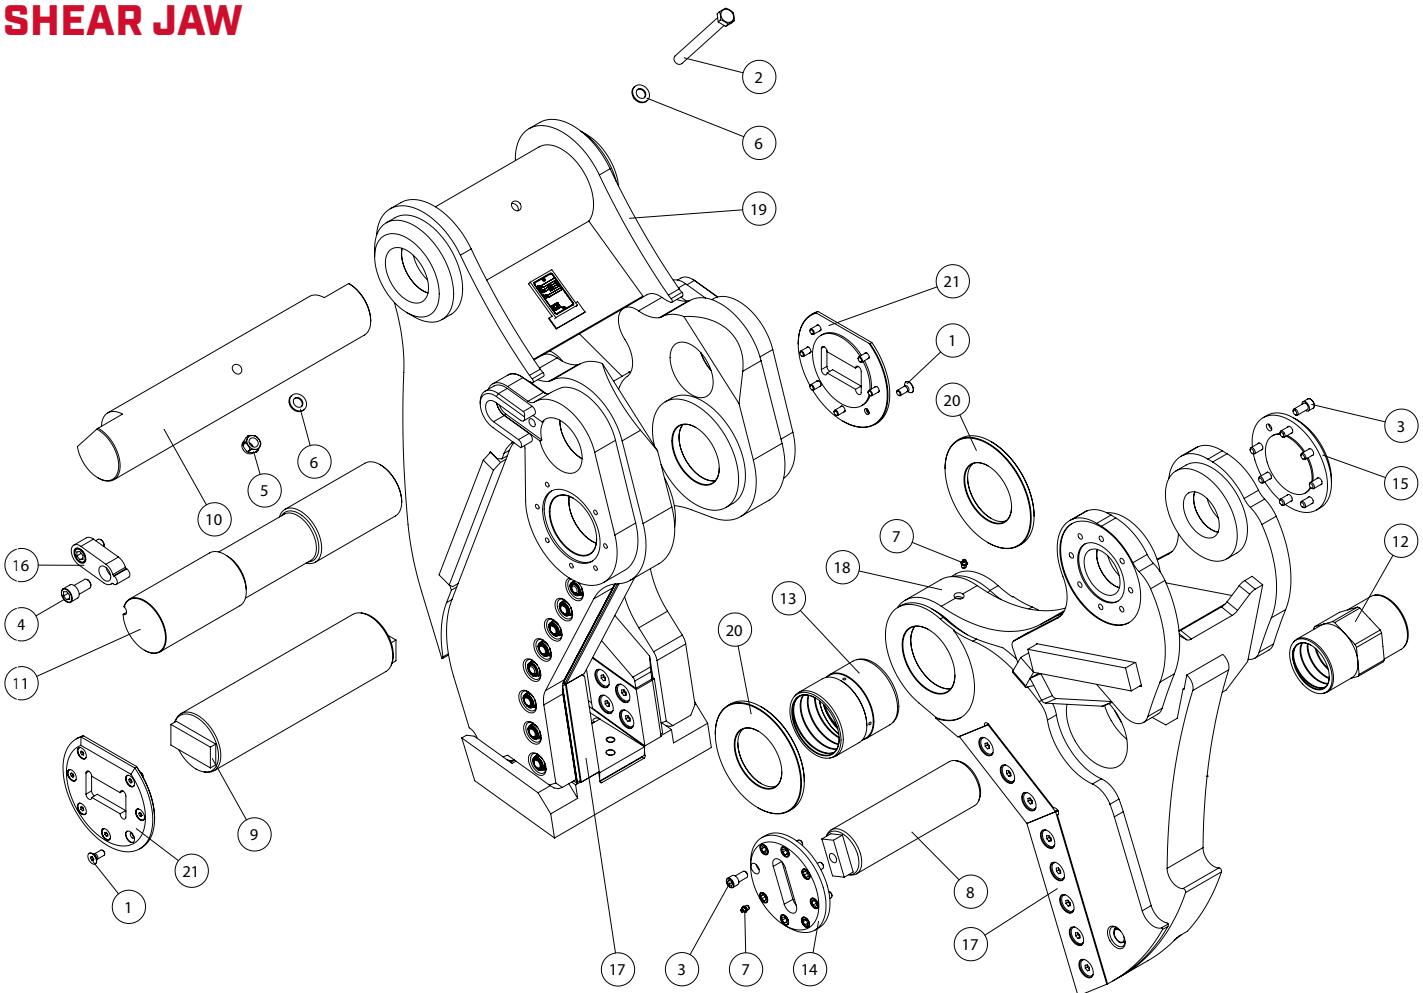

MRX350 Shear Jaw Parts Illustration


Item	Qty	Description	Part Number
1	14	SOCKET HEAD CAPSCREW	518416
2	1	HEX HEAD CAPSCREW	518432
3	16	HEX NUT W/NYLOCK	518198
4	4	HEX HEAD CAPSCREW	518433
5	1	HEX NUT W/NYLOCK	518435
6	2	FLAT WASHER	518436
7	2	GREASE ZERK	518203
8	1	PIN MACHINING	518593
9	1	PIN MACHINING	518603
10	1	PIN MACHINING	518604
11	1	PIN MACHINING	518605
12	1	BEARING MACHINING	518597
13	1	BEARING MACHINING	518606
14	1	PIN RETAINER	518216
15	1	PIN RETAINER	518219

MRX350 Shear Jaw Parts Illustration

Item	Qty	Description	Part Number
16	2	PIN RETAINER	518426
17	1	BLADE KIT	518176
18	1	UPPER WELDMENT MACHINING	518607
19	1	LOWER WELDMENT MACHINING	518608
20	2	SPACER SHIM	518609
21	2	SPACER SHIM	518611

MRX500

BODY

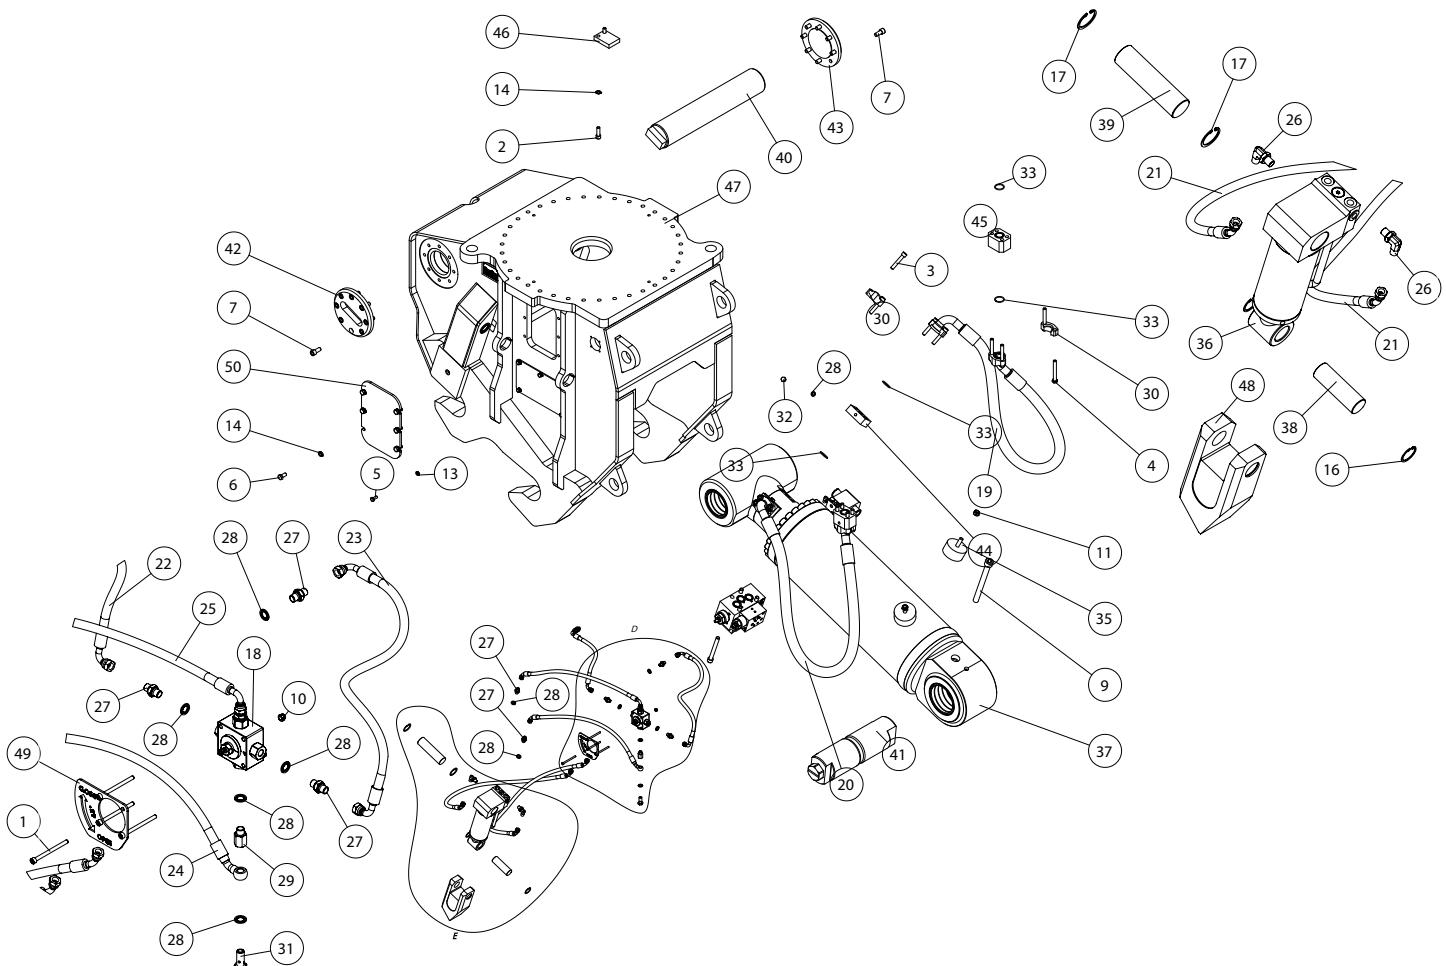


MRX500 Body Parts Illustration

Item	Qty	Description	Part Number
1	4	SOCKET HEAD CAPSCREW	518407
2	2	SOCKET HEAD CAPSCREW	518278
3	8	SOCKET HEAD CAPSCREW	519727
4	8	HEX HEAD CAPSCREW	518282
5	12	HEX HEAD CAPSCREW	518192
6	12	HEX HEAD CAPSCREW	518195
7	16	SOCKET HEAD CAPSCREW	518242
8	4	SOCKET HEAD CAPSCREW	519756
9	1	SOCKET HEAD CAPSCREW	519716
10	4	HEX NUT W/NYLOCK	518350
11	4	HEX NUT W/NYLOCK	519757
12	4	FLAT WASHER	518352
13	12	FLAT WASHER	518353
14	14	FLAT WASHER	518355

MRX500 Body Parts Illustration			
Item	Qty	Description	Part Number
15	2	GREASE ZERK	518203
16	4	C CLIP	518388
17	4	C CLIP	518389
18	1	VALVE SWITCH	518360
19	1	HOSE ASSEMBLY	519717
20	1	HOSE ASSEMBLY	519718
21	2	HYDRAULIC HOSE	519758
22	1	HYDRAULIC HOSE	519760
23	1	HYDRAULIC HOSE	519761
24	1	HYDRAULIC HOSE	519762
25	1	HYDRAULIC HOSE	519763
26	4	HOSE ADAPTOR	518367
27	7	HOSE ADAPTOR	518368
28	13	FLAT WASHER	518308
29	1	EXTENSION ADAPTOR	518369
30	8	SPLIT FLANGE HALF	518309
31	1	HYDRAULIC ADAPTOR PLUG	518370
32	4	HYDRAULIC ADAPTOR PLUG	518310
33	8	O RING SEAL	518311
34	1	REGEN VALVE	519559
35	4	DAMPENER	519764
36	2	CYLINDER ASSEMBLY	518399
37	1	CYLINDER ASSEMBLY	519431
38	2	PIN MACHINING	519765
39	2	PIN MACHINING	519766
40	1	PIN MACHINING	519767
41	1	PIN MACHINING	519769
42	1	PIN RETAINER	518252
43	1	PIN RETAINER	518253
44	2	MANIFOLD MACHINING	519722
45	2	MANIFOLD MACHINING	519770
46	1	PLATE MACHINING	519724
47	1	MRX 500 STICK	519771
48	2	CUTTING EDGE	519772
49	1	OPEN CLOSE PLATE	518386
50	2	COVER PLATE	518226

ROTATION

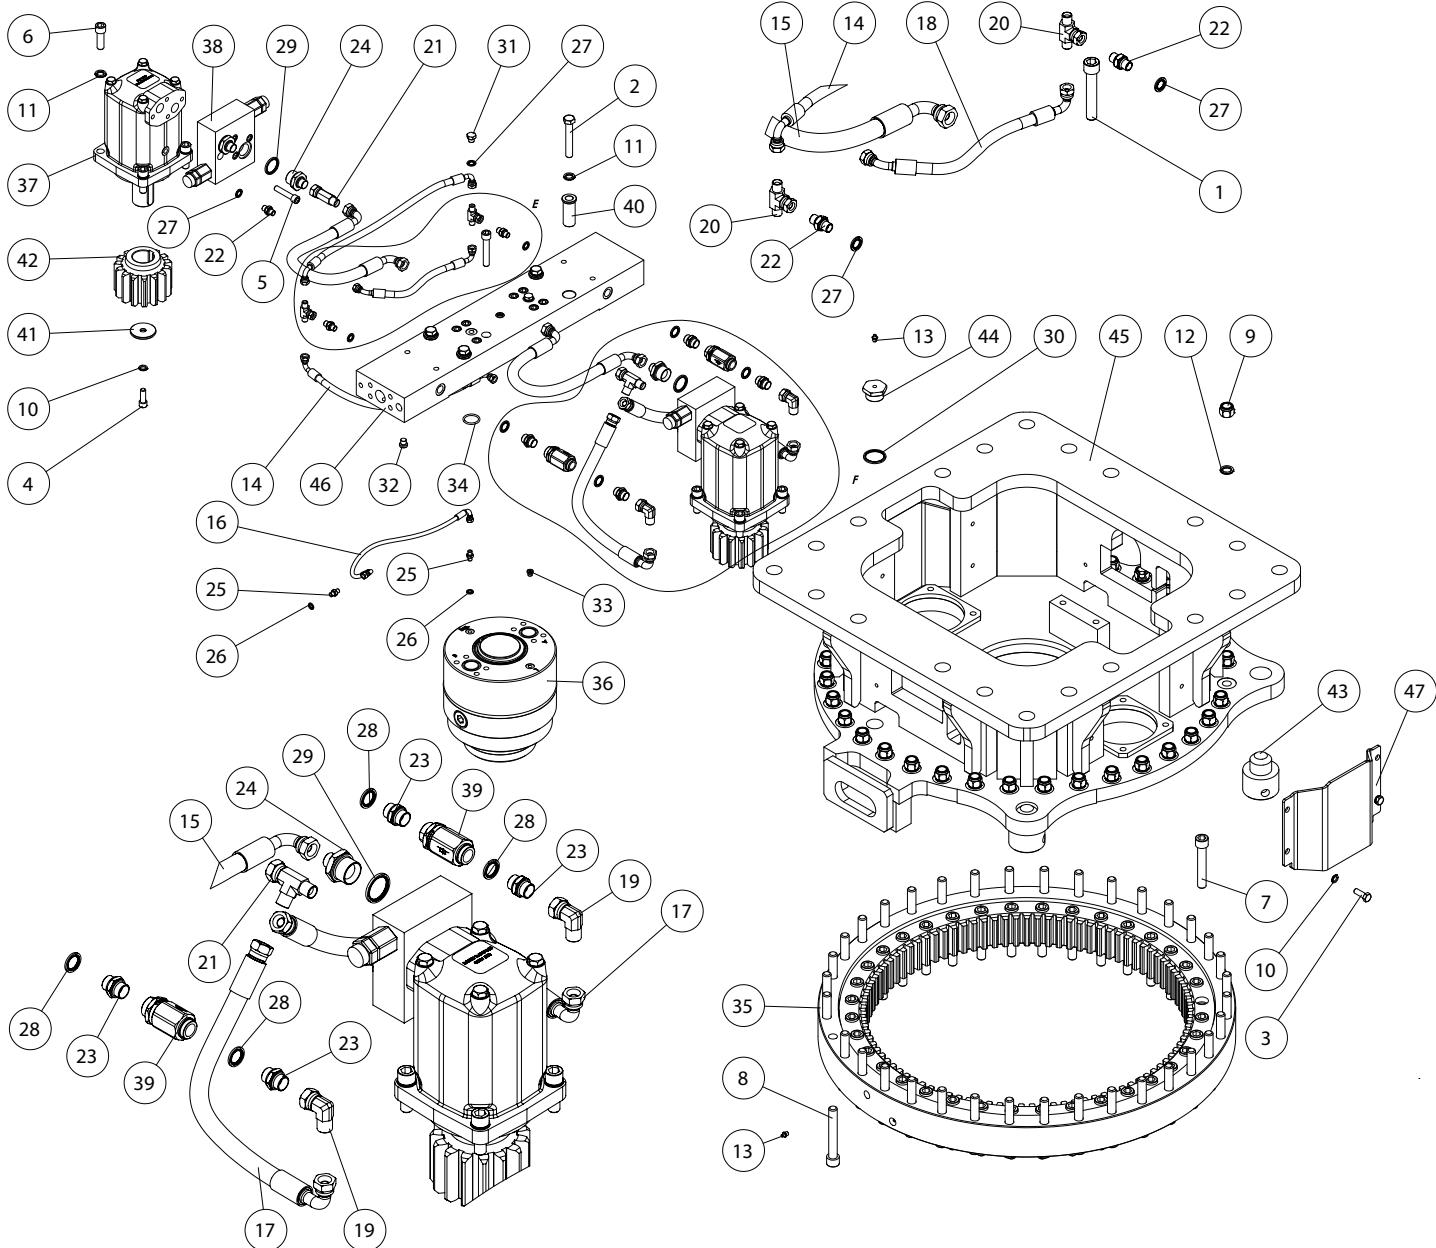


MRX500 Rotation Parts Illustration

Item	Qty	Description	Part Number
1	8	SOCKET HEAD CAPSCREW	519727
2	4	HEX HEAD CAPSCREW	519728
3	8	HEX HEAD CAPSCREW	519729
4	2	SOCKET HEAD CAPSCREW	518708
5	4	SOCKET HEAD CAPSCREW	518956
6	8	SOCKET HEAD CAPSCREW	518957
7	36	SOCKET HEAD CAPSCREW	518959

MRX500 Rotation Parts Illustration			
Item	Qty	Description	Part Number
8	36	SOCKET HEAD CAPSCREW	519558
9	36	HEX NUT W/NYLOCK	518200
10	10	FLAT WASHER	518354
11	12	FLAT WASHER	518714
12	36	FLAT WASHER	518961
13	6	GREASE ZERK	518203
14	2	HYDRAULIC HOSE	519730
15	2	HYDRAULIC HOSE	519731
16	1	HYDRAULIC HOSE	519733
17	2	HYDRAULIC HOSE	519734
18	1	HYDRAULIC HOSE	519735
19	2	HYDRAULIC ADAPTOR	519736
20	2	HYDRAULIC ADAPTOR	519737
21	2	HYDRAULIC ADAPTOR	519738
22	4	HOSE ADAPTOR	518368
23	4	HYDRAULIC ADAPTOR	518973
24	4	HOSE ADAPTOR	518974
25	2	HYDRAULIC ADAPTOR	519739
26	2	FLAT WASHER	519740
27	6	FLAT WASHER	518308
28	4	FLAT WASHER	518720
29	4	FLAT WASHER	518975
30	2	FLAT WASHER	518976
31	2	HYDRAULIC ADAPTOR PLUG	518310
32	4	HYDRAULIC ADAPTOR PLUG	518397
33	2	HYDRAULIC ADAPTOR PLUG	518371
34	2	O RING SEAL	518205
35	1	TURNTABLE BEARING	519557
36	1	SWIVEL JOINT	519560
37	2	HYDRAULIC MOTOR	519553
38	2	DAMPENER	518989
39	2	RELIEF VALVE	518980
40	4	BEARING MACHINING	519742
41	2	FLAT WASHER	519743
42	2	PINNION GEAR	519555
43	2	ROTATION PIN RETAINER	518984
44	2	HYDRAULIC ADAPTOR PLUG	518985
45	1	UPPERHEAD WELDMENT MACHINING	519744
46	1	MANIFOLD MACHINING	519745
47	2	FORMED COVER PLATE	519746


CRACKER JAW

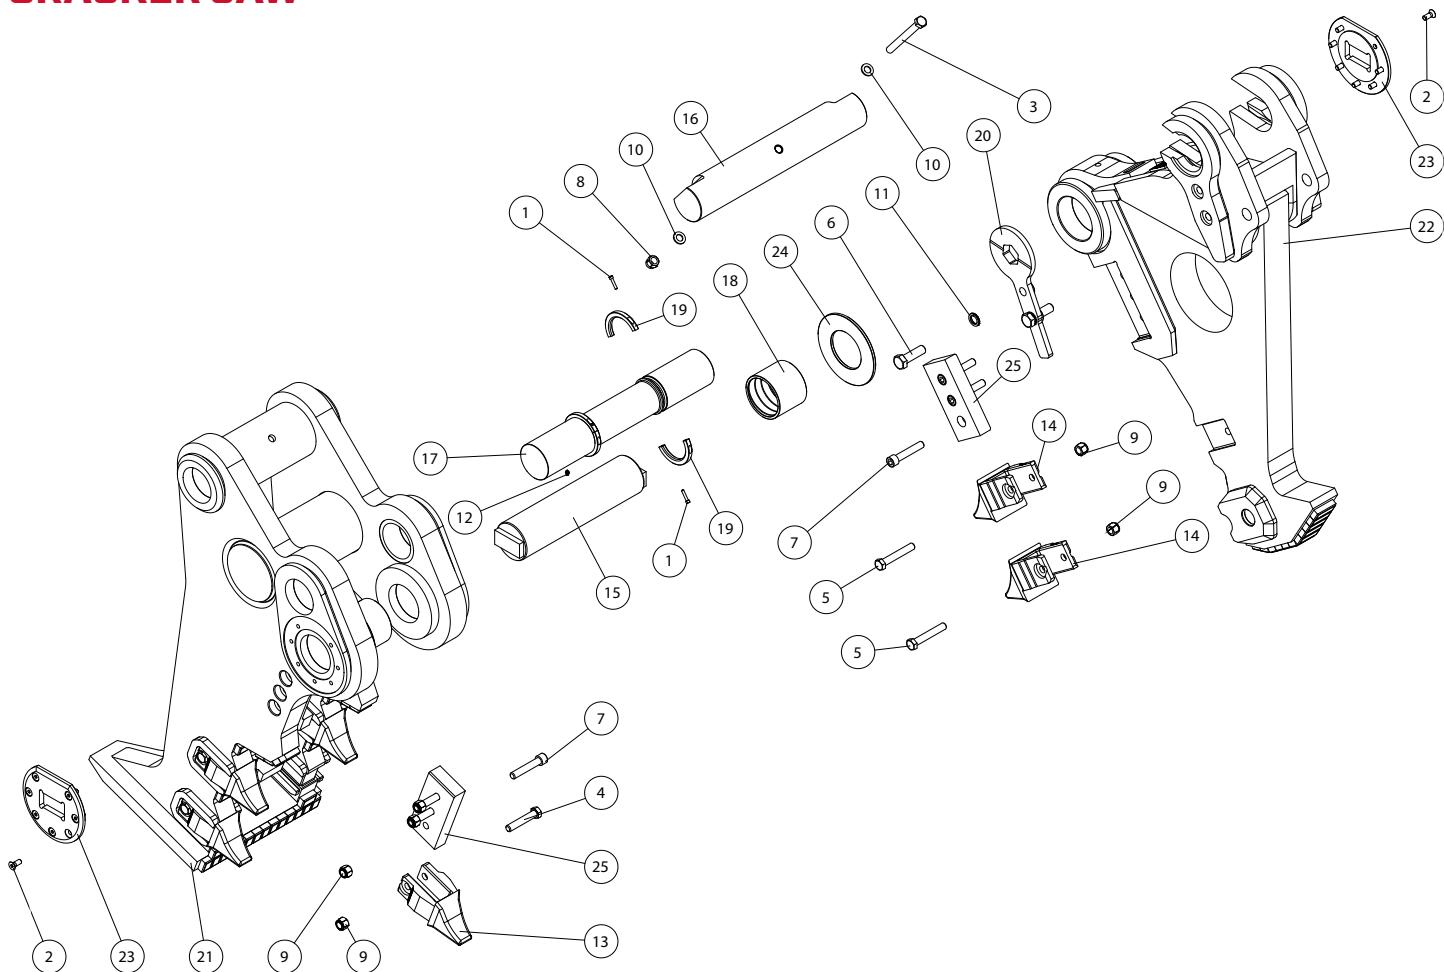

MRX500 Cracker Jaw Parts Illustration			
Item	Qty	Description	Part Number
1	4	SOCKET HEAD CAPSCREW	519773
2	14	SOCKET HEAD CAPSCREW	519774
3	1	HEX HEAD CAPSCREW	519775
4	4	HEX HEAD CAPSCREW	518160
5	2	HEX HEAD CAPSCREW	519451
6	2	HEX HEAD CAPSCREW	519776
7	6	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85
8	1	HEX NUT W/NYLOCK	519779
9	12	HEX NUT W/NYLOCK	519451
10	2	FLAT WASHER	519780
11	2	FLAT WASHER	519781
12	1	GREASE ZERK	518203
13	4	CUTTING EDGE	518160
14	2	ATLAS CUTTING EDGE 020	519451
15	1	PIN MACHINING	519782
16	1	PIN MACHINING	519783

MRX500 Cracker Jaw Parts Illustration			
Item	Qty	Description	Part Number
17	1	PIN MACHINING	519784
18	2	BUSHING MACHINING	519785
19	4	COLLAR MACHINING	519787
20	1	KEY MACHINING	519788
21	1	MRX 500 LOWER CC	519789
22	1	MRX 500 UPPER CC	519790
23	2	SPACER SHIM	519791
24	2	SPACER SHIM	519792
25	2	BLADE MACHINING	See "MRX Blade Kits" on page 85


PULVERIZER JAW

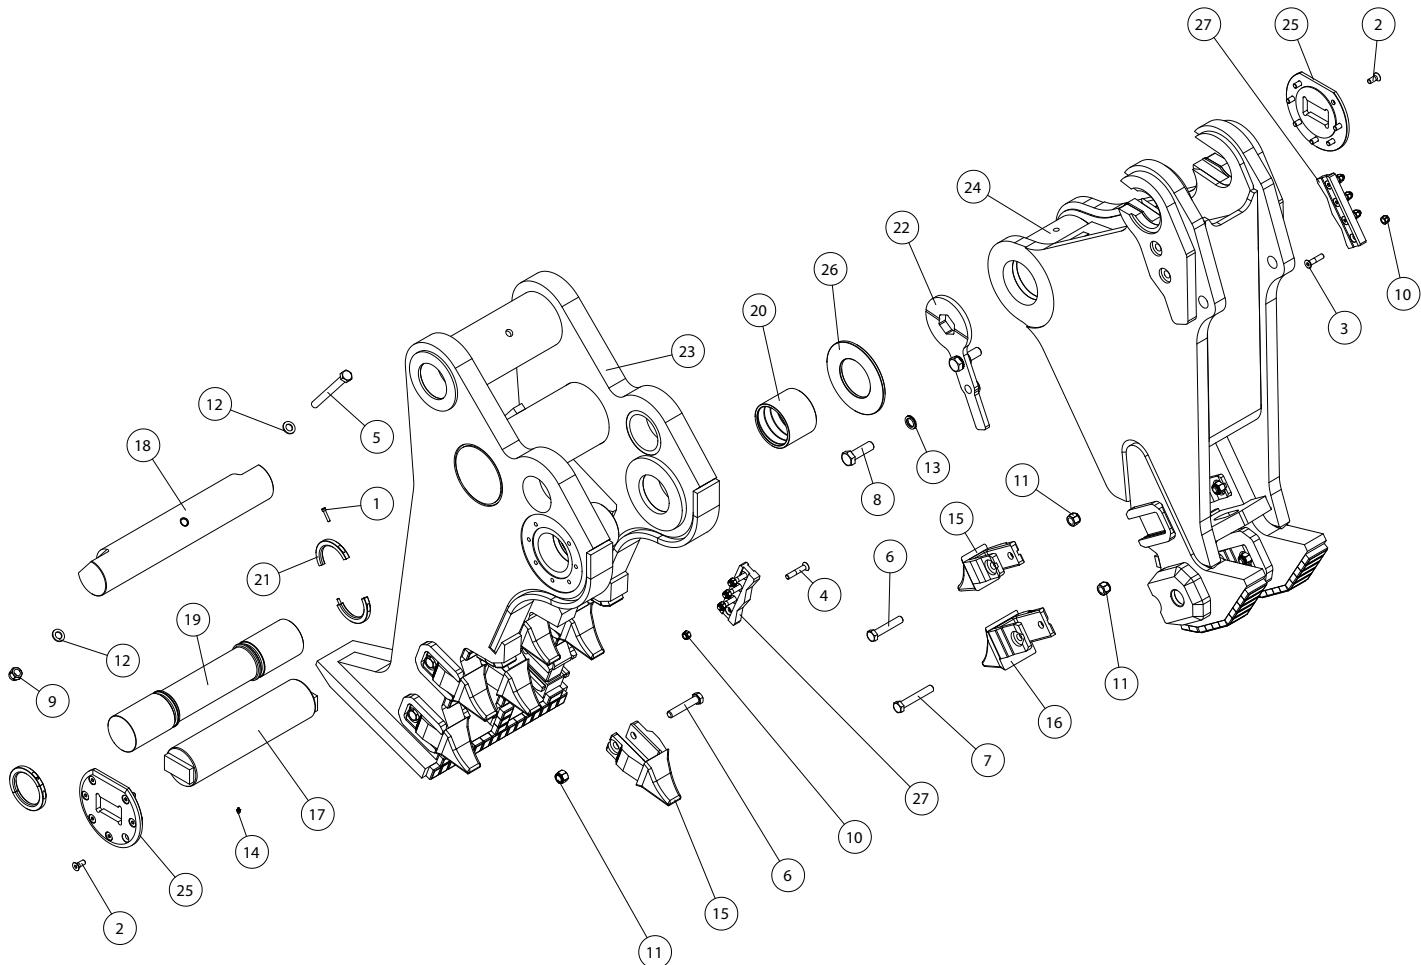

MRX500 Pulverizer Jaw Parts Illustration				
Item	Qty	Description	Part Number	
1	4	SOCKET HEAD CAPSCREW	519773	
2	14	SOCKET HEAD CAPSCREW	519774	
3	4	HEX HEAD CAPSCREW	See "MRX Blade Kits" on page 85	
4	4	SOCKET HEAD CAPSCREW	See "MRX Blade Kits" on page 85	
5	1	HEX HEAD CAPSCREW	519775	
6	8	HEX HEAD CAPSCREW	518160	
7	2	HEX HEAD CAPSCREW	519451	
8	2	HEX HEAD CAPSCREW	519776	
9	1	HEX NUT W/NYLOCK	519779	

MRX500 Pulverizer Jaw Parts Illustration			
Item	Qty	Description	Part Number
10	8	HEX NUT W/NYLOCK	See "MRX Blade Kits" on page 85
11	10	HEX NUT W/NYLOCK	519451
12	2	FLAT WASHER	519780
13	2	FLAT WASHER	519781
14	1	GREASE ZERK	518203
15	8	CUTTING EDGE	518160
16	2	ATLAS CUTTING EDGE 020	519451
17	1	PIN MACHINING	519782
18	1	PIN MACHINING	519783
19	1	PIN MACHINING	519784
20	2	BUSHING MACHINING	519785
21	4	COLLAR MACHINING	519787
22	1	KEY MACHINING	519788
23	1	MRX 500 LOWER CP	519794
24	1	MRX 500 UPPER CP	519796
25	2	SPACER SHIM	519791
26	2	SPACER SHIM	519792
27	2	PIN RETAINER	See "MRX Blade Kits" on page 85

SHEAR JAW

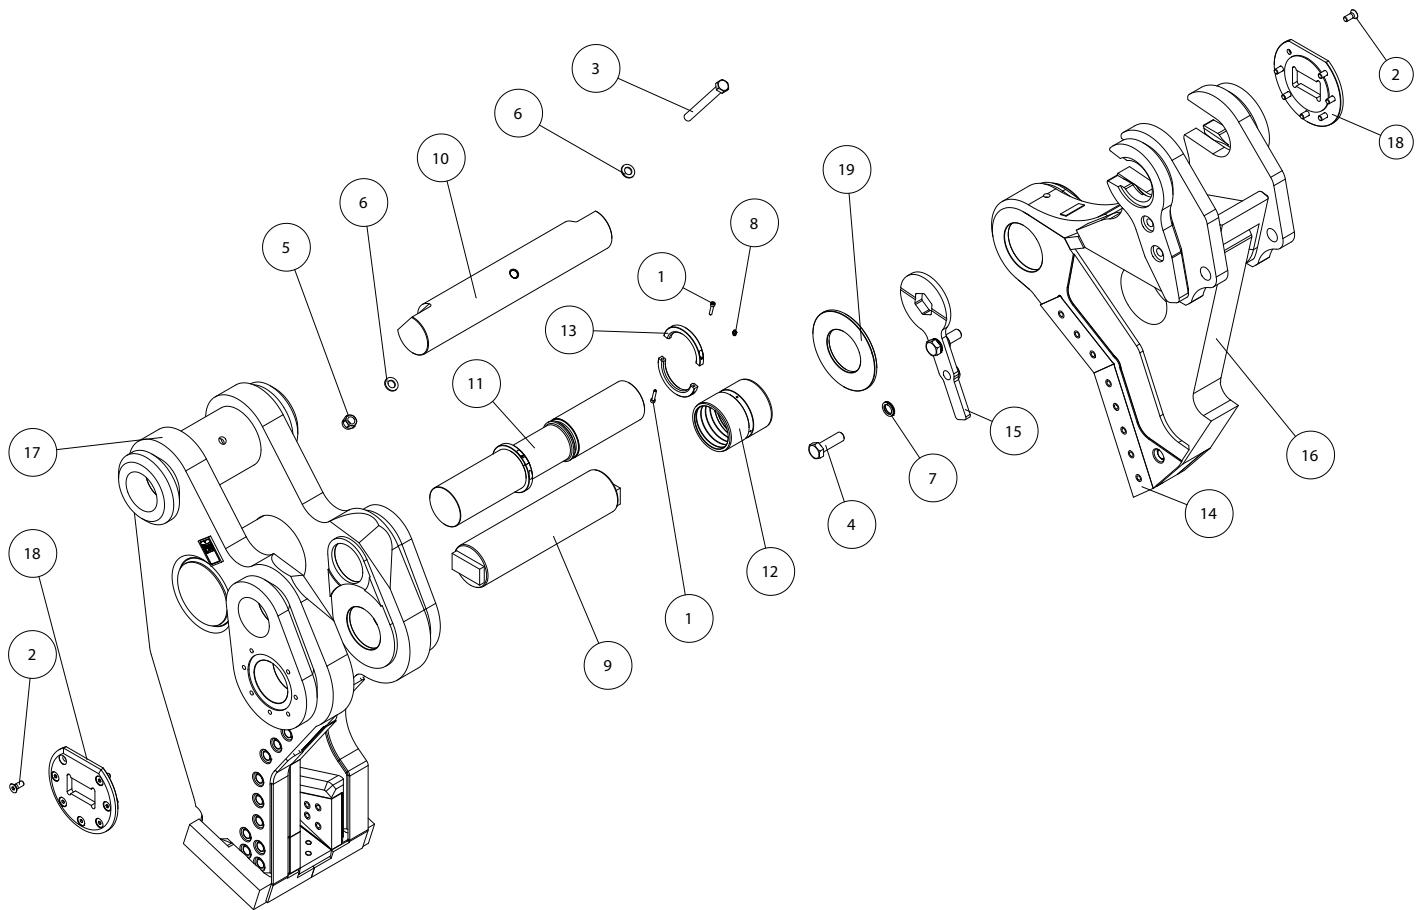

MRX500 Shear Jaw Parts Illustration


Item	Qty	Description	Part Number
1	4	SOCKET HEAD CAPSCREW	519773
2	14	SOCKET HEAD CAPSCREW	519774
3	1	HEX HEAD CAPSCREW	519775
4	2	HEX HEAD CAPSCREW	519776
5	1	HEX NUT W/NYLOCK	519779
6	2	FLAT WASHER	519780
7	2	FLAT WASHER	519781
8	1	GREASE ZERK	518203
9	1	PIN MACHINING	519782
10	1	PIN MACHINING	519783
11	1	PIN MACHINING	519797
12	1	BUSHING MACHINING	519798

MRX500 Shear Jaw Parts Illustration


Item	Qty	Description	Part Number
13	4	COLLAR MACHINING	519787
14	1	BLADE KIT	519389
15	1	KEY MACHINING	519788
16	1	MRX 500 UPPER SH	519799
17	1	MRX 500 LOWER SH	519800
18	2	SPACER SHIM	519791
19	2	SPACER SHIM	519792

HYDRAULIC SCHEMATIC

ROTATION HYDRAULIC DIAGRAM

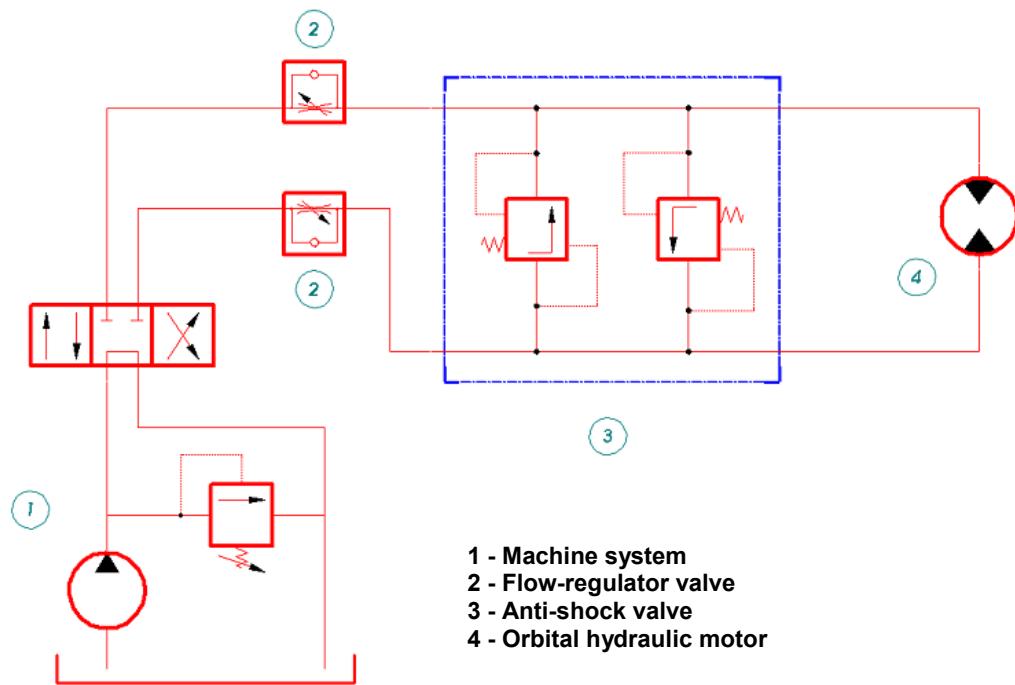

HYDRAULIC POWER DIAGRAM

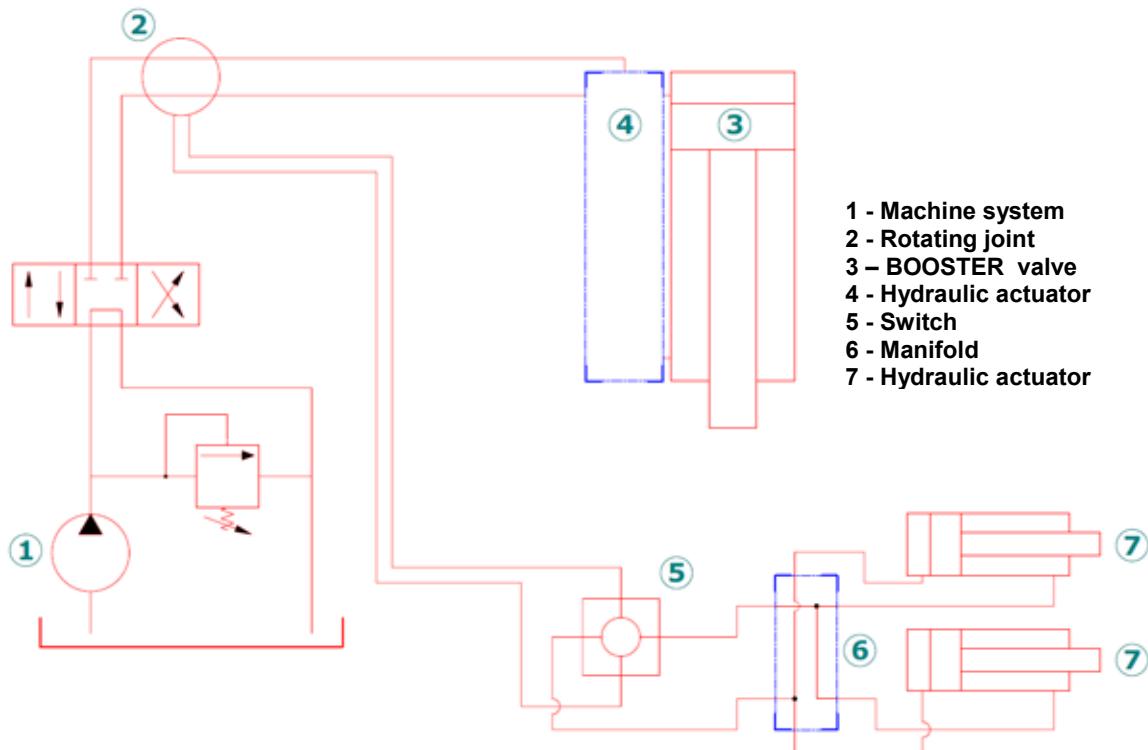

WEAR PART KITS

BLADE KITS

MRX Blade Kits			
Model	Jaw Set	Description	Part Number
MRX70	Shear	Full blade kit includes all blades, bolts [etc] needed for a blade change.	519370
	Concrete Pulverizer		519225
	Concrete Cracking		519368
MRX100	Shear	Full blade kit includes all blades, bolts [etc] needed for a blade change.	519377
	Concrete Pulverizer		519225
	Concrete Cracking		519372
MRX130	Shear	Full blade kit includes all blades, bolts [etc] needed for a blade change.	519282
	Concrete Pulverizer		519319
	Concrete Cracking		519328
MRX150	Shear	Full blade kit includes all blades, bolts [etc] needed for a blade change.	519383
	Concrete Pulverizer		519378
	Concrete Cracking		519381
MRX200	Shear	Full blade kit includes all blades, bolts [etc] needed for a blade change.	518174
	Concrete Pulverizer		518782
	Concrete Cracking		518173
MRX250	Shear	Full blade kit includes all blades, bolts [etc] needed for a blade change.	518175
	Concrete Pulverizer		518782
	Concrete Cracking		518783
MRX350	Shear	Full blade kit includes all blades, bolts [etc] needed for a blade change.	518176
	Concrete Pulverizer		518782
	Concrete Cracking		518784
MRX500	Shear	Full blade kit includes all blades, bolts [etc] needed for a blade change.	519389
	Concrete Pulverizer		519354
	Concrete Cracking		519386

WEAR KITS

MRX Wear Kits			
Model	Jaw Set	Description	Part Number
MRX70	Shear	Full wear kit includes all teeth, bolts [etc] needed to replace the wear items.	-
	Concrete Pulverizer		519528
	Concrete Cracking		519531
MRX100	Shear	Full wear kit includes all teeth, bolts [etc] needed to replace the wear items.	-
	Concrete Pulverizer		519604
	Concrete Cracking		519606
MRX130	Shear	Full wear kit includes all teeth, bolts [etc] needed to replace the wear items.	-
	Concrete Pulverizer		519318
	Concrete Cracking		519327
MRX150	Shear	Full wear kit includes all teeth, bolts [etc] needed to replace the wear items.	-
	Concrete Pulverizer		519688
	Concrete Cracking		519690
MRX200	Shear	Full wear kit includes all teeth, bolts [etc] needed to replace the wear items.	-
	Concrete Pulverizer		518165
	Concrete Cracking		518168
MRX250	Shear	Full wear kit includes all teeth, bolts [etc] needed to replace the wear items.	-
	Concrete Pulverizer		518166
	Concrete Cracking		518180
MRX350	Shear	Full wear kit includes all teeth, bolts [etc] needed to replace the wear items.	-
	Concrete Pulverizer		518167
	Concrete Cracking		518181
MRX500	Shear	Full wear kit includes all teeth, bolts [etc] needed to replace the wear items.	-
	Concrete Pulverizer		519821
	Concrete Cracking		519824

LABOUNTY®

Additional copies of this manual are available by contacting your dealer or the LaBounty parts department, and requesting a CE Operation & Maintenance manual. You must include the attachment model number and serial number.